

OPERATOR'S MANUAL

SSB RADIOTELEPHONE

FS-1570 (150 W)

MODEL FS-2570 (250 W)





© FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho, Nishinomiya, 662-8580, JAPAN

Telephone : +81-(0)798-65-2111Fax : +81-(0)798-65-4200

All rights reserved. Printed in Japan

Pub. No. 0ME-56360-F

(DAMI) FS-1570/2570

• FURUNO Authorized Distributor/Dealer

A : OCT. 2002

F: MAY 25, 2007

* 0 0 0 8 0 9 3 3 8 1 3 *


Important Notices

- This manual is intended for readers with a solid knowledge of English.
- No part of this manual may be copied or reproduced without written permission.
- If this manual is lost or worn, contact your dealer about replacement.
- The contents of this manual and equipment specifications are subject to change without notice.
- The example screens (or illustrations) shown in this manual may not match the screens you see on your display. The screen you see depends on your system configuration and equipment settings.
- FURUNO will assume no responsibility for the damage caused by improper use or modification of the equipment (including software) by an unauthorized agent or a third party.
- Store this manual in a convenient place for future reference.
- When it is time to discard this product it must be done according to local regulations for disposal of industrial waste. For disposal in the USA, refer to the Electronics Industries Alliance (http://www.eiae.org/).

SAFETY INSTRUCTIONS

Never touch the SSB antenna, antenna coupler or lead-in insulator when the SSB radiotelephone is transmitting.

High voltage which will cause death or serious injury is present at the locations shown in the illustration below when the SSB radiotelephone is transmitting.

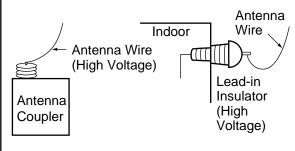

⚠ WARNING



ELECTRICAL SHOCK HAZARD Do not open the equipment.

Only qualified personnel should work inside the equipment.

Immediately turn off the power at the switchboard if water leaks into the equipment or something is dropped in the equipment.

Continued use of the equipment can cause fire or electrical shock. Contact a FURUNO agent for service.

Do not disassemble or modify the equipment.

Fire, electrical shock or serious injury can result.

Immediately turn off the power at the switchboard if the equipment is emitting smoke or fire.

Continued use of the equipment can cause fire or electrical shock. Contact a FURUNO agent for service.

Do not operate the equipment with wet hands.

Electrical shock can result.

⚠ CAUTION

Use the proper fuse.

Use of the wrong fuse can cause serious damage to the equipment and void the warranty.

A CAUTION

Do not operate the [DISTRESS] button except in case of a life-endangering situation on your vessel.

If the distress alert is accidentally transmitted, contact the nearest coast station and inform them of the accidental transmission as follows:

- a) Ship's name
- b) Ship's call sign and DSC number
- c) Position at time of transmission
- d) Time of transmission

This equipment is intended for maritime use. Do not use it in other applications.

WARNING LABEL

A warning label is attached to the transceiver unit and a danger label is attached to the antenna coupler. Do not remove the labels. If a label is missing or illegible, contact a FURUNO agent or dealer about replacement.

To avoid electrical shock, do not remove cover. No user-serviceable parts inside.

Name: Warning Label (1) Type: 86-003-1011-2 Code No.: 100-236-232-10

TRANSCEIVER UNIT



Hazardous voltage. Can shock, burn, or cause death.

or cause death.

Do not touch antenna wire, insulator and terminal.


Name: Danger Label Type: 05-062-0213-0 Code No.: 100-199-230-10

ANTENNA COUPLER


Distress Alert Calling Procedure

Below is the procedure for transmitting a distress alert via radiotelephone. Transmit the distress alert when a life-endangering situation occurs on your vessel.

1. Open the DISTRESS button cover and press the [DISTRESS] button more than three seconds to show the following display, then release the [DISTRESS] button.

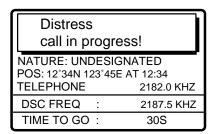

2. After the distress call has been transmitted, the following displays appear in order.

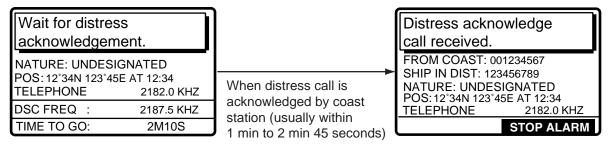

- 3. The audio alarm sounds; press the [CANCEL] key to silence the alarm.
- 4. Communicate with the coast station via radiotelephone as below. (In the dual control unit system, communication can be done from any control unit, after the distress alert has been transmitted. To restore priority to the #1 control unit after completion of distress communications, turn it off and on again.)
 - a) Say MAYDAY three times.
 - b) Say "This is ..." name of your vessel and your call sign three times.
 - c) Give nature of distress and assistance needed.
 - d) Give description of your vessel (type, number of persons onboard, etc.) and any other information which may aid in rescue.

TABLE OF CONTENTS

	OREWORDYSTEM CONFIGURATION	
S	PECIFICATIONS	SP-1
1	OPERATIONAL OVERVIEW	1-1
	1.1 Controls	1-1
	1.2 Turning the Power On/Off	1-2
	1.3 Panel Dimmer, LCD Contrast	1-2
	1.4 Indications	1-3
	1.4.1 DSC standby screen	1-3
	1.4.2 Radiotelephone screen	1-3
	1.5 Loudspeaker	1-4
	1.6 Scanning Routine DSC Frequencies	1-4
	1.7 Automatic Acknowledge On/Off	1-5
	1.8 Manual Entry of Position and Time	
	1.9 System Characteristics	1-7
	1.9.1 Equipment priority	1-7
	1.9.2 Controls become inoperative	1-7
	1.9.3 Controls become operative	
	1.9.4 Automatic setting of working frequency	
	1.10 Power Supply Unit (option)	1-8
2	SSB RADIOTELEPHONE	2-1
	2.1 Transmitting	2-1
	2.1.1 Choosing class of emission	2-1
	2.1.2 Choosing channel, frequency	2-2
	2.1.3 Tuning	2-3
	2.1.4 Using the handset	2-4
	2.1.5 Monitoring transceiver output power	2-4
	2.1.6 Reducing transmitter power	
	2.1.7 Displaying IA, IC, VC or RF	2-5
	2.2 Receiving	
	2.2.1 RF gain (sensitivity) adjustment	
	2.2.2 S-meter	
	2.2.3 Monitoring traffic on intended transmit frequency	2-6
	2.2.4 Receiving AM broadcasting stations	
	2.2.5 Squelch control, squelch frequency	
	2.2.6 Noise blanker	
	2.3 Intercom	
	2.4 Telex Communications	
	2.5 When Automatic Tuning Fails	2-9

	2.6 User Channels	2-10
	2.6.1 Registering user channels	2-10
	2.6.2 Deleting user channels	.2-12
	2.7 FAX Enable/Disable	2-12
	2.8 Speaker Setting in Off Hook	2-13
3	DSC OVERVIEW	3-1
	3.1 What is DSC?	3-1
	3.2 DSC Call	3-1
	3.2.1 Distress alert call and reply	3-3
	3.2.2 Individual call	3-4
	3.3 Audio Alarms	3-4
	3.4 Interpreting Call Displays	3-5
	3.4.1 Receive calls	3-5
	3.4.2 Send calls	3-7
4	DISTRESS OPERATIONS	4-1
	4.1 Sending Distress Alert	4-1
	4.1.1 Sending distress alert by DISTRESS button, nature of distress not specified.	4-1
	4.1.2 Sending distress alert by DISTRESS button, nature of distress specified	4-3
	4.2 Receiving a Distress Alert	4-6
	4.2.1 Distress alert received on MF band	4-7
	4.2.2 Distress alert received on HF band	
	4.3 Sending Distress Relay on Behalf of a Ship in Distress	.4-13
	4.3.1 Sending distress relay to coast station	
	4.3.2 Sending distress relay to all ships	.4-16
	4.4 Receiving Distress Relay All Ships	
	4.5 Receiving Distress Relay from Coast Station	.4-19
5	CALLING, RECEIVING	5-1
	5.1 All Ships Call	5-1
	5.1.1 Sending an all ships call	5-1
	5.1.2 Receiving an all ships call	5-3
	5.2 Individual Call	
	5.2.1 Sending an individual call	
	5.2.2 Receiving an individual call	
	5.3 Group Call	
	5.3.1 Sending a group call	
	5.3.2 Receiving a group call	
	5.4 Geographical Area Call	
	5.4.1 Sending a geographical area call	
	5.4.2 Receiving a geographical area call	
	5.5 Neutral Craft Call	
	5.5.1 Sending a neutral craft call	
	5.5.2 Receiving a neutral craft call	
	5.6 Medical Transport Call	
	5.6.1 Sending a medical transport call	
	5.6.2 Receiving a medical transport call	5-27

	5.7 Polling Call	5-28
	5.7.1 Sending a polling call	5-28
	5.7.2 Receiving a polling call	5-31
	5.8 Position Call	5-33
	5.8.1 Position call: requesting other ship's position	5-34
	5.8.2 Position call: other ship requests your position	5-36
	5.9 PSTN Call	
	5.9.1 Sending a PSTN call, receiving acknowledge back (ACK BQ)	5-38
	5.9.2 Receiving a PSTN call, sending acknowledge back (ACK BQ)	5-42
	5.9.3 PSTN call disconnection, receiving charge information	
	(ship disconnects line)	5-43
	5.9.4 PSTN call disconnection, receiving charge information (coast station	
	disconnects line)	5-44
	5.10 Log File	5-45
	5.10.1 Opening a log file	5-45
	5.11 Erasing Message Files	
6	PREPARING TX CALLS	
	6.1 Preparing Individual Calls	6-1
	6.2 Preparing Group Calls	6-4
	6.3 Preparing Geographical Area Calls	6-5
	6.4 Preparing PSTN Calls	6-7
	6.5 Preparing Test Calls	6-8
	6.6 Sending Prepared Calls	6-9
	6.7 Deleting Send Message Files	
	6.8 Printing List of Send Message Files	6-10
7	DSC/WATCH RECEIVER SETUP	7-1
•	7.1 Setting Alarms	
	7.2 Auto Ack Menu	
	7.3 Printing Messages	
	7.4 Setting Scan Frequencies	
	7.4.1 Distress frequencies	
	7.4.2 Routine frequencies	
	7.5 Automatic Frequency Change	
	7.6 Adjusting Volume	
8	NBDP SYSTEM OVERVIEW	
	8.1 Turning on the NBDP System	
	8.2 Description of Equipment	
	8.2.1 Terminal unit	
	8.2.2 Keyboard	
	8.3 Function Keys, Menu Operation	
	8.3.1 Menu conventions	
	8.3.2 Menu overview	
	8.3.3 Function key description	8-6

9.1 Registering Answerback Code & ID Codes 9.1.1 Registering answerback code. 9.1.2 Registering ID codes 9.2 Station List. 9.2.1 Registering stations 9.2.2 Editing/Deleting stations 9.3.1 Timer Programming 9.3.1 Registering timer programs 9.3.2 Editing/Deleting timer programs 9.3.2 Editing/Deleting timer programs 9.3.2 Editing/Deleting user channels 9.4.1 Registering user channels 9.4.2 Editing/Deleting user channels 9.5.5 Scan Channel Groups 9.5.5 Registering scan channel groups 9.5.1 Registering scan channel groups 9.5.2 Editing/Deleting scan channel groups 9.5.2 Editing/Deleting scan channel groups 9.5.3 Registering as an channel groups 9.5.4 Registering as an channel groups 9.5.5 Registering for an experiment of the state of the sta	9	NBDP PREPARATIONS	9-1
9.1.2 Registering ID codes		9.1 Registering Answerback Code & ID Codes	9-1
9.2 Station List 9.2.1 Registering stations 9.2.2 Editing/Deleting stations 9.2.2 Editing/Deleting stations 9.3.3 Timer Programming 9.3.1 Registering timer programs 9.3.2 Editing/Deleting timer programs 9.3.2 Editing/Deleting timer programs 9.4 User Channels 9.4.1 Registering user channels 9.4.2 Editing/Deleting user channels 9.4.2 Editing/Deleting user channels 9.5 Scan Channel Groups 9.5.1 Registering scan channel groups 9.5.2 Editing/Deleting scan channel groups 9.5.2 Editing/Deleting scan channel groups 9.5.2 Editing/Deleting scan channel groups 9.5.3 Editing/Deleting scan channel groups 9.5.4 Registering scan channel groups 9.5.5 Editing/Deleting scan channel groups 9.5.6 Editing/Deleting scan channel groups 9.5.6 Editing/Deleting scan channel groups 9.5.7 Editing/Deleting scan channel groups 9.5.8 Editing/Deleting scan channel groups 9.5.8 Editing/Deleting scan channel groups 9.5.9 Editing/Deleting scan channel groups 9.5.1 Editing/Deleting scan channel groups 9.5.2 Editing/Deleting scan channel groups 9.5.5 Editing/Deleting scan channel groups 9.5.6 Editing/Deleting/Deleting scan channel groups 9.5.6 Editing/Deleting scan channel groups 9.5.6 Editing/Deleting scan channel groups 9.5.7 Editing/Deleting scan channels 9.5 Editin		9.1.1 Registering answerback code	9-1
9.2.1 Registering stations 9.2.2 Editing/Deleting stations 9.3.1 Timer Programming 9.3.1 Registering timer programs 9.3.2 Editing/Deleting timer programs 9.4.0 User Channels 9.4.1 Registering user channels 9.4.2 Editing/Deleting user channels 9.4.2 Editing/Deleting user channels 9.5.5 Scan Channel Groups 9.5.1 Registering scan channel groups. 9.5.2 Editing/Deleting gries. 10.3 Saving a File. 11.3 Editing/Deleting files. 11.4 Editing/Deleting gries. 11.5 Editing/Deleting gries. 11.6 Editing/Deleting gries. 11.7 Editing/Deleting gries. 11.8 Editing/Deleting gries. 11.9 Real Time Printing. 11.1 Manual Calling. 11.1 Manual Calling. 11.1 Manual Calling. 11.1 All Choosing Receive Mode. 11.1 Editing/Deleting gries.		9.1.2 Registering ID codes	9-2
9.2.2 Editing/Deleting stations 5 9.3 Timer Programming 5 9.3.1 Registering timer programs 5 9.3.2 Editing/Deleting timer programs 5 9.4 User Channels 5 9.4.1 Registering user channels 5 9.4.2 Editing/Deleting user channels 5 9.5 Scan Channel Groups 5 9.5.1 Registering scan channel groups 5 9.5.2 Editing/Deleting scan channel groups 5 9.5.2 Editing/Deleting scan channel groups 5 10 NBDP FILE OPERATIONS 10 10.1 Opening and Closing Files 10 10.2 Creating Files 10 10.3 Saving a File 10 10.3.1 Formatting floppy disks 10 10.3.2 Saving a file 10 10.4.1 Cuttling and pasting text 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 11 10.4.5 Replacing text 10 10.4.5 Replacing text 10 10.5 Opening Files 10 10.5 Opening Files 10 10.5 Switching between files 10 10.6 Renaming Files		9.2 Station List	9-2
9.3 Timer Programming 9.3.1 Registering timer programs 9.3.2 Editing/Deleting timer programs 9.3.2 Editing/Deleting timer programs 9.3.2 Editing/Deleting timer programs 9.4 User Channels 9.4.1 Registering user channels 9.4.2 Editing/Deleting user channels 9.4.2 Editing/Deleting user channels 9.5.5 Scan Channel Groups 9.5.1 Registering scan channel groups 9.5.2 Editing/Deleting scan channel groups 10.1 Opening and Closing Files 10.2 Creating Files 10.3 Saving a File 10.3.3 Formatting floppy disks 10.3.4 Formatting floppy disks 10.3.4 Editing Files 10.4.4 Editing Files 10.4.4 Editing Files 10.4.5 Editing Files 10.4.5 Editing Files 10.4.6 Goto line 10.4.7 Goto top, Goto bottom 10.4.6 Goto line 10.4.7 Goto top, Goto bottom 10.5.2 Switching between files 10.5.1 Opening Files 10.5.1 Opening a file 10.5.2 Switching between files 10.5.3 Seleting Files 10.5.1 Opening Files 10.5.1 Open		9.2.1 Registering stations	9-3
9.3.1 Registering timer programs		9.2.2 Editing/Deleting stations	9-4
9.3.2 Editing/Deleting timer programs		9.3 Timer Programming	9-5
9.4 User Channels 9 9.4.1 Registering user channels 9 9.5 Scan Channel Groups 9 9.5.1 Registering scan channel groups 9 9.5.2 Editing/Deleting scan channel groups 9 9.5.2 Editing/Deleting scan channel groups 9 10 NBDP FILE OPERATIONS 10 10.1 Opening and Closing Files 10 10.2 Creating Files 10 10.3 Saving a File 10 10.3.1 Formatting floppy disks 10 10.3.2 Saving a file 10 10.4 Editing Files 10 10.4.1 Cutting and pasting text 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.5.1 Opening Files 10 10.5.2 Switching between files 10 10.5.2 Switching between files 10 10.5 Penal Time Printing 10 10.9 Real Time Printing 10 10.9 Real Time Printing 10 10.10 Printing Files 10 <		9.3.1 Registering timer programs	9-5
9.4.1 Registering user channels 9 9.4.2 Editing/Deleting user channels 9 9.5 Scan Channel Groups 9 9.5.1 Registering scan channel groups 9 9.5.2 Editing/Deleting scan channel groups 9 10 NBDP FILE OPERATIONS 10 10.1 Opening and Closing Files 10 10.2 Creating Files 10 10.3.1 Formatting floppy disks 10 10.3.2 Saving a file 10 10.4 Editing Files 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.5.1 Opening Files 10 10.5.2 Switching between files 10 10.5 Renaming Files 10 10.5 Real Time Printing 10 10.9 Real Time Printing 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.4 Choosing Receive Mode 11 <		9.3.2 Editing/Deleting timer programs	9-6
9.4.2 Editing/Deleting user channels 9 9.5 Scan Channel Groups 9 9.5.1 Registering scan channel groups 9 9.5.2 Editing/Deleting scan channel groups 9 10 NBDP FILE OPERATIONS 10 10.1 Opening and Closing Files 16 10.2 Creating Files 16 10.3 Saving a File 16 10.3.1 Formatting floppy disks 16 10.3.2 Saving a file 16 10.4 Editing Files 16 10.4.2 Copying and pasting text 16 10.4.3 Select all 16 10.4.4 Searching text 16 10.4.5 Replacing text 16 10.4.6 Goto line 16 10.5.1 Opening Files 16 10.5.2 Switching between files 16 10.5.2 Switching between files 10 10.5 Renaming Files 10 10.7 Saving a File Under a New Name 16 10.5 Pening Files 10 10.7 Saving a File Under a New Name 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 NBDP TRANSMITTING, RECEIVING 11 <td></td> <td>9.4 User Channels</td> <td> 9-6</td>		9.4 User Channels	9-6
9.5 Scan Channel Groups 9.5.1 Registering scan channel groups 9.5.2 Editing/Deleting scan channel groups 10.6.2 Editing/Deleting scan channel groups 10.6.2 Editing/Deleting scan channel groups 10.6.2 Editing/Deleting scan channel groups 10.6.1 Editing/Deleting scan channel groups		9.4.1 Registering user channels	9-6
9.5.1 Registering scan channel groups 9 9.5.2 Editing/Deleting scan channel groups 9 10 NBDP FILE OPERATIONS 10 10.1 Opening and Closing Files 16 10.2 Creating Files 16 10.3 Saving a File 16 10.3.1 Formatting floppy disks 16 10.3.2 Saving a file 16 10.4 Editing Files 16 10.4.1 Cutting and pasting text 16 10.4.2 Copying and pasting text 16 10.4.2 Select all 16 10.4.3 Select all 16 10.4.4 Searching text 16 10.4.5 Replacing text 16 10.4.6 Goto line 16 10.4.7 Goto top, Goto bottom 16 10.5 Opening Files 16 10.5.1 Opening a file 16 10.5.2 Switching between files 16 10.5 Saving a File Under a New Name 16 10.6 Renaming Files 16 10.7 Saving a File Under a New Name 16 10.9 Real Time Printing 16 10.10 Printing Files 10 11 NBDP TRANSMITTING, RECEIVING 11 <tr< td=""><td></td><td>9.4.2 Editing/Deleting user channels</td><td> 9-7</td></tr<>		9.4.2 Editing/Deleting user channels	9-7
9.5.2 Editing/Deleting scan channel groups 9 10 NBDP FILE OPERATIONS 10 10.1 Opening and Closing Files 10 10.2 Creating Files 10 10.3 Saving a File 10 10.3.1 Formatting floppy disks 10 10.3.2 Saving a file 10 10.4.1 Cutting and pasting text 10 10.4.2 Copying and pasting text 10 10.4.2 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.5.2 Switching between files 10 10.5 Renaming Files 10 10.5 Renaming Files 10 10.5 Real Time Printing 10 10.7 Saving a File Under a New Name 10 10.9 Real Time Printing 10 10.10 Printing Files 10 10.5 ARQ Mode Operation 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosi		9.5 Scan Channel Groups	9-7
10 NBDP FILE OPERATIONS 10 10.1 Opening and Closing Files 10 10.2 Creating Files 10 10.3 Saving a File 10 10.3.1 Formatting floppy disks 10 10.3.2 Saving a file 10 10.4 Editing Files 10 10.4.1 Cutting and pasting text 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.5 Opening Files 10 10.5 Opening Files 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.4 Choosing Receive Mode 11		9.5.1 Registering scan channel groups	9-7
10.1 Opening and Closing Files 10 10.2 Creating Files 10 10.3 Saving a File 10 10.3.1 Formatting floppy disks 10 10.3.2 Saving a file 10 10.4 Editing Files 10 10.4.1 Cutting and pasting text 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.5.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.5 Renaming Files 10 10.5 Real Time Printing 10 10.7 Real Time Printing 10 10.10 Printing Files 10 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		9.5.2 Editing/Deleting scan channel groups	9-8
10.1 Opening and Closing Files 10 10.2 Creating Files 10 10.3 Saving a File 10 10.3.1 Formatting floppy disks 10 10.3.2 Saving a file 10 10.4 Editing Files 10 10.4.1 Cutting and pasting text 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.5.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.5 Renaming Files 10 10.5 Real Time Printing 10 10.7 Real Time Printing 10 10.10 Printing Files 10 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		NIDDD EIL E ODED ATIONS	40.4
10.2 Creating Files 10 10.3 Saving a File 10 10.3.1 Formatting floppy disks 10 10.3.2 Saving a file 10 10.4 Editing Files 10 10.4.1 Cutting and pasting text 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11	10		
10.3 Saving a File. 10 10.3.1 Formatting floppy disks. 10 10.3.2 Saving a file. 10 10.4 Editing Files. 10 10.4.1 Cutting and pasting text. 10 10.4.2 Copying and pasting text. 10 10.4.3 Select all. 10 10.4.4 Searching text. 10 10.4.5 Replacing text. 10 10.4.6 Goto line. 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files. 10 10.5.1 Opening a file. 10 10.5.2 Switching between files. 10 10.7 Saving a File Under a New Name. 10 10.8 Deleting Files. 10 10.9 Real Time Printing. 10 10.10 Printing Files. 10 10.10 Printing Files. 10 11 MBDP TRANSMITTING, RECEIVING. 11 11.1 Manual Calling. 11 11.2 ARQ Mode Operation. 11 11.3 FEC Mode Operation. 11 11.4 Choosing Receive Mode. 11		. 5	
10.3.1 Formatting floppy disks 10 10.3.2 Saving a file 10 10.4 Editing Files 10 10.4.1 Cutting and pasting text 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10 10.4 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		•	
10.3.2 Saving a file 10 10.4 Editing Files 10 10.4.1 Cutting and pasting text 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 MBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11			
10.4 Editing Files 10 10.4.1 Cutting and pasting text 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 MBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		•	
10.4.1 Cutting and pasting text 10 10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 MBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		•	
10.4.2 Copying and pasting text 10 10.4.3 Select all 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 MBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		· ·	
10.4.3 Select all. 10 10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line. 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 MBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		• • •	
10.4.4 Searching text 10 10.4.5 Replacing text 10 10.4.6 Goto line 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10 Printing Files 10 11 MBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11			
10.4.5 Replacing text 10 10.4.6 Goto line 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 MBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11			
10.4.6 Goto line 10 10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		•	
10.4.7 Goto top, Goto bottom 10 10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11			
10.5 Opening Files 10 10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10- 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11			
10.5.1 Opening a file 10 10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10- 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		·	
10.5.2 Switching between files 10 10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10- 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		·	
10.6 Renaming Files 10 10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10- 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11			
10.7 Saving a File Under a New Name 10 10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10- 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		_	
10.8 Deleting Files 10 10.9 Real Time Printing 10 10.10 Printing Files 10- 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		•	
10.9 Real Time Printing 10 10.10 Printing Files 10- 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		· · · · · · · · · · · · · · · · · · ·	
10.10 Printing Files 10- 11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		•	
11 NBDP TRANSMITTING, RECEIVING 11 11.1 Manual Calling 11 11.2 ARQ Mode Operation 11 11.3 FEC Mode Operation 11 11.4 Choosing Receive Mode 11		<u> </u>	
11.1 Manual Calling1111.2 ARQ Mode Operation1111.3 FEC Mode Operation1111.4 Choosing Receive Mode11		10.10 Printing Files	10-10
11.1 Manual Calling1111.2 ARQ Mode Operation1111.3 FEC Mode Operation1111.4 Choosing Receive Mode11	11	NBDP TRANSMITTING. RECEIVING	11-1
11.2 ARQ Mode Operation1111.3 FEC Mode Operation1111.4 Choosing Receive Mode11			
11.3 FEC Mode Operation		_	
11.4 Choosing Receive Mode11		•	
· · · · · · · · · · · · · · · · · · ·		•	
		<u> </u>	

11.6 Timer Operation	11-8
11.6.1 Enabling timer operation	11-8
11.6.2 Stopping timer operation	11-9
11.7 Scanning	11-9
11.8 Communication Buffer	11-10
11.9 Preparing Macrofiles for Automatic Telex	11-10
11.9.1 Automatic telex overview	11-10
11.9.2 Preparations	11-11
11.9.3 Commands	11-12
11.9.4 Store-and-forward method	11-13
DIRTLX macrofile	11-15
11.10 Automatic Telex using Macrofile	11-17
12 MAINTENANCE & TROUBLESHOOTING	12-1
12.1 Daily Test	
12.2 Radiotelephone Test	
12.3 Antenna Coupler Test	
12.4 Maintenance	
12.5 Replacement of Fuses	
12.6 Simple Troubleshooting	
12.7 Error Messages	
12.8 Test Call	
12.9 NBDP Terminal Unit Maintenance	12-9
12.9.1 Cleaning the equipment	12-9
12.9.2 Connectors and earth connection	
12.9.3 Floppy disk drive	12-9
12.9.4 Diagnostics	12-10
APPENDIX	AP-1
Menu Tree	
Frequency Tables	
Telex Abbreviations	
Digital Interface (IEC 61162-1)	
Parts List	
Parts Location	
INDEX	IN ₋ 1

FOREWORD

Thank you for purchasing the FS-1570 (150 W)/FS-2570 (250 W) SSB Radiotelephone. We are confident you will discover why FURUNO has become synonymous with quality and reliability.

Dedicated in the design and manufacture of marine electronics equipment for over half a century, FURUNO Electric Company has gained an unrivaled reputation as a world leader in the industry. This is the result of our technical excellence as well as our worldwide distribution and service network.

Please carefully read and follow the safety information and operating and maintenance instructions set forth in this manual before attempting to operate the equipment and conduct any maintenance. Your unit will perform to the utmost of its ability only if it is operated and maintained in accordance with the correct procedures.

Note: The example screens shown in this manual may not match the screens you see on your display. The screen you see depends on your system configuration and equipment settings.

Features

The FS-1570/FS-2570 is an MF/HF SSB Radiotelephone with a built-in DSC/Watch Receiver, all contained in a surprisingly compact cabinet. An NBDP (Narrow Band Direct Printing) Terminal Unit is optionally available.

Data is displayed on a large, easy-to-read backlit LCD. Operation is simplified by the use of few keys and easy-to-follow menus.

The built-in DSC/watch receiver produces and receives digital selective calls for quick and efficient establishment of distress, urgency, safety and routine communications with other ships and coast stations that install any MF/HF DSC facilities.

The main features are

General

- Fully meets the following regulations: IMO A.694(17), IMO A.804(19), IMO A.806(19), IMO A.813(19), IMO MSC 68(68), IEC 60945, IEC 61907-3/8/9, IEC-61162-1, EIV-300/338, ITU-R M.493-10, M.541-8, M.1082-1, EN 300 373, EN 300 338, EN 300 033 and ETS 300 067.
- One-touch testing facility
- Automatic entry of position with manual override
- Optional printer can automatically print out DSC and NBDP received messages and test results.

DSC/watch receiver

- Distress, safety and routine calling
- Scanning of DSC frequencies for distress and general calls on MF/HF
- File editing capability for readiness in case of emergency
- PSTN (Public Switched Telephone Network) capability standard
- Log stores 50 each of latest ordinary, distress and transmitted messages, in separate memory blocks.

NBDP (with optional NBDP Terminal Unit IB-581/IB-583)

- Automatic error-free telex communications and distress message in compliance with GMDSS requirements
- LCD monitor and keyboard comply with ITU regulations
- Pop-up menus for user-friendly operation
- Memory for 100 operator-customized channels
- Real time message printing with Printer PP-510

Program Number

PC Board	Program No.	On Display	Remarks
MAIN (Transceiver Unit)	0550205101	Ver. 01	FS-1570T/FS-2570T
PANEL 1 (#1 Control Unit)	0550206101	Ver. 01	FS-2570C
PANEL 2 (#2 Control Unit)	0550206101	Ver. 01	Optional unit
MODEM (DSC)	0550207101	Ver. 01	
NBDP MODEM	0550208101	Ver. 01	Optional pcb

Terminal Unit IB-581 (optional unit)


PC Board	Program No.	On Display	Remarks
Terminal Unit	0550210122	Ver. 1.22	

Terminal Unit IB-583 (optional unit)


PC Board	Program No.	On Display	Remarks
Terminal Unit	0550209122	Ver. 1.22	

SYSTEM CONFIGURATION

FS-2570 (250 W)

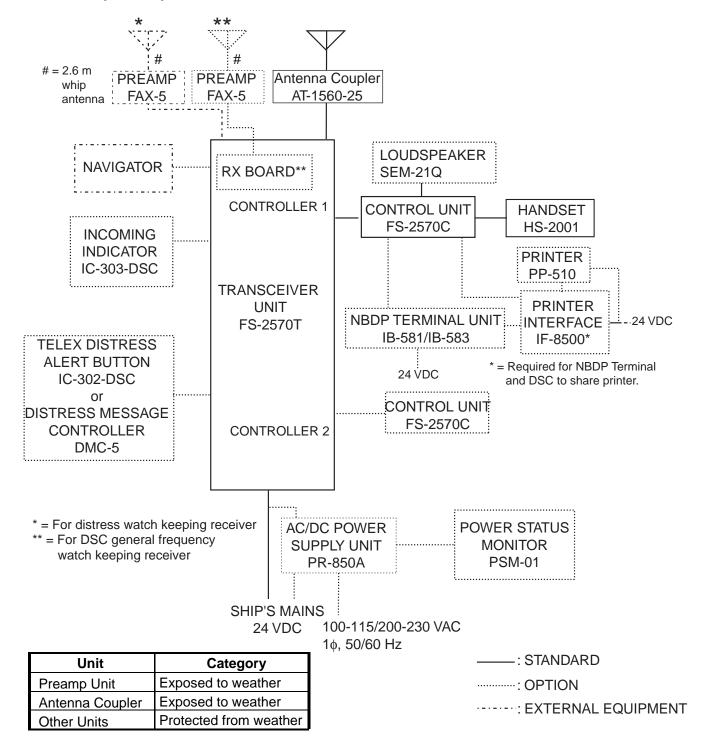

FS-1570 (150 W)

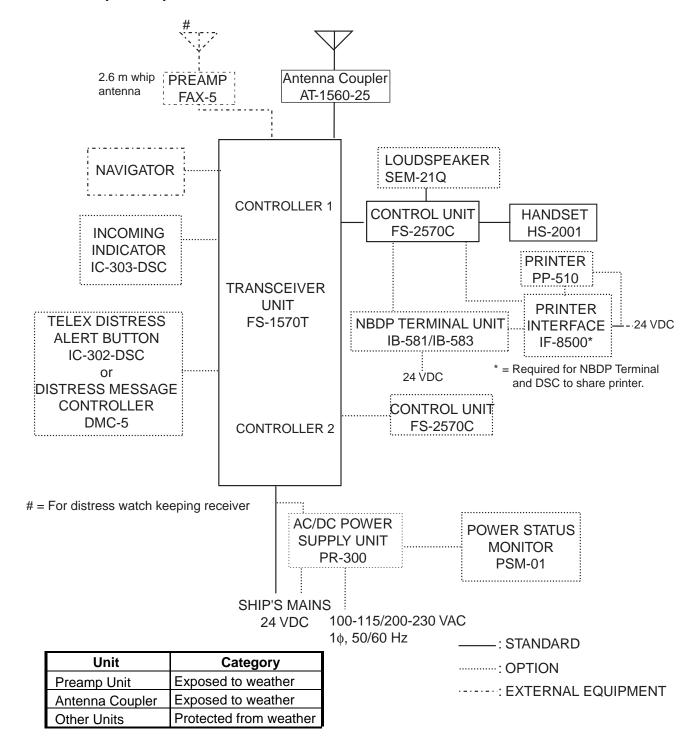

(This page intentionally left blank.)

SPECIFICATIONS OF SSB RADIOTELEPHONE FS-1570/2570

1 MF/HF DIGITAL RADIOTELEPHONE

1.1 GENERAL

1.1.1 Communication System Semi-duplex or simplex

1.1.2 Class of Emission J3E: Telephone

J2B (F1B): DSC or NBDP

H3E: reception only

1.1.3 Frequency Range 100.00 kHz to 29,999.99 kHz

1.1.4 Number of Channel User programmable: 255 TX/RX pairs

All ITU channels incorporated (include DSC/NBDP channels)

2182 kHz (single action)

1.1.5 Display Method Monochrome LCD (120 x 64 dots)

1.1.6 Backlight 8 tones1.1.7 Contrast 64 steps

1.1.8 Warming up 1 minute approx. (oven 20 minutes approx.)

1.2 TRANSMITTER

1.2.1 Frequency Range 1,606.5 kHz to 26.175 MHz (100 Hz steps)
 1.2.2 RF output Power FS-1570: 150 Wpep, FS-2570: 250 Wpep

1.2.3 Frequency Resolution Within ±10 Hz1.2.4 Modulation AF Response 350 Hz to 2.7 kHz

1.2.5 Modulation System Low power balanced modulation

1.2.6 AF Input -46 dBm/600 ohms (Handset/Microphone)

-10 dBm/600 ohms (Handset HS-2001)

1.2.7 Line in 0 dBm/600 ohms

1.3 RECEIVER

1.3.1 Receiving System Double-conversion superheterodyne1.3.2 Frequency Range 100 kHz 29,999.9 kHz (10 Hz steps)

1.3.3 Sensitivity Input level at 10 ohms+250 pF (below 4 MHz) and 50 ohms

(above 4MHz) to produce SINAD 20 dB

Frequency Range	J3E/H3E
100 kHz to 300 kHz	35 dBμV
300 kHz to 1.6 MHz	25 dBμV
1.6 MHz to 4.0 MHz	13 dBμV
4.0 MHz to 30 MHz	7 dBμV

1.4 Intermediate Frequency 1st: 72,455 kHz, 2nd: 455 kHz

1.5 Selectivity J3E: 2.4kHz at -6dB, H3E: 6kHz at -6dB

J2B (F1B): 300Hz at -6dB

1.6 Inter-modulation Better than 80 dBμV
 1.7 Spurious Response Better than 70 dB
 1.8 AGC SLOW/FAST/OFF

1.9 BFO Frequency Telex/DSC: 1,700 Hz, Facsimile: 1,900 Hz

SP - 1 E5637S01E-M

1.10 Audio Output Power Internal speaker: 1W/8 ohms

External speaker: 4W/ 4 ohms Handset: 2.5mW/ 150 ohms Line output: 0 dBm/ 600 ohms

1.11 Standard Features Noise Blanker, Voice-activated squelch, Pre-selector

2 DSC/WATCH KEEPING RECEIVER

2.1 DIGITAL SELECTIVE CALLING

2.1.1 Frequency Shift Space: 1785.0 ± 0.5 Hz, Mark: 1615.0 ± 0.5 Hz

2.1.2 Baud Rate $100 \text{ bps} \pm 30 \text{ x} \cdot 10^{-6}$

2.1.3 Protocol Complies with ITUR Rec.493-10, 541-8, 1082-1

2.1.4 Modulation AFSK

2.1.5 Distress Alarm 3.5 s to 4.5 s self-repetition

2.1.6 Distress Alarm Memory 50 messages

2.2 DSC/WATCH RECEIVER

2.2.1 Frequency Range

MF/HF specification 2187.5/ 8414.5 and 4207.5/ 6312/12577/16804.5 kHz

MF specification 2187.5 kHz 2.2.2 Class of Emission F1B. J2B

2.2.3 Antenna Impedance 50 ohms

2.2.4 Local Oscillator 1st: F+54,455 kHz, 2nd: 54,000 kHz, 3rd: 456.7 kHz

2.2.5 Frequency Stability ±10 Hz

2.2.6 Intermediate Frequency 1st: 54,455 kHz, 2nd: 455 kHz

2.2.7 Selectivity -6 dB: 270 Hz to 300 Hz,

-30 dB: within \pm 380 Hz, -60 dB: within \pm 550 Hz

2.2.8 Receiving System Double-conversion superheterodyne

2.2.9 Radiation within 2 nW

2.2.10 RX Error Rate 1 % or less at 1 μ V input voltage

2.2.11 Spurious Response 31.6 mV non-modulated at 10μV input voltage,

at error rate within 1%

2.2.12 Scanning Reception max. 6 frequencies within 2 s (MF/HF)2.2.13 Diagnosis Transmit high frequency signal of DSC

2.3 GENERAL WATCH KEEPING RECEIVER (FS-2570 ONLY, OPTION)

2.3.1 Frequency Range 1,606.5 kHz to 27.5 MHz

2.3.2 Class of Emission J2B, F1B2.3.3 Antenna Impedance 50 ohms

2.3.4 Local Oscillator 1st: F+54,455 kHz, 2nd: 54,000 kHz, 3rd: 456.7 kHz

2.3.5 Frequency Stability within ±10 Hz

2.3.6 Intermediate Frequency 1st: 54,455 kHz, 2nd: 455 kHz

2.3.7 Selectivity -6 dB: 270 Hz to 300 Hz,

-30 dB: within ± 380 Hz,

SP - 2 E5637S01E-M

-60 dB: within ±550 Hz

2.3.8 Receiving System Double-conversion superheterodyne

2.3.9 Radiation within 2 nW

2.3.10 RX Error Rate 1 % or less at 1 μV input voltage

2.3.11 Spurious Response 31.6 mV non-modulated at 10μV input voltage,

at error rate within 1%

2.3.12 Scanning Reception max. 6 frequencies within 2 s (MF/HF)2.3.13 Diagnosis Transmit high frequency signal of DSC

3 NBDP FUNCTION (OPTION)

3.1 GENERAL

3.1.1 Communication Mode ARQ, FEC, DIRC (FSK)

3.1.2 Protocol ITUR M625-3, M476-5, M490, M491-1, M492-6

ID code 4, 5, 9 column Line cord 4B/3Y (Intl.)

Modulation AFSK

Tone frequency 1615/1785Hz ± 0.5 Hz (mark/space)

Tracking range ±80 Hz

3.1.3 Applications

Auto-reception Setting timer and frequency (max. 10 settings available)

Frequency scanning 10 group max., 20 station as each group

User-channels 100 channels max.

4 TERMINAL UNIT

4.1 IB-583

4.1.1 Display 10.4" color TFT LCD, 640 x 480 dots

4.1.2 CPU HD6417615 (15.5 MHz)

4.1.3 Memory Flash ROM: 1 MB, S-RAM: 256 KB

4.1.4 FD Drive 1.44MB 3.5"

4.1.5 Keyboard 82 keys, IBM PS/2

4.1.6 Other functions Text editor, FD control, Printer, Remote control for Transceiver,

Diagnosis

4.2 IB-581

4.2.1 Display 9.5" monochrome LCD, 680 x 480 dots

4.2.2 CPU ALI M6117 (33 MHz)

4.2.3 Memory Flash ROM 2 MB, DRAM 2 MB

4.2.4 FD Drive 1.44MB 3.5"

4.2.5 Keyboard 82 keys, IBM PS/2

5 ANTENNA COUPLER

5.1 Tuning System CPU controlled fully automatic tuning system

5.2 Frequency Range 1.6 MHz to 27.5Hz

5.3 Input Impedance 50 ohms

5.4 Antenna 7m to 30m wire or whip antenna

SP - 3 E5637S01E-M

5.5 Power Capability 150 W (FS-1570), 250 W (FS-2570)

5.6 VSWR 1.5 max5.7 Tuning Speed Within 15 s

5.8 Dummy Load FS-1570: 10 ohms + 250 pF/100W mounted in coupler

FS-2570: 10 ohms + 250 pF/200W mounted in coupler

6 INTERFACE

6.1 Input data sentences IEC 61162-1 (NMEA 0183-3)

Ship's Position (L/L) GGA>RMC>GLL

Time ZDA

7 POWER SUPPLY

7.1 Transceiver Unit/Control Unit

FS-1570 24 VDC: 0.8 A, max. 20 A (TX) FS-2570 24 VDC: 1.5 A, max. 35 A (TX)

7.2 Terminal Unit IB-583: 24 VDC: 0.6 A

IB-581: 24 VDC: 0.8 A

7.3 Printer 24 VDC: 1.5 A

7.4 AC/DC Power Supply Unit (option) 100/110/115/220/230VAC, 1 phase, 50/60 Hz

8 ENVIRONMENTAL CONDITION

8.1 Ambient Temperature -15°C to +55°C8.2 Relative Humidity 93 or less at 40°C

8.3 Water proofing Control Unit (Panel): IPX2

(IEC 60529) Transceiver Unit/ Terminal Unit: IPX0

Antenna Coupler: IPX5

8.4 Vibration IEC 60945


9 COATING COLOR

9.1 Control Unit/ Terminal Unit Panel: N3.0, Cover: 2.5GY5/1.5

9.2 Transceiver Unit9.3 Antenna CouplerN9.5 (white)

1 OPERATIONAL OVERVIEW

1.1 Controls

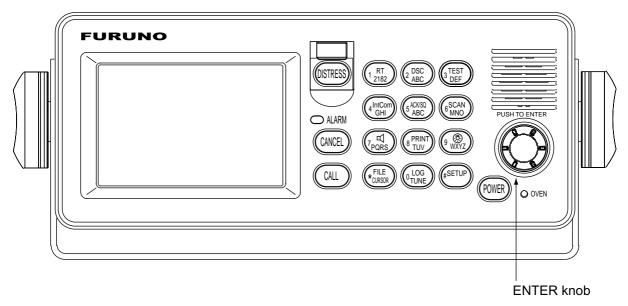

Description of controls

Control	Function	
POWER switch	Turns the power on/off.	
DISTRESS Press and hold down the button more than three seconds to trade button distress alert.		
CALL key	Transmits calls.	
ENTER knob	Radiotelephone: Rotate to change TX/RX channel, sensitivity, audio volume, etc.; push to register selection. DSC: Rotate to choose menu items; push to register selection.	
CANCEL key	Cancels wrong data.	
	Restores previous menu.	
	Silences audio alarm.	
	Cancels transmission, printing.	
	Erases error message.	
1/ RT/2182 key	Switches to the radiotelephone screen. Press and hold down more than two seconds to get 2182.0 kHz/J3E automatically.	
2/DSC key	Composes DSC TX message.	
3/TEST key	Executes daily test.	
4/IntCom key	Turns on/off the intercom with other Control Unit FS-2570C.	
5/ ACK/SQ key	DSC: Switches automatic and manual acknowledge alternately.	
	Radiotelephone: Turns squelch on and off.	
6/SCAN key	Displays DSC standby screen.	
	Starts/stops scanning of DSC routine frequencies, on the DSC standby screen.	


1.2 Turning the Power On/Off

Press the [POWER] switch at the right-hand side of the control unit to power the system. Press it again to turn the system off. In the dual control unit system, the control unit connected to the CONTROLLER 1 port on the transceiver unit has priority and it controls the power for both the No.1 and No. 2 control units. The power switch of the No. 2 control unit powers on/off the No. 2 control unit only.


Note: Turn on ship's mains five minutes before turning on this equipment.


1.3 Panel Dimmer, LCD Contrast

1. Press the [9/ key to show the dimmer/contrast adjustment window.

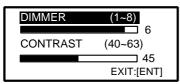

2. Rotate the [ENTER] knob to choose DIMMER or CONTRAST, whichever you want to adjust, and then push the [ENTER] knob.

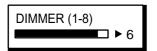

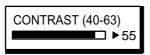


Dimmer adjustment window Contrast adjustment window

- 3. Rotate the [ENTER] knob to adjust and then push the [ENTER] knob.
- 4. To guit, rotate the [ENTER] knob to choose "EXIT: [ENT]" and then push the [ENTER] knob.

1.4 Indications

1.4.1 DSC standby screen


The DSC standby screen may be displayed by pressing the [6/SCAN] key.

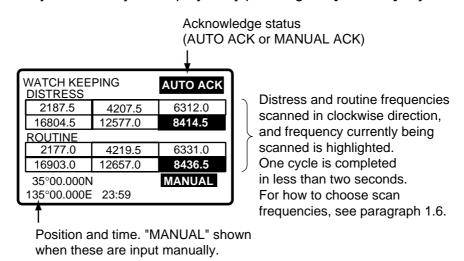

DSC standby screen

1.4.2 Radiotelephone screen

Press the [1/ RT/2182] key to show the radiotelephone screen. This is where you set up the radiotelephone.

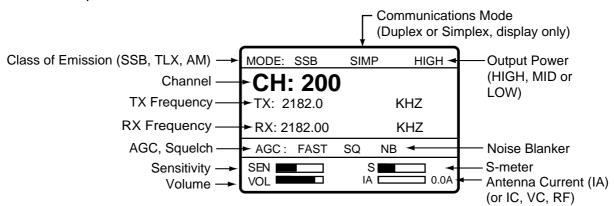

Radiotelephone screen

Note: "TX" is circumscribed with a rectangle when transmitting.

1.5 Loudspeaker

- 1. Press the [7/□] key to alternately disable or enable the loudspeaker and the alarm generated for routine messages. SOUND: ON or SOUND: OFF appears with each press.
- To adjust loudspeaker volume do the following:
 The method of adjustment depends on the setting of "VOLUME INPUT" in the Setup menu (radiotelephone).

For EASY

- a) Press the [1/RT 2182] key to show the radiotelephone screen. VOL (at the bottom of the screen) is chosen.
- b) Rotate the [ENTER] knob to adjust volume and then push the [ENTER] knob to show the VOL adjustment window. This window automatically disappears when there is no volume adjustment for 3-4 seconds.



Note: For the "EASY" setting, the equipment does the following:

- "VOL" is automatically chosen after approx. one minute even if an option other than "VOL" is selected.
- When the setting is changed to other than "VOL" and the [ENTER] knob is pushed, "VOL" is automatically selected..

For NORMAL

- a) Press the [1/RT 2182] key to show the radiotelephone screen. The last-chosen item is selected.
- b) Rotate the [ENTER] knob to choose VOL at the bottom of the screen and then push the [ENTER] knob.
- c) Rotate the [ENTER] knob to adjust volume and then push the [ENTER] knob.

1.6 Scanning Routine DSC Frequencies

You can scan frequencies when using the DSC mode. For how to set frequencies, see paragraph 7.4. Radiotelephone and telex are inoperative while scanning. However, in case of the FS-2570, those modes may be used during scanning when the optional internal watch keeping receiver is installed.

- 1. Press the [6/SCAN] key to show the DSC standby screen.
- 2. Press the [6/SCAN] key to start/stop scanning.

1.7 Automatic Acknowledge On/Off

The automatic acknowledge feature of the DSC/watch receiver automatically transmits the acknowledge back (ACK BQ) signal to the sending station when an individual, position or polling call is received. (For position and polling calls, respective item on the AUTO ACK menu must be turned on to enable automatic acknowledge.) Automatic acknowledge can be turned on or off at the DSC standby screen by the [5/ ACK/SQ] key. The message ACK: AUTO or ACK: MANUAL appears at the bottom of the DSC standby screen with each press of the key.

Note 1: To give priority to own ship's communications while own ship is communicating, show ACK: MANUAL by the above procedure.

Note 2: Automatic acknowledge is not possible under the following conditions:

Priority: Distress, Urgency or Safety Com Type: Morse, Fax, Data, No Info


Com Freq: No Info

Off Hook


1.8 Manual Entry of Position and Time

If there is no EPFS (Electronic Position-Fixing System) connected to this equipment or the EPFS connected is not working (EPFS error indication appears), manually enter position and time as follows:


1. At the DSC standby screen, press the [#/SETUP] key to display the Setup menu.

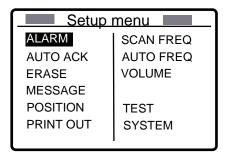


2. Rotate the [ENTER] knob to choose POSITION and then push the [ENTER] knob.

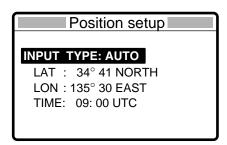


3. Push the [ENTER] knob to open the INPUT TYPE menu.

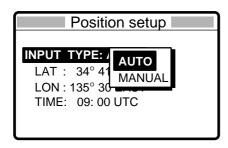


- **Note 1:** If, when INPUT TYPE is AUTO, input from the navigator is interrupted, the message "EPFS error!" appears. If this occurs, check the navigator.
- **Note 2:** When INPUT TYPE is MANUAL, the message "Warning: Update position" appears at set intervals (update interval selected with POSITION OLDER on the Alarm menu) to ask you to update position.
- 4. Rotate the [ENTER] knob to choose MANUAL and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the latitude input window. Use the numeric keys to enter latitude. If necessary, switch coordinates: [1] key to switch to North; [2] key to switch to South. Push the [ENTER] knob.

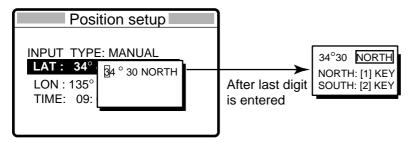

6. Push the [ENTER] knob to open the longitude input window. Use the numeric keys to enter longitude. If necessary, switch coordinates: [1] key to switch to East; [2] key to switch to West. Push the [ENTER] knob.

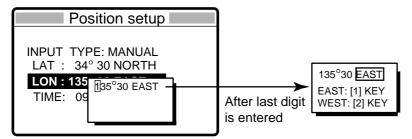

7. Push the [ENTER] knob to open the time input window.

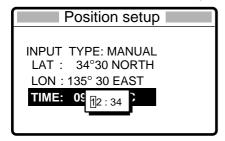

- 8. Enter UTC time with the numeric keys and then push the [ENTER] knob. The Setup menu appears.
- 9. Press the [CANCEL] key to return to the DSC standby screen.

1.9 System Characteristics

1.9.1 Equipment priority

Equipment priority order is as below.

- 1. DMC
- 2. Control unit sending distress alert
- 3. Control unit 1 routine use
- 4. Control unit 2 routine use
- 5. NBDP

1.9.2 Controls become inoperative

Controls become inoperative in the following conditions:

- Controls of idle control unit in the two-control unit system when other control unit goes OFF HOOK.
- Controls of idle control unit in the two-control unit system when other control unit switches to the DSC mode.
- Distress received by DMC (Distress Message Controller).
- NBDP is scanning or communicating.
- Distress alert or distress relay is transmitted.
- Call other than distress is transmitted (transmission time about 8 s). If it becomes necessary to unlock the keyboard before the message is transmitted, press the [CANCEL] key to cancel the call.

1.9.3 Controls become operative

Controls become operative in the following conditions:

- [DISTRESS] button is pressed.
- Control unit having highest priority is operated.
- Other control unit in two-control unit system goes ON HOOK.
- Distress received by DMC is acknowledged.
- NBDP stops scanning or communicating.

1.9.4 Automatic setting of working frequency

The radiotelephone automatically sets working frequency in the following conditions:

- ABLE ACK is sent in response to individual call.
- Your ship receives ABLE ACK in response to own ship-initiated individual call.
- Your ship sends all ship call.
- Your ship sends distress relay.
- Your ship sends distress alert.
- Your ship receives group call or area call.
- Your ship receives distress relay call.
- Your ship receives distress alert.

1.10 Power Supply Unit (option)


The control unit works directly on 24 VDC or through a Power Supply Unit on AC mains supply (115 or 230 VAC). The power supply unit is type PR-300, supplying 24 VDC power (20 A) to the FS-1570 or type PR-850A, supplying 24 VDC (40 A) to the FS-2570. Both 115/230 VAC and 24 VDC power can be connected simultaneously. In this case, the system normally operates on the AC mains supply and when AC power is lost, the PSU automatically switches to the DC power source.

This power supply arrangement satisfies the GMDSS requirements. The FS-1570/FS-2570 can be operated directly from 24 VDC without a power supply.

OVEN power supply: The crystal oven is always powered even when the Power Switch is OFF, provided the mains switchboard is turned on.

AC and DC power switches

Both AC and DC power switches on the PSU can be always kept on. (These switches are provided to turn off the power supply for maintenance.) The control unit may be turned on or off with the PSU kept on.

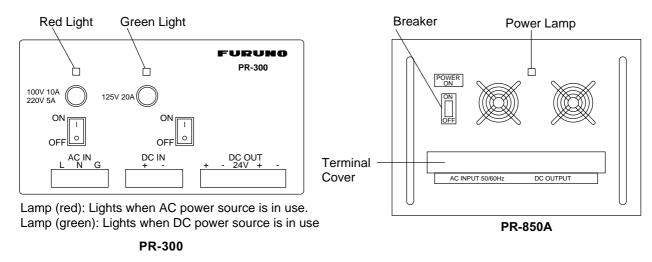

Power supply units

Note: Both lamps light when changing to DC power supply (PR-300). These lamps also light when the internal temperature goes too high.

2 SSB RADIOTELEPHONE


You can enter desired frequency by channel or TX and RX frequencies. The handset may be ON HOOK or OFF HOOK. To set the SSB radiotelephone to 2182 kHz/J3E automatically, press the [1/ RT/2182] key more than two seconds.

2.1 Transmitting

After selecting class of emission and frequency, you can transmit by pressing the PTT switch on the handset. Output power is shown on the display.


2.1.1 Choosing class of emission

1. At the radiotelephone screen, choose class of emission (mode) as follows: Rotate the [ENTER] knob to choose MODE and then push the [ENTER] knob.

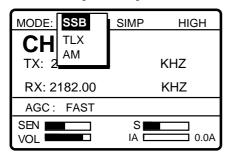

Rotate the [ENTER] knob to choose mode desired and then push the [ENTER] knob. SSB: Single Sideband, TLX: Telex, AM: AM. (You cannot transmit on the AM mode.)

- 2. AGC is automatically selected according to mode. AGC FAST: SSB, AGC OFF: TLX, AGC SLOW: AM. However, you may change it as below.
 - a) Rotate the [ENTER] knob to choose AGC and then push the [ENTER] knob.

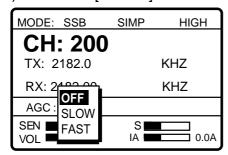


b) Rotate the [ENTER] knob to choose OFF, SLOW or FAST as appropriate and then push the [ENTER] knob.

2.1.2 Choosing channel, frequency

Choosing channel

1. Rotate the [ENTER] knob to choose CH and then push the [ENTER] knob.

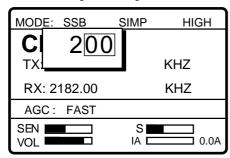


2. Channel can be entered directly with the numeric keys, or by using the [ENTER] knob. See below for details.


Entering band and band channel with the numeric keys: Use the numeric keys to enter band and band channel and then push the [ENTER] knob.

Choosing band and band channel with the ENTER knob:

a) Use the [FILE/CURSOR] key to place the cursor in the band or band channel position, whichever you want to change.

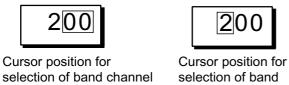

b) Rotate the [ENTER] knob to set band (or channel) desired.

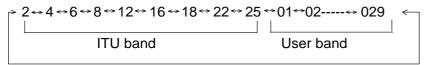

Setting Range

ITU Band: 2/4/6/8/12/16/18/22/25

User Band: 001-029 (leadiing zero necessary)


ITU Channel: XX01 - XX236 (rendering on band or mode)

User Channel: XXX01 - XXX99

c) Push the [ENTER] knob. The TX and RX frequencies of the channel entered appear.

Choosing frequency

1. Rotate the [ENTER] knob to choose TX or RX as appropriate and then push the [ENTER] knob.

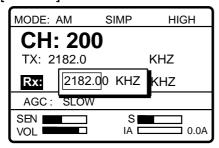

2. Enter frequency by one of the methods below.

Entering frequency with the numeric keys:

Use the numeric keys to enter frequency and then push the [ENTER] knob. Be sure to including trailing zero. For example, to enter 2161 kHz, key in [2], [1], [6], [1], [0]. (Keying in 2-1-6-1 will set 216.1 kHz.)

Choosing frequency with the ENTER knob (for RX only):

- a) Use the [FILE/CURSOR] key to choose digit to change.
- b) Rotate the [ENTER] knob to set digit.
- c) Push the [ENTER] knob.

Note: To enter same frequency for both TX and RX, enter the TX frequency first.

2.1.3 Tuning

Maximum transmission power is achieved only when the antenna impedance and transmitter impedance match each other. Because the antenna impedance changes with frequency, a means must be provided to match (tune) the antenna impedance with the transmitter impedance. This is done with the antenna coupler. The antenna coupler automatically tunes the transmitter to a wide range of different antenna lengths, from 7 to 30 m.

To initiate the automatic tuning, do the following:

Press the PTT switch on the handset or the [LOG/TUNE] key on the control unit.
 "TUNING" appears when the [LOG/TUNE] key is pressed; "TX" pops out when the PTT switch is pressed.

Tuning will be completed within 2 to 5 s for a newly selected frequency, or less than 0.5 s for a once-tuned frequency. (A memory saves coil and capacitor settings.) When the tuning process is successfully completed, TUNE: OK appears. If tuning fails, TUNE: NG appears.

Note: When tuning is initiated in the two-control unit system, the display of the idle control unit shows "OCCUPIED(ANOTHER CONTROLLER)." In this case, only the DISTRESS button is operative on the idle control unit. Further, if a control unit is in use when tuning is attempted at the other control unit, the display of the control unit which attempted to tune shows "OCCUPIED" plus the name of the equipment in use: ANOTHER CONTROLLER, NBDP, or DMC.


2.1.4 Using the handset

Hold the handset close to your mouth, press the PTT switch and speak clearly.

2.1.5 Monitoring transceiver output power

During transmission, the IA bar deflects according to the current being fed to the antenna feeder from the antenna coupler. The unit of readout is amperes. The antenna current varies with the effective antenna impedance. The swing differs by the frequency and antenna length. The output power is proportional to the square of an antenna current.


Note: If IA is not shown, follow the procedure in paragraph 2.1.7 to show it.

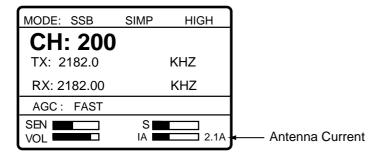

2.1.6 Reducing transmitter power

To conserve energy and to minimize possible interference to other stations, reduce the transmission power. This should be done when using the transceiver in a harbor, near the shore or close to communication partner (other ship).

1. Rotate the [ENTER] knob to choose LOW, MID or HIGH (whichever is shown) at the top of the screen and then push the [ENTER] knob.

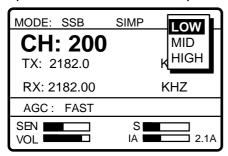

	FS-1570	FS-2570
LOW	68 W	70 W
MID	100 W	125 W
HIGH	150 W	250 W


2. Rotate the [ENTER] knob to choose power among LOW, MID and HIGH as appropriate and then push the [ENTER] knob.

Note: Power amplifier temperature is monitored, and when its temperature rises above a certain temperature output power is automatically reduced.

2.1.7 Displaying IA, IC, VC or RF

While transmitting, you may display RF (PA output), IA (antenna current), IC (collector current) or VC (collector voltage), at the lower right corner of the radiotelephone screen.

- 1. Rotate the [ENTER] knob to choose RF, IA, IC or VC (whichever is displayed) at the bottom right corner.
- 2. Push the [ENTER] knob.

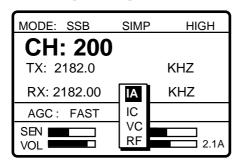


3. Rotate the [ENTER] knob to choose option desired and then push the [ENTER] knob.

2.2 Receiving

2.2.1 RF gain (sensitivity) adjustment

In normal use the sensitivity should be set for maximum. If the audio on the received channel is unclear or interfered with other signals, adjust (usually reduce) sensitivity to improve clarity.


1. Rotate the [ENTER] knob to choose SEN at the bottom of the screen and then push the [ENTER] knob.

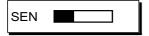

2. Rotate the [ENTER] to adjust and then push the [ENTER] knob.

2.2.2 S-meter

The S-meter shows relative signal strength coming into the receiver frontend. Note that the S-meter does not function when the AGC is turned off.

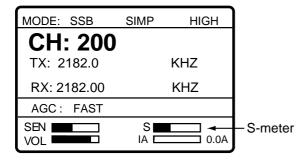


2.2.3 Monitoring traffic on intended transmit frequency


When a semi-duplex channel is selected, it is recommended to monitor if there is no existing traffic on the frequency you are going to use. This can be done by entering the Tx frequency at the Rx frequency location.

2.2.4 Receiving AM broadcasting stations

- 1. Press the [1/RT/2182] key to show the radiotelephone screen.
- 2. Rotate the [ENTER] knob to choose MODE and then push the [ENTER] knob.

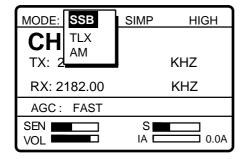

- 3. Rotate the [ENTER] knob to choose AM and then push the [ENTER] knob.
- 4. Rotate the [ENTER] knob to choose RX and then push the [ENTER] knob.

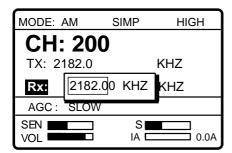

5. Key in RX frequency with the numeric keys and then push the [ENTER] knob.


2.2.5 Squelch control, squelch frequency

Squelch on/off

The squelch mutes the audio output in the absence of an incoming signal. Press the [5/ ACK/SQ key] to turn on and off the squelch alternately. When radio noise is too jarring during stand-by condition, it may be muted by activating the squelch. "SQ" appears when the squelch function is active.

Squelch frequency

1. At the radiotelephone screen, press the [#/SETUP] key.

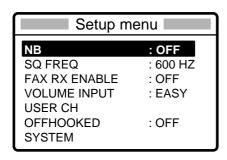

- 2. Rotate the [ENTER] knob to choose SQ FREQ.
- 3. Push the [ENTER] knob.
- 4. Enter frequency (range: 500-2000 Hz, default 800 Hz) with the numeric keys and then push the [ENTER] knob.
- 5. Press the [CANCEL] key to return to the radiotelephone screen.

2.2.6 Noise blanker

The noise blanker functions to remove noise. You may turn it on or off as follows:

- 1. At the radiotelephone screen, press the [#/SETUP] key.
- 2. Rotate the [ENTER] knob to choose NB.
- 3. Push the [ENTER] knob.
- 4. Rotate the [ENTER] knob to choose ON or OFF as appropriate and then push the [ENTER] knob.
- 5. Press the [CANCEL] key to return to the radiotelephone screen.

2.3 Intercom

The built-in intercom permits voice communications between two FS-2570C Control Units.

- 1. Press the [1/ RT/2182] key to show the radiotelephone screen.
- 2. Off hook the handset.
- 3. Press the [4/IntCom] key to show INTERCOM on the display. The called party's handset rings.
- 4. When the called party picks up their handset, start communications.
- 5. Hang up the handset to turn the intercom off. The indication INTERCOM disappears from the screen.

2.4 Telex Communications


Telex communication is performed with the NBDP Terminal Unit (option) connected to this radiotelephone. No special operation is required on the control unit; class of emission and frequencies are set on the NBDP Terminal Unit. For telex communications, see Chapters 8 through 11.

2.5 When Automatic Tuning Fails

The antenna coupler automatically tunes a wire or whip antenna to the transceiver. When all frequencies cannot be tuned, TUNE OK will not appear on the display. In this case, you can tune 2182 kHz by manually operating the coupler as shown in the procedure below.



- 1. Turn off the control unit. Remove the cover of the antenna coupler.
- 2. Set the MANUAL-AUTO switch to the MANUAL position.

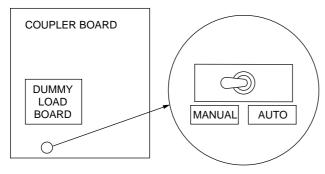

- 3. Replace the cover.
- 4. Turn on the control unit.

2.6 User Channels

The USER CH menu allows registration of user TX and RX channels, where permitted by the Authorities.


NOTICE

FURUNO will assume no responsibility for the disturbance caused by the unlawful or improper setting of user channels.

2.6.1 Registering user channels

"USER CH" in the System setup menu must be enabled in order to register user channels. For further details, contact your dealer.


1. At the radiotelephone screen, press the [#/SETUP] key.

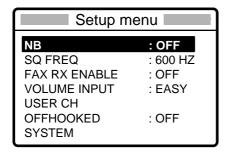


2. Rotate the [ENTER] knob to choose USER CH and then push the [ENTER] knob. The window shown below appears.




3. ENTRY is selected; push the [ENTER] knob.

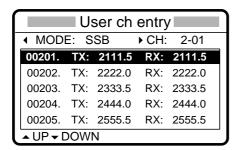


4. Push the [ENTER] knob to open the user channel options window.

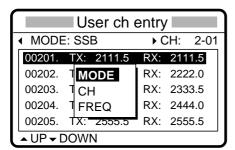


5. Rotate the [ENTER] knob to choose MODE and then push the [ENTER] knob.

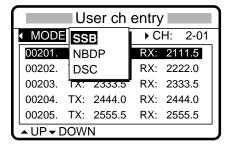

6. Rotate the [ENTER] knob to choose appropriate mode among SSB, NBDP and DSC and then push the [ENTER] knob.

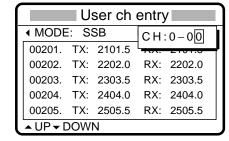

- 255 channels may be registered.
- Band no. setting range is 0-29 and band channel no. range is 01-99.
- For DSC, four channels can be registered per band (2, 4, 6 8, 12, 16, 18, 22, 25).
- "0" band is for DSC frequencies only, and they are registered under "OTHER." Four channels are available, 01-04.
- 7. Key in channel no. and then push the [ENTER] knob. For example, press [0], [1], [2], [3], [4] and then push the [ENTER] knob to enter channel 01234.

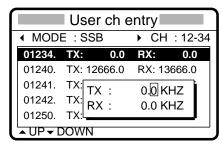

- 8. Enter TX frequency with the numeric keys.
- 9. Rotate the [ENTER] knob to choose RX.
- 10. Enter RX frequency with the numeric keys and then push the [ENTER] knob.
- 11. Rotate the [ENTER] knob to display all channels entered.
- 12. Press the [CANCEL] key twice to return to the radiotelephone screen.

2.6.2 Deleting user channels

Deleting individual user channels

- 1. At the radiotelephone screen, press the [#/SETUP] key.
- 2. Rotate the [ENTER] knob to choose USER CH and then push the [ENTER] knob.
- 3. Rotate the [ENTER] knob to choose ENTRY and then push the [ENTER] knob.
- 4. Push the [ENTER] knob, rotate the [ENTER] knob to choose CH and then push the [ENTER] knob.
- 5. Enter channel number to process and then push the [ENTER] knob.
- 6. Tx and Rx frequencies are shown as "0.0 kHz"; push the [ENTER] knob to delete channel.
- 7. Press the [CANCEL] key twice to return to the radiotelephone screen.


Deleting all user channels

- 1. At the radiotelephone screen, press the [#/SETUP] key.
- 2. Rotate the [ENTER] knob to choose USER CH and then push the [ENTER] knob.
- 3. Rotate the [ENTER] knob to choose ERASE and then push the [ENTER] knob.
- 4. Rotate the [ENTER] knob to choose YES and then push the [ENTER] knob.
- 5. Press the [CANCEL] key to return to the radiotelephone screen.

2.7 FAX Enable/Disable

You may enable or disable FAX use as follows:

- 1. At the radiotelephone screen, press the [#/SETUP] key to open the Setup menu.
- 2. Rotate the [ENTER] knob to choose FAX RX ENABLE and then push the [ENTER] knob.
- 3. Rotate the [ENTER] knob to choose ON or OFF as appropriate and then push the [ENTER] key.

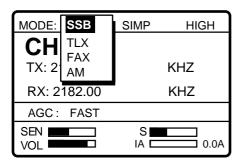


4. Press the [CANCEL] key to close the menu.

2.8 Speaker Setting in Off Hook

When the handset is off hook, you may choose to turn the speaker (panel speaker or external speaker) on or off. The default setting is OFF which turns off the speaker when the handset is off hook. The ON position keeps the speaker on always, regardless of handset state.

1. At the radiotelephone screen, press the [#/SETUP] key to display the SETUP menu.

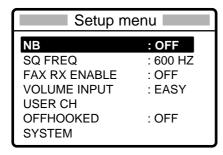

- 2. Rotate the [ENTER] knob to choose OFFHOOKED and then push the [ENTER] knob.
- 3. Rotate the [ENTER] knob to choose ON or OFF as appropriate and then push the [ENTER] key.
- 4. Press the [CANCEL] key to close the menu.

2 SSB RADIOTELEPHONE


(This page intentionally left blank.)

3 DSC OVERVIEW

3.1 What is DSC?

DSC is an acronym meaning Digital Selective Calling. It is a digital distress and general calling system in the MF and HF bands used by ships for transmitting distress alerts and general calls and by coast stations for transmitting the associated acknowledgements. For DSC distress and safety calling in the MF and HF bands, the frequencies are (kHz) 2187.5, 4207.5, 6312.0, 8414.5, 12577.0, and 16804.5.

The DSC station sends and receives DSC general and safety calls via the radiotelephone.

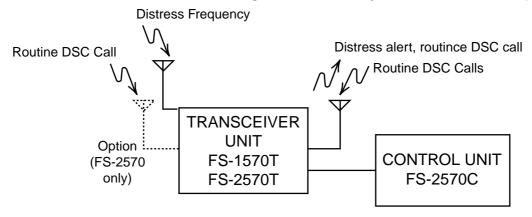

3.2 DSC Call

DSC calls are roughly divided in two categories: distress and safety calls, and routine calls. Below are the types of DSC calls.

Call	Description	
All Ships	Call to all ships	
Distress	Your ship sends distress call	
Distress relay all	Your ship relays distress call to all ships	
Distress relay select	Your ship relays distress call to a coast station	
Geographical Area	Call to all ships in a specific geographical area	
Group	Call to a specific group	
Individual	Call to a specific address	
Medical Transport	Inform all ships that your ship is carrying medical supplies	
Neutral Craft	Inform all ships that your ship is not a participant in armed conflict	
Polling	Call to determine if own ship is in communicating range with other ship	
Position	You send your position to other stations Your ship requests position of other station	
PSTN	Call over Public Switched Telephone Network (PSTN)	
Test	Send test signal to a coast station to test your station's functionality	

Contents of a DSC call

Calling category

Call category	Call
Individual	Individual, PSTN, Test, Position, Polling, Relay Sel (specific coast station)
All Ships	All Ships, Neutral, Medical, Relay All
Group	Group
Geographical Area	Area
Distress Call	Distress

Station ID

Own ship ID and sending station ID. Coast station ID begins with 00; Group ID begins with 0.

Priority

Distress: Grave and imminent danger and request immediate assistance.

Safety: A station is about to transmit a call containing an important

navigational or meteorological warning.

Urgency: A calling station has a very urgent call to transmit concerning safety of

ship, aircraft or other vehicle or safety of person.

Business: Communication related to the navigation, movements and needs of ships

and aircraft.

Routine: General calling

Communication type

Telephone: Telephone (J3E) by SSB radiotelephone

NBDP-ARQ: Telex (J2B) mode ARQ via NBDP Terminal Unit **NBDP-FEC:** Telex (J2B) mode FEC via NBDP Terminal Unit

Communication frequency

Working frequency used to call by telephone or NBDP. The sending station may have the receiving frequency (ship or coast station) assign the frequency to use.

Position

Position can be automatically or manually sent.

DSC frequency

DSC frequency to use. If the call category is SAFETY, URGENCY or DISTRESS, choose a DSC distress frequency.

End code

The end of a DSC call is denoted by ACK RQ (Acknowledge Request), ACK BQ (Acknowledge Back) or EOS (End of Sequence).

3.2.1 Distress alert call and reply

This type of call is sent by own ship in the event of distress, by using the [DISTRESS] button as follows:


1. The LED in the [DISTRESS] button initially flashes, and lights when the button is pressed more than three seconds. (If the button is pressed less than three seconds, the distress alert is not sent. Once the alert is sent it cannot be cancelled.)

NOTICE

IN CASE OF ACCIDENTAL TRANS-MISSION OF THE DISTRESS ALERT

If the distress is accidentally transmitted, contact the nearest coast station and inform them of the accidental transmission as follows:


- a) Ship's name
- b) Ship's call sign and DSC number
- c) Position at time of transmission
- d) Time of transmission
- 2. The radiotelephone automatically sets the DSC distress frequency and then the equipment transmits the distress alert.
- 3. After the distress alert is transmitted (this takes about 40 seconds), the equipment waits for the distress acknowledgement call (DISTACK) from a coast station. This usually takes less than three minutes. (If it is not received within 4.5 minutes, the distress alert is re-transmitted.)
- 4. The radiotelephone automatically sets the distress communication frequency to use to conduct voice communications (telex also available) with the coast station.

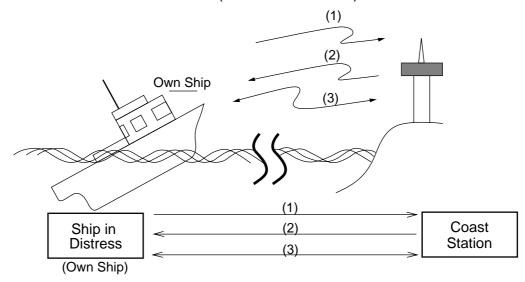

- (1) Ship in distress sends Distress Alert.
- (2) Coast station sends distress acknowledgement (DIST ACK).
- (3) Voice or telex communications between ship in distress and coast station

3.2.2 Individual call

The individual call is for sending a call to a specific station.

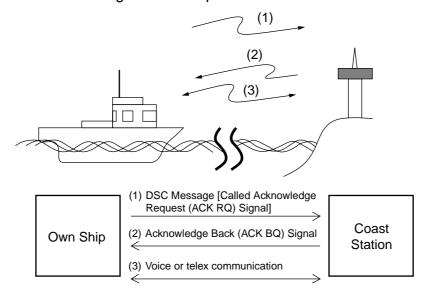

Basic procedure (radiotelephone)

- 1. Prepare call and transmit it by pressing the [CALL] key. The equipment then awaits acknowledgement of the call.
- 2. Receive acknowledge back (ACK BQ) signal from other party (coast station or ship station) within about five minutes. The audio alarm sounds at this time; press the [CANCEL] key to silence it.
- 3. After receiving the ACK BQ signal, communicate with other party; the radiotelephone automatically sets the working frequency and class of emission you specified.

3.3 Audio Alarms

When you receive a distress alert or routine call addressed to your ship, the audio and visual alarms are released. For the distress or urgency call, the audio alarm sounds until the [CANCEL] key is pressed, and sounds for one second and then automatically goes off in case of other calls. The tone of the alarm changes with the call received. By becoming accustomed to the tone, you can know which type of call you have received.

Alarm	Frequency (interval)
Safety call received	1300 Hz and 0 Hz (250 ms)
Routine, Ship's Business call received	880 Hz and 440 Hz (500 ms)
While DISTRESS button is pressed for three s	2200 Hz and 0 Hz (125 ms)
Distress alert sent	2200 Hz, continuous
Own ship position not updated	2200 Hz (50 ms), three beeps every two s
Distress alert, urgency message received	1300 Hz and 2200 Hz (250 ms)


3.4 Interpreting Call Displays

This paragraph provides the information necessary for interpreting receive and send call displays.


3.4.1 Receive calls

Below are sample distress and individual receive calls. The content of other types of receive calls is similar to that of the individual call. When you receive a call, the message "INCOMING" flashes at the bottom of the display.

Distress receive call

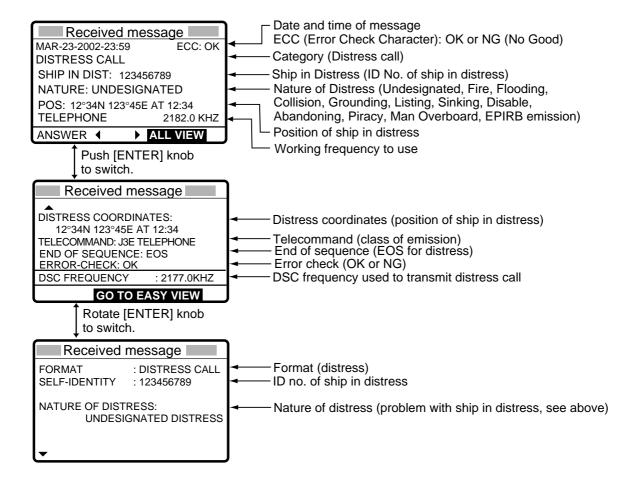


Individual receive call

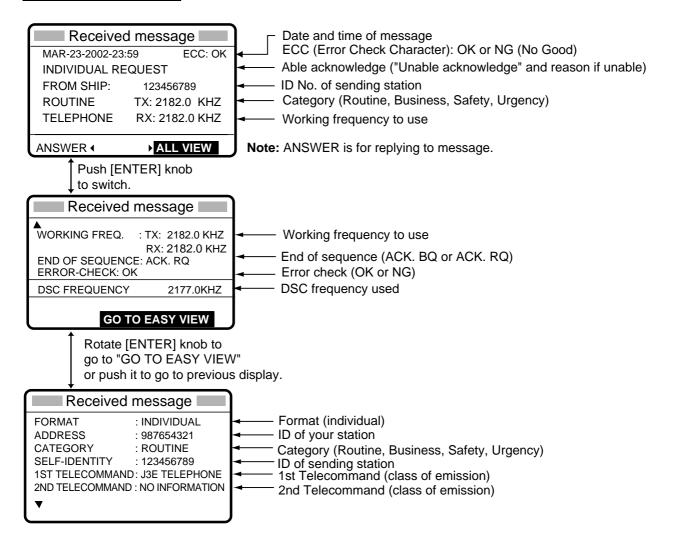


3.4.2 Send calls

Below are sample distress and individual send calls. The content of other types of send calls is similar to that of the individual call.

Distress send call

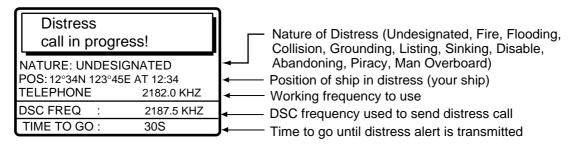

Individual send call

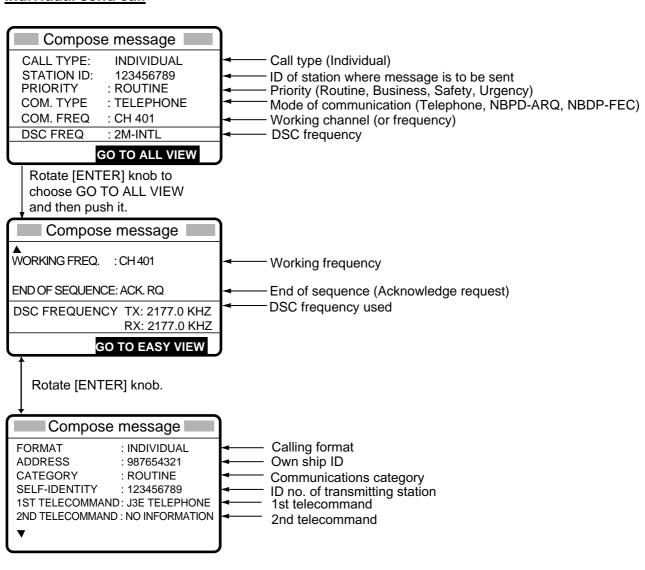

(This page intentionally left blank.)

4 DISTRESS OPERATIONS

4.1 Sending Distress Alert

GMDSS ships carry a DSC terminal with which to transmit the distress alert in the event of a life-endangering situation. A coast station receives the distress alert and sends the distress alert acknowledge call to the ship in distress. Then, voice or telex communications between the ship in distress and coast station begins.

Transmission of the distress alert and receiving of the distress alert acknowledgement are completely automatic - simply press the [DISTRESS] button to initiate the sequence. Note that the distress can also be transmitted from the Telex Distress Alert Button IC-302-DSC.


Russian version

- Audio alarm is released continuously after transmitting distress alert.
- The [CANCEL] key can be used during the transmission of the distress alert. The transmission sequence is stopped at the end of the fifth transmission.


4.1.1 Sending distress alert by DISTRESS button, nature of distress not specified

Open the DISTRESS button cover and press and hold down the [DISTRESS] button
more than three seconds. The button flashes in red and the buzzer sounds rapidly. The
display shows the contents of the distress alert call: your ship's nature of distress,
position, time and the DSC frequency over which the alert has been transmitted.

The number of seconds to continue pressing the [DISTRESS] button appear at the bottom of the display. The buzzer sounds continuously and the lamp in the button lights when the button has been pressed three seconds. You can release the button at that time.

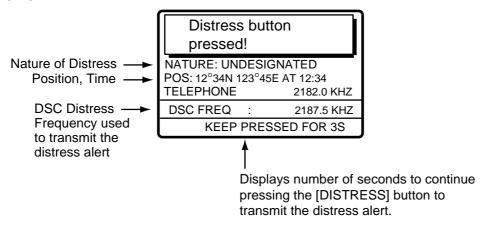


The display changes as below. It takes about 40 seconds to transmit the distress alert, and the number of seconds until transmission is completed is shown at the bottom of the display. At this time the output power of the radiotelephone is automatically set to maximum.

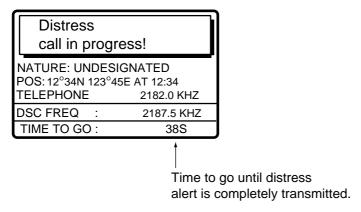


3. After the distress alert has been sent, the display changes as below and the audio alarm is stopped. Wait to receive the distress acknowledge call from a coast station, which usually takes 1 to 2 min 45 seconds. (The [DISTRESS] button remains lit until the equipment receives the distress acknowledge call from a coast station.) The timer counts down the number of minutes before next retransmission (if necessary), from 3.5 to 4.5 minutes, randomly set.

At this time, the equipment cannot receive any calls except the distress alert acknowledge call. The distress alert you sent is recorded in the TX log.

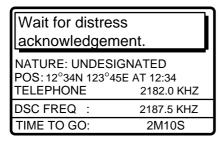


4. When the distress acknowledge call is received, the audio alarm sounds and the display changes as below.

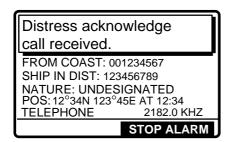

Note: If you do not receive the distress alert acknowledge call, the equipment automatically re-transmits the distress alert and then awaits the distress alert acknowledge call. This is repeated until the distress alert is acknowledged.

5. Silence the alarm with the [CANCEL] key. The contents of the distress acknowledge call appear.

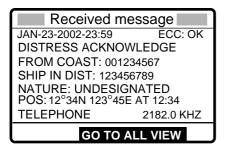


- 6. Communicate with the coast station via radiotelephone, following the instructions below. The radiotelephone automatically sets working frequency and class of emission, as specified in the distress acknowledge call.
 - a) Say MAYDAY three times.
 - b) Say "This is ... " name of your vessel and call sign three times.
 - c) Give nature of distress and assistance needed.
 - d) Give description of your vessel (type, color, number of persons onboard, etc.).

4.1.2 Sending distress alert by DISTRESS button, nature of distress specified

If you have the time to designate the nature of distress, send the distress alert as follows:

1. Open the DISTRESS button cover and press the [DISTRESS] button momentarily to show the following display.

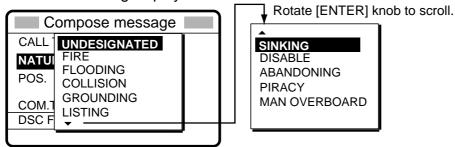


- 2. Rotate the [ENTER] knob to choose nature of distress and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the POS. menu. This is where you enter your position, automatically or manually. The INPUT TYPE option, that is, the source of position data, is selected to AUTO, MANUAL or NO INFO. For AUTO, if the position is correct, push the [ENTER] knob twice and go to step 10. For manual input, or you do not know your position, go to step 4.

INPUT TYPE: AUTO


LAT: 34° 41 NORTH
LON: 135° 30 EAST
TIME: 09: 00 UTC

Note: If the message "No Position Data" appears when you change INPUT TYPE from MANUAL to AUTO, confirm that the navigation device is functioning and then choose AUTO again.


4. Push the [ENTER] knob to open the INPUT TYPE menu.

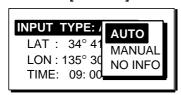


- Rotate the [ENTER] knob to choose MANUAL and then push the [ENTER] knob. If you cannot confirm your position, choose NO INFO, push the [ENTER] knob and then go to step 10.
- 6. Push the [ENTER] knob to open the latitude input window. Use the numeric keys to enter latitude (in four digits). (If necessary, switch coordinates: [1] key to switch to North; [2] key to switch to South.) Push the [ENTER] knob.

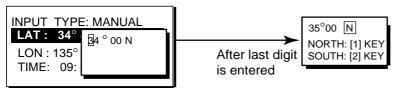

7. Push the [ENTER] knob to open the longitude input window. Use the numeric keys to enter longitude (in five digits). (If necessary, switch coordinates: [1] key to switch to East; [2] key to switch to West.) Push the [ENTER] knob.

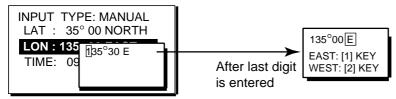


8. Push the [ENTER] knob to open the time input window.

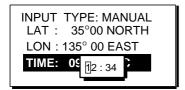


9. Key in UTC time with the numeric keys and then push the [ENTER] knob.

Note: If you cannot confirm time, enter 88:88 to input NO INFO as the time.


10. The COMPOSE MESSAGE screen is redisplayed. Push the [ENTER] knob to open the COM. TYPE menu.

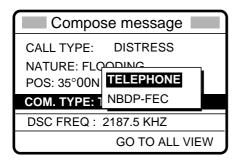


- 11. Rotate the [ENTER] knob to choose TELEPHONE or NBDP-FEC as appropriate and then push the [ENTER] knob. (Telephone is the usual mode, however NBDP may also be used.)
- 12. Push the [ENTER] knob to open the DSC FREQ menu.

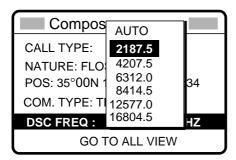

- 13. Rotate the [ENTER] knob to choose a DSC frequency (normally 2187.5 kHz) and then push the [ENTER] knob. (AUTO retransmits the distress alert on the distress and safety frequencies 2 MHz, 8 MHz, 16 MHz, 4 MHz, 12 MHz and 6 MHz in that order if the distress alert is not acknowledged.)
- 14. The display changes as below (example).

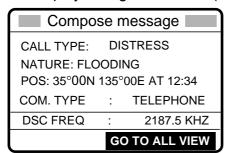


15. Press the [DISTRESS] button more than three seconds to send the distress alert.

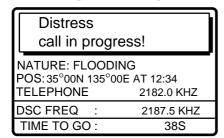

16. For telephone, follow steps 3 to 6 on page 4-2 and 4-3. For NBDP, follow the procedure below.

Communicating by NBDP Terminal Unit

- The message "STATION ENTRY COMPLETED FROM DSC. Press any key to escape." appears on the NBDP's display. Press any key on the NBDP Terminal Unit to erase the message.
- 2. Press the function key [F3] on the keyboard of the NBDP Terminal Unit to show the Operate menu.
- 3. Choose "Call Station" and then press the [Enter] key.

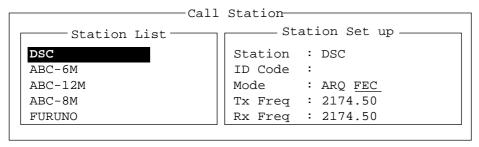

- 4. "DSC" is selected; press the [Enter] key to connect the communications line.
- 5. "Connect" appears in reverse video. Type and transmit your message, giving the following information:
 - a) Ship's name and call sign
 - b) Nature of distress and assistance needed
 - c) Description of your vessel
- 6. Press the function key [F10] (BREAK) to disconnect the line.

4.2 Receiving a Distress Alert

When you receive a distress alert from a ship in distress, the audio alarm sounds and the message "Distress call received." appears on the display. Press the [CANCEL] key to silence the audio alarm. Wait for the distress acknowledge call from a coast station. If you do not receive the distress acknowledge call from a coast station, which usually takes about five minutes from the time of reception of a distress alert, follow the appropriate flow chart in this section to determine your course of action.

Note 1: An asterisk (*) appearing in a distress alert call indicates error at asterisk location.

Note 2: If the Telex Distress Alert Button IC-302-DSC is connected, the aural alarm sounds and the IC-302-DSC's alarm lamp lights in red when a distress alert is received. To silence the aural alarm, press the [ALARM STOP] key.

Russian version


If another distress alert or urgent call is received just after pressing the [CALL] key (for distress alert relay and distress acknowledgement), the most recently received call has priority.

4.2.1 Distress alert received on MF band

Do the following:

- Continue watching on 2182 kHz. Wait for coast station to acknowledge the distress call.
 Watch until "SEELONCE FINI" is announced.
- If multiple DSC distress alerts are received from the same ship in distress and it is beyond a doubt in your vicinity, a DSC acknowledgement may, after consultation with an RCC or Coast Station, be sent to terminate the call by DSC.
- In no case is a ship permitted to transmit a DSC distress relay call upon receipt of a DSC distress alert on MF channel 2187.5 kHz.


Action for ship receiving distress alert on MF band

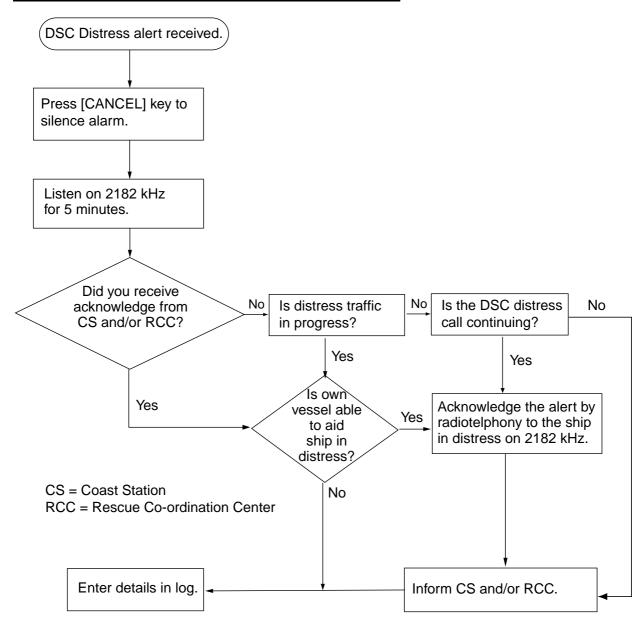

Sending the distress acknowledge call to ship in distress (on MF band)

Transmit the distress acknowledge call to the ship in distress only when you do not receive it from a coast station and **you are able to aid the ship in distress**. First, transmit the distress acknowledge to the ship in distress by telephone. If the DSC call is continuing, terminate transmission of the distress alert as follows:


1. The audio alarm sounds and the display shows the message "Distress call received." when your ship receives a distress call.

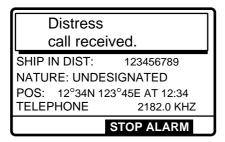


2. Press the [CANCEL] key to silence the audio alarm and the display changes as below.




- 3. If you do not receive the distress acknowledge call from a coast station and you have received the distress alert more than twice, contact the ship in distress over radiotelephone. If the distress alert continues, terminate the alert by rotating the [ENTER] knob to choose ANSWER, push the [ENTER] knob and then go to step 4 to send the distress acknowledge call to the ship in distress.
- 4. Push the [ENTER] knob to open the CALL TYPE menu.

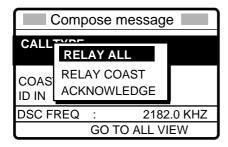

5. Rotate the [ENTER] knob to choose ACKNOWLEDGE and then push the [ENTER] knob. The following display appears.

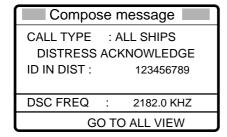

6. Press the [CALL] key, and the message "Category distress transmit sure?" appears. Continue press the key until the message "Distress acknowledge call in progress appears, to transmit the distress acknowledge call to the ship in distress.

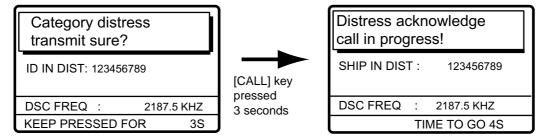


4.2.2 Distress alert received on HF band

If you receive a distress alert on the HF band, the ALARM lamp lights and the audio alarm sounds. Press the [CANCEL] key to silence the audio alarm. Wait for the distress acknowledge from a coast station. If you do not receive the distress acknowledge within five minutes, follow the instructions below to determine your course of action.

- Watch on the distress frequency.
- Relay the distress alert in the following cases:
 - You have not received a distress acknowledge call from a coast station within five minutes after receiving a distress call.
 - You have not received a distress relay from other ship.
 - You cannot receive distress communications from other ship over radiotelephone.
 - If it is clear the ship or persons in distress are not in the vicinity and/or other crafts are better placed to assist, superfluous communications which could interfere with search and rescue activities should be avoided. Details should be recorded in the appropriate log book.
 - The ship relaying the distress alert should establish communications with the station controlling the distress as directed and render such assistance as required and appropriate.

Action for ships receiving distress alert on HF band

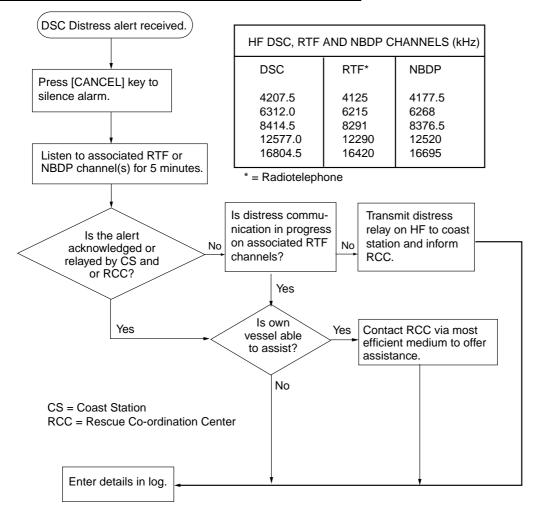

Sending the distress relay to coast station (on HF band)

1. The audio alarm sounds and the display changes as below when a distress call is received.




2. Press the [CANCEL] key to silence the audio alarm, and the display changes as below.




3. Rotate the [ENTER] knob to choose ANSWER and then push the [ENTER] knob.


4. Push the [ENTER] knob to open the CALL TYPE menu.

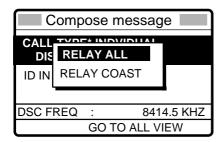

- 5. If you know the ID of the nearest coast station, choose RELAY COAST and then push the [ENTER] knob.
- 6. Push [ENTER] knob and key in ID of coast station where to send the distress relay and then push the [ENTER] knob.

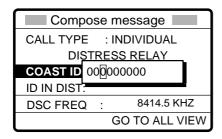


7. Push the [ENTER] knob to open the DSC FREQ. menu.

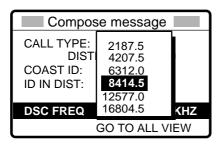

- 8. Choose appropriate frequency and then push the [ENTER] knob. You should first choose 8414.5 kHz.
- 9. Press the [CALL] key, and the display changes as shown at the top of the next page.

4 DISTRESS OPERATIONS

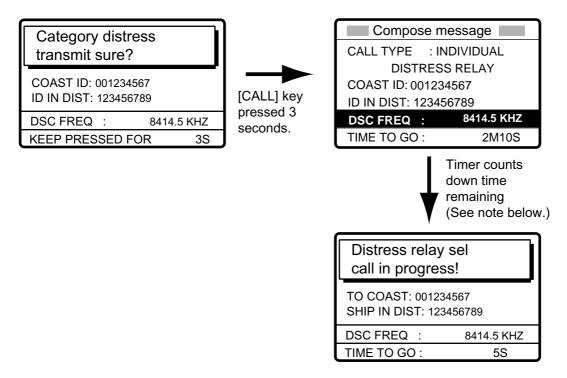

Note: If a coast station acknowledges the call before the timer counts down to zero, press the [CANCEL] key to cancel the distress relay call.

10. After the call is transmitted, the message "Wait for distress relay acknowledge." appears. After you have received the distress acknowledgement from the coast station, communicate with the coast station by telephone, over the DSC frequency specified. If you do not receive the distress acknowledgement from a coast station after the timer counts down to zero, transmit the distress relay again, over a different frequency.

4.3 Sending Distress Relay on Behalf of a Ship in Distress


4.3.1 Sending distress relay to coast station

You may send the distress relay to a coast station on behalf of a ship in distress in the following cases:


- You are near the ship in distress and the ship in distress cannot transmit the distress alert.
- When the master or person responsible for your ship considers that further assistance is necessary.

In the above cases never use the [DISTRESS] button to transmit the distress relay.


1. Press the [2/DSC] key and then push the [ENTER] knob.

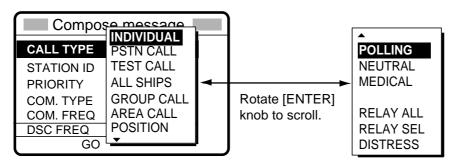

- 2. Rotate the [ENTER] knob to choose RELAY SEL and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the COAST ID input window.

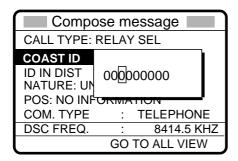


- 4. Key in COAST ID with the numeric keys and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the ID IN DIST window.

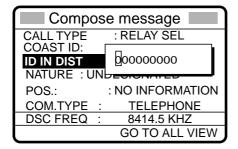


6. Key in ID of ship in distress with the numeric keys and then push the [ENTER] knob. If you do not know the ID, simply push the [ENTER] knob without entering ID.

7. Push the [ENTER] knob to open the NATURE menu.

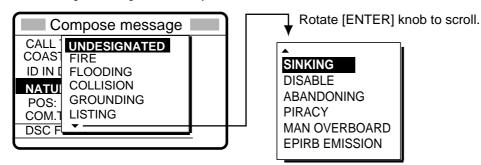


- 8. Rotate the [ENTER] knob to choose nature of distress and then push the [ENTER] knob. If you do not know the nature of distress, choose UNDESIGNATED.
- 9. Push the [ENTER] knob to open the POS. menu.

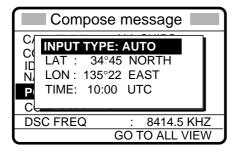


- 10. Enter position of ship in distress, following 1), 2) or 3) below.
 - 1) For automatic input, push the [ENTER] knob twice and then go to step 11.
 - **2) For manual input,** push the [ENTER] knob to open the INPUT TYPE menu, rotate the [ENTER] knob to choose MANUAL and then push the [ENTER] knob. Enter latitude and longitude of ship in distress and time as follows:
 - a) Push the [ENTER] knob. Enter latitude and then push the [ENTER] knob.
 - b) Push the [ENTER] knob. Enter longitude and then push the [ENTER] knob.
 - c) Push the [ENTER] knob. Enter UTC time and then push the [ENTER] knob. Go to step 11.

Note: If you cannot confirm time, enter 88:88 to input NO INFO as the time.

- 3) If you cannot confirm position of ship in distress, push the [ENTER] knob to open the INPUT TYPE menu, rotate the [ENTER] knob to choose NO INFO and then push the [ENTER] knob. Go to step 11.
- 11. Push the [ENTER] knob to open the COM. TYPE menu.

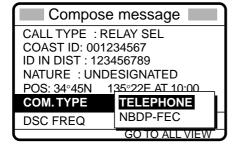


12. Rotate the [ENTER] knob to choose TELEPHONE and then push the [ENTER] knob. (NBDP-FEC may also be used.) Push the [ENTER] knob to open the DSC FREQ menu.

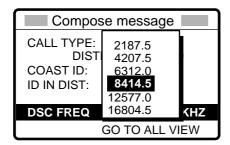


13. Rotate the [ENTER] knob to choose appropriate DSC (NBDP) frequency and then push the [ENTER] knob. The display now looks something like the one below in case of radiotelephone.



14. Press the [CALL] key, and the message "Category distress transmit sure?" appears. Continue pressing the key until the display shows "Distress relay sel call in progress!" to send the distress relay call.

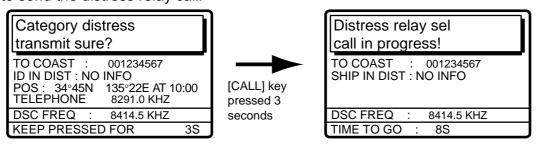

15. The equipment then waits for acknowledgement of the distress relay, displaying the message shown below. If the distress relay is not acknowledged within five minutes, the message "No response. Try relay again." appears. If this occurs, send the distress relay again.

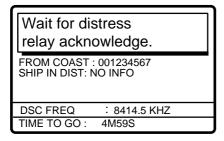

16. When you receive the distress relay acknowledge call, the audio alarm sounds and the display shown below appears.



17. Press the [CANCEL] key to silence the audio alarm. The following display appears.




18. Communicate with the coast station.


4.3.2 Sending distress relay to all ships

Use this procedure to send the distress relay to all ships.

1. Press the [2/DSC] key and then push the [ENTER] knob.

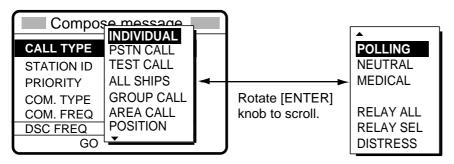


- 2. Rotate the [ENTER] knob to choose RELAY ALL and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the ID IN DIST menu.

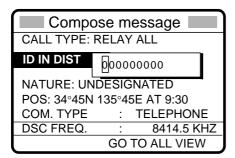


4. Key in ID of ship in distress (if known) with the numeric keys and then push the [ENTER] knob. (If you do not know the ID enter push the [ENTER] knob without entering ID.)

5. Push the [ENTER] knob to open the NATURE menu.

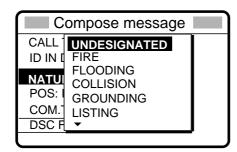


- 6. Rotate the [ENTER] knob to choose nature of distress and then push the [ENTER] knob. (If you do not know the nature of distress, choose UNDESIGNATED.)
- 7. Push the [ENTER] knob to open the POS. menu, where you enter the position of the ship in distress and time, manually or automatically.

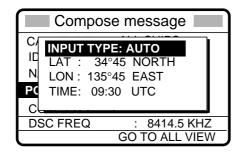

- 8. Enter position of the ship in distress, following 1), 2) or 3) below.
 - 1) For automatic input, push the [ENTER] knob twice. Go to step 9.
 - **2) For manual input,** push the [ENTER] knob to open the INPUT TYPE menu, rotate the [ENTER] knob to choose MANUAL and then push the [ENTER] knob. Enter latitude and longitude of ship in distress and time as follows:
 - a) Push the [ENTER] knob. Enter latitude and then push the [ENTER] knob.
 - b) Push the [ENTER] knob. Enter longitude and then push the [ENTER] knob.
 - c) Push the [ENTER] knob. Enter UTC time and then push the [ENTER] knob. Go to step 9.


Note: If you cannot confirm time, enter 88:88 to input NO INFO as the time.

- **3)** If you cannot confirm position of ship in distress, push the [ENTER] knob to open the INPUT TYPE menu, rotate the [ENTER] knob to choose NO INFO and then push the [ENTER] knob. Go to step 9.
- 9. Push the [ENTER] knob to open the COM. TYPE menu.

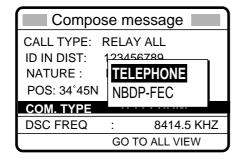


10. Rotate the [ENTER] knob to choose TELEPHONE (or NBDP-FEC) and then push the [ENTER] knob.


11. Push the [ENTER] knob to open the DSC FREQ menu.

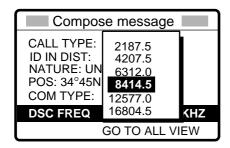

12. Rotate the [ENTER] knob to choose appropriate frequency and then push the [ENTER] knob. The display now looks something like the one below.

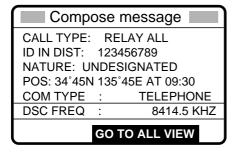

13. Press the [CALL] key, and the message "Category distress transmit sure!" appears. Continue pressing the key until the display shows "Distress relay all call in progress!" to send the distress relay call.

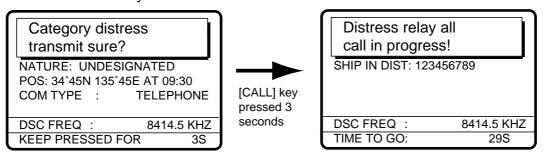

14. After the call is sent, the radiotelephone screen automatically appears.

4.4 Receiving Distress Relay All Ships

When you receive a distress relay for all ships, continue monitoring distress and safety frequencies.

1. The audio alarm sounds and the display looks like the one below when a distress relay all ships call is received.



2. Press the [CANCEL] key to silence the alarm, and the display changes as below.




- 3. Press the [CANCEL] key to go to the radiotelephone screen.
- 4. Watch distress/safety frequency.

4.5 Receiving Distress Relay from Coast Station

When you receive a distress relay call from a coast station, continue monitoring distress and safety frequencies.

1. The audio alarm sounds and the display looks like the one in the left-hand figure below when a distress relay is received from a coast station. Press the [CANCEL] key to silence the audio alarm, and the display changes as in the right-hand figure below.

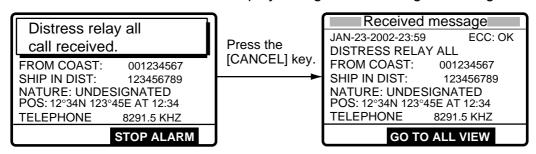

- 2. Press the [CANCEL] key to go to the radiotelephone screen.
- 3. Watch distress/safety frequency.

4 DISTRESS OPERATIONS

(This page intentionally left blank.)

5 CALLING, RECEIVING


This chapter provides the information necessary for general calling and receiving.

5.1 All Ships Call

When an urgent but not life-endangering situation arises on your ship, for example, engine trouble, send an all ships call to request assistance.


After sending the call, you can communicate by voice over the radiotelephone, or send a message by telex. For telephone, do the following before beginning actual communications:

URGENCY priority: Say PAN three times followed by your call sign. SAFETY priority: Say SECURITE three times followed by your call sign.

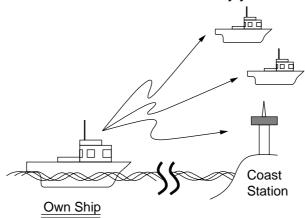


5.1.1 Sending an all ships call

1. Press the [2/DSC] key followed by pushing the [ENTER] knob to display the CALL TYPE menu.

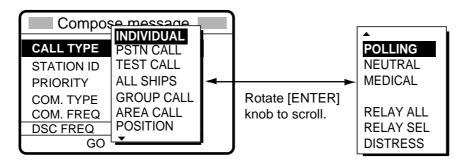


2. Rotate the [ENTER] knob to choose ALL SHIPS and then push the [ENTER] knob.


3. Push the [ENTER] knob to display the PRIORITY menu.

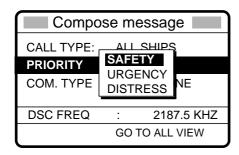


- 4. Rotate the [ENTER] knob to choose SAFETY or URGENCY as appropriate and then push the [ENTER] knob. (DISTRESS should be used only when there is a life endangering situation on board your vessel.)
- 5. Push the [ENTER] knob to open the COM. TYPE menu.

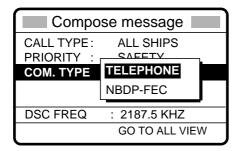

- 6. Rotate the [ENTER] knob to choose appropriate communications mode and then push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the DSC FREQ menu.

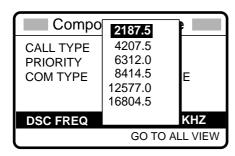

- 8. Rotate the [ENTER] knob to choose frequency and then push the [ENTER] knob.
- 9. Press the [CALL] key to send the call. For safety and urgency call the display shows "All ships call in progress." For distress call, the display shows "Category distress transmit sure? If you are sure to transmit with distress priority, continue pressing the [CALL] key to show "All ships call in progress!".

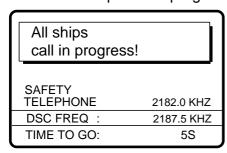

10. The radiotelephone screen automatically appears after the call is sent (timer counts down to zero). The equipment is then set up for telephone (or NBDP) and safety or urgency priority, using DSC pair frequencies.

Sending message by NBDP Terminal Unit


- The message "STATION ENTRY COMPLETED FROM DSC. Press any key to escape." appears on the NBDP's display. Press any key on the NBDP Terminal Unit to erase the message.
- 2. Press the function key [F3] on the keyboard of the NBDP Terminal Unit to show the Operate menu.
- 3. Choose "Call Station" and then press the [Enter] key.
- 4. "DSC" is selected; press the [Enter] key. "Connect" appears in reverse video.
- 5. Type and transmit your message.
- 6. When you have finished sending your message, press the [F10] key to disconnect the line.

5.1.2 Receiving an all ships call

1. When an all ships call is received, the audio alarm sounds and the display looks something like the one shown below.



2. Press the [CANCEL] key to silence the alarm. The display shows partial contents of the all ships call as below.

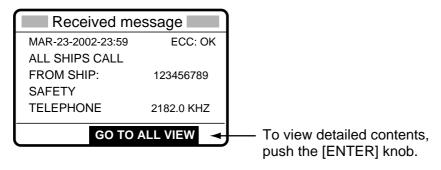


3. Press the [CANCEL] key again to go to the radiotelephone screen. Watch for communications about all ships call on the radiotelephone.

5.2 Individual Call


The individual call is for calling a specific station. After sending an individual call, called ACK RQ transmission, wait to receive the acknowledge back (ACK BQ) signal from the receiving station.

5.2.1 Sending an individual call


1. Press the [2/DSC] key and then push the [ENTER] knob to open the CALL TYPE menu.

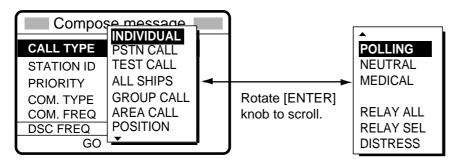


- 2. Rotate the [ENTER] knob to choose INDIVIDUAL and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the STATION ID menu.

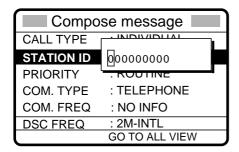


- 4. Use the numeric keys to key in the ID of the station where to send the call and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the PRIORITY menu.

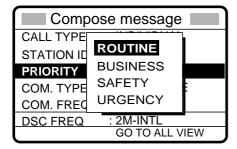

- 6. Rotate the [ENTER] knob to choose appropriate priority (normally ROUTINE) and then push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the COM. TYPE menu.

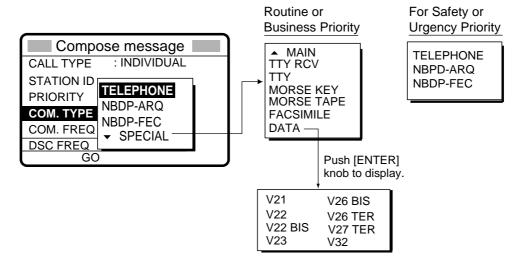

- 8. Rotate the [ENTER] knob to choose communications type desired and then push the [ENTER] knob.
- 9. **For routine and business priority**, push the [ENTER] knob to open the COM. FREQ menu. **For safety and urgency priority**, go to step 11.

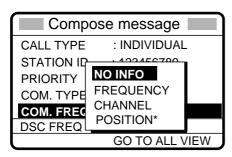

* POSITION is displayed if a coast station is specified at step 3.


10. Rotate the [ENTER] knob to choose communication frequency setting method desired and then push the [ENTER] knob. For FREQUENCY and CHANNEL, see "How to Set Working Frequency, Channel" on the next page. NO INFO and POSITION let the receiving station set the working frequency. Choose NO INFO or POSITION to send the call to a coast station; FREQUENCY or CHANNEL to send the call to a ship station.

How to Set Working Frequency, Channel

To send a call, set the working frequency as below, to communicate with the receiving station. The working frequency can be entered by Tx and Rx frequencies or channel number.

Routine or ship's business priority

1. After selecting FREQUENCY or CHANNEL, one of the following pop-up windows appears.

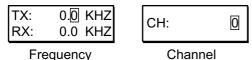

- 2. Key in TX frequency or channel with the numeric keys. (For channel, push the [ENTER] knob to finish.)
- 3. Rotate the [ENTER] knob to choose the RX field, key in RX frequency and then push the [ENTER] knob to finish.

Safety or urgency priority


For safety or urgency priority the communication frequency cannot be selected; it is automatically set to the pair frequency as set for the DSC frequency.

11. Follow the instructions on the next page to choose DSC frequency desired.


How to Set DSC Frequency

Routine or ship's business priority

1. Rotate the [ENTER] knob to choose DSC FREQ and then push the [ENTER] knob.

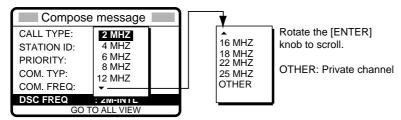

2. Rotate the [ENTER] knob to choose appropriate DSC band and then push the [ENTER] knob. One of the menus shown below appears depending on the band selected.

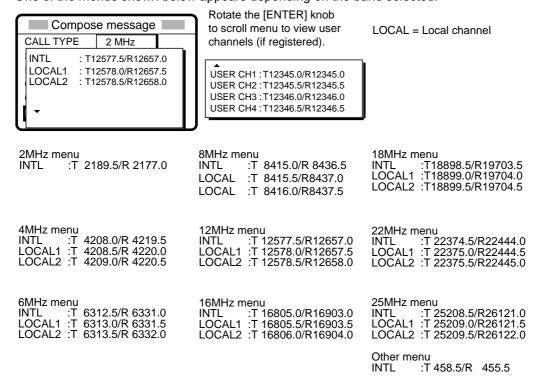


3. Rotate the [ENTER] knob to choose DSC frequency and then push the [ENTER] knob. The display shows the DSC frequency band selected, at "DSC FREQ".

Safety or urgency priority

For safety or urgency priority "COM. FREQ" is automatically set to the same pair frequency as the DSC frequency.

1. Rotate the [ENTER] knob to choose DSC FREQ and then push the [ENTER] knob.

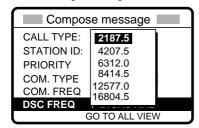

2. Rotate the [ENTER] knob to choose appropriate frequency and then push the [ENTER] knob.


12. Press the [CALL] key to send the individual call (transmission time: about seven seconds). The display shows the message "Individual request call in progress!" while the call is being sent.

Individual request call in progress!


TO SHIP: 123456789
ROUTINE
TELEPHONE 2138.0 KHZ
DSC FREQ: 2177.0 KHZ
TIME TO GO: 7S

Note: When the channel is in use,
"CH BUSY" appears at the
lower left-hand side of the
screen.
Press [CALL] key for forced
transmission.


13. After the call is sent, the equipment waits for acknowledgement of the call, showing the display below.

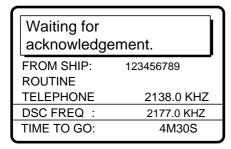


14. The timer starts counting down the maximum time to wait for acknowledgement, five minutes, randomly set. One of the following three messages appears. ("No response! Try calling again." appears after the timer counts down to zero. It means the receiving station did not respond.)

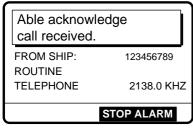

Able acknowledge call received Unable

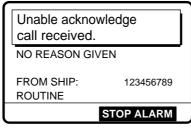

Unable acknowledge call received

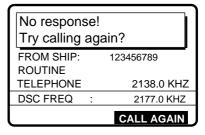

No response from station

15. Do one of the following depending on the message shown in step 14.

Able acknowledge call received

Communicating by radiotelephone

The audio alarm sounds; press the [CANCEL] key to silence it, and the display changes as below. Press the [CANCEL] key to go to the radiotelephone screen. The working frequency is automatically set; you may start voice communications by radiotelephone.




Sending message by NBDP Terminal Unit

- The message "STATION ENTRY COMPLETED FROM DSC. Press any key to escape." appears on the NBDP's display. Press any key on the NBDP Terminal Unit to erase the message.
- 2. Press the function key [F3] on the keyboard of the NBDP Terminal Unit to show the Operate menu.
- 3. Choose "Call Station" and then press the [Enter] key.
- 4. "DSC" is selected; press the [Enter] key. "Connect" appears in reverse video.
- 5. Type and transmit your message.
- 6. When you have finished sending your message, press the [F10] key to disconnect the line.

Unable acknowledge call received

The alarm sounds; press the [CANCEL] key to silence the alarm. The display looks something like the one below. Send the call again later. If the coast station sends the message "QUEUE INDICATION," wait until your turn arrives.

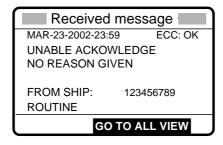

Reason for unable to acknowledge:
NO REASON GIVEN
CONGESTION AT SWITCHING CENTRE*
BUSY
QUEUE INDICATION*
STATION BARRED*
NO OPERATOR AVAILABLE*
OPERATOR TEMPORARILY UNAVAILABLE*
EQUIPMENT DISABLE
MODE NOT USABLE
CHANNEL NOT USABLE

No response! Try calling again?

Re-send call: Push the [ENTER] knob followed by pressing the [CALL] key. **Cancel call:** Press the [CANCEL] key to go to radiotelephone screen.

^{*} Coast station use

5.2.2 Receiving an individual call


When own ship receives an individual call, acknowledgement is automatically or manually sent depending on the comply-type setting (see paragraph 7.2). The relationship between comply type and automatic/manual acknowledge is as shown in the table below.

Comply type	ABLE	UNABLE
Setting of		
[5/ACQ /SQ] key		
AUTO ACK	Can send acknowledge	Can send UNABLE
	automatically	automatically.
MANUAL ACK	Can send acknowledge	Can send UNABLE manually.
	manually	


Note: The handset must be on hook to enable automatic acknowledge.

Sending automatic acknowledge (ACK BQ) with comply type "ABLE"

1. When an individual call is received and the automatic acknowledge feature is active (AUTO ACK) and the comply type is "ABLE," the display shown below appears. This display indicates that the auto acknowledge (ACK BQ) call is being sent.

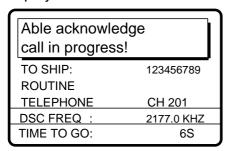

2. It takes about seven seconds to transmit the call, after which the audio alarm sounds and the following message appears.

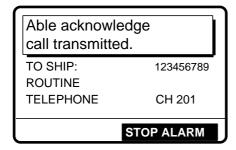

3. Press the [CANCEL] key to silence the alarm. The following display appears.



4. Press the [CANCEL] key. You can now communicate with the party, over the radiotelephone frequency specified or by the NBDP terminal unit.


Communicating by NBDP Terminal Unit

After acknowledging an individual call, do the following to send a message by NBDP Terminal Unit.

- 1. The control unit's display shows "OCCUPIED" and the TX and RX frequencies.
- 2. The message from the other station appears on your NBDP Terminal Unit.
- 3. After receiving the message from other station, type your message and then transmit it.
- 4. Press the function key [F10] (BREAK) to disconnect the line.

Sending automatic acknowledge (ACK BQ) with comply type "UNABLE"

1. When an individual call is received and the automatic acknowledge feature is active (AUTO ACK) and comply type is "UNABLE," the display shown below appears, indicating that the auto acknowledge call with UNABLE (ACK BQ) is being sent.

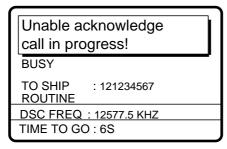

2. It takes about seven seconds to transmit the call, after which the audio alarm sounds and the following message appears.




3. Press the [CANCEL] key to silence the alarm. The following display appears.



4. Push the [ENTER] knob to confirm the message. Rotate the [ENTER] knob to scroll the message. Choose GO TO EASY VIEW and then push the [ENTER] knob.

5. If you want to send a proposal, rotate the [ENTER] knob to choose RE-SEND and then push the [ENTER] knob.

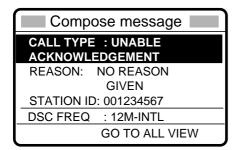

- a) Push the [ENTER] knob to open the CALL TYPE menu.
- b) Rotate the [ENTER] knob to choose ABLE and then push the [ENTER] knob.
- c) Prepare message as appropriate and then press the [CALL] key to transmit the message. After you receive acknowledgement from the other party you can start communications.

Manually acknowledging individual call with "ABLE"

 When an individual call is received and the equipment is set up with manual acknowledge (MANUAL ACK) and comply type "ABLE," the alarm sounds and the display looks like the one below.




2. Press the [CANCEL] key to silence the alarm. The display changes as shown below.




To view contents, rotate [ENTER] knob to choose ALL VIEW and then push [ENTER] knob.


3. Rotate the [ENTER] knob to choose ANSWER and then push the [ENTER] knob. Push the [ENTER] knob again to open the CALL TYPE menu.

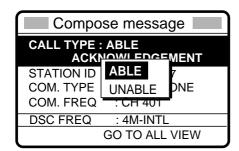

4. Rotate the [ENTER] knob to choose ABLE and then push the [ENTER] knob. The display changes as below. (Working frequency is automatically set as specified by other party.)

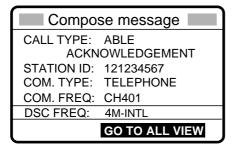

5. Press the [CALL] key to send the call. The display changes as below.

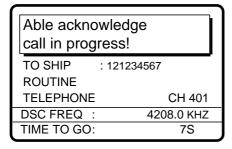

6. After the call is completely sent (transmission time: 7 sec.), the radiotelephone screen appears (if the communications mode is telephone). You can begin voice communications by radiotelephone. For NBDP operation, do the following:

Communicating by NBDP Terminal Unit

After acknowledging an individual call, do the following to communicate by NBDP Terminal Unit.

- 1. The control unit's display shows "OCCUPIED" and the TX and RX frequencies.
- 2. The message from the other party appears on your NBDP Terminal Unit.
- 3. After receiving the message from the other party, type your message and transmit it.
- 4. Press the function key [F10] (BREAK) to disconnect the line.

Manually acknowledging individual call with "UNABLE"

 When an individual call is received and the equipment is set up with manual acknowledge, the alarm sounds and the display shows the message "Individual request call received."




2. Press the [CANCEL] key to silence the alarm. The display changes as below.




To view contents, rotate [ENTER] knob to choose ALL VIEW and push the [ENTER] knob.

- 3. Rotate the [ENTER] knob to choose ANSWER and then push the [ENTER] knob.
- 4. Push the [ENTER] knob to open the CALL TYPE menu.

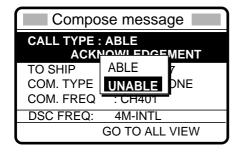


- 5. Rotate the [ENTER] knob to choose UNABLE and then push the [ENTER] knob.
- 6. Push the [ENTER] knob to open the REASON menu.

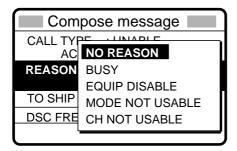


7. Rotate the [ENTER] knob to choose an appropriate reason and then push the [ENTER] knob.

8. The display changes as below.

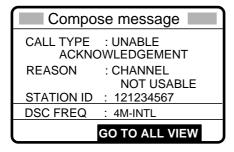

9. Press the [CALL] key to send the call. The display shows "Unable acknowledge call in progress!" while the call is being sent.

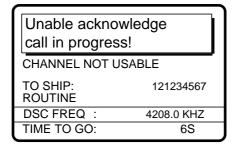


10. The timer counts down the time remaining until the call is sent (transmission time: about seven seconds). The DSC standby screen appears after the call has been transmitted.

5.3 Group Call


A group call is for calling a specific group by specifying its group ID.

5.3.1 Sending a group call

1. Press the [2/DSC] key and then push the [ENTER] knob to open the CALL TYPE menu.

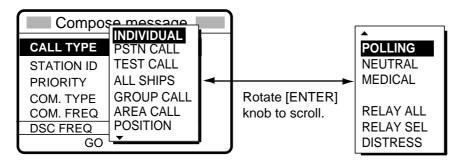


- 2. Choose GROUP CALL and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the GROUP ID menu.

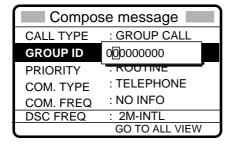


4. Key in group ID (nine digits) with the numeric keys and then push the [ENTER] knob.


5. Push the [ENTER] knob to open the PRIORITY menu.

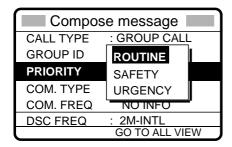


- 6. Rotate the [ENTER] knob to choose priority desired and then push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the COM. TYPE menu.

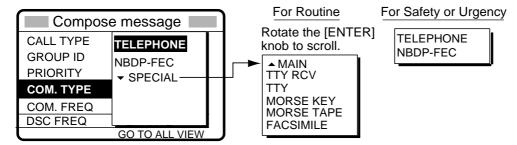


- 8. Rotate the [ENTER] knob to choose communication type desired and then push the [ENTER] knob.
- 9. For routine priority, push the [ENTER] knob to open the COM. FREQ menu. For safety or urgency priority, go to step 11.

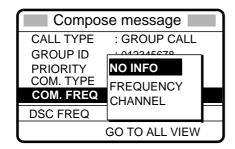


- 10. Rotate the [ENTER] knob to choose communication frequency desired and then push the [ENTER] knob. (See page 5-6 for details.) NO INFO lets other party choose communication frequency.
- 11. Push the [ENTER] knob to open the DSC FREQ menu.

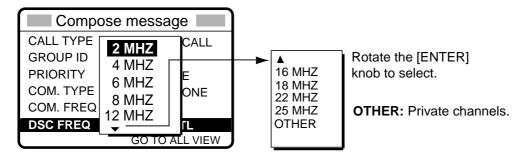

12. Rotate the [ENTER] knob to choose DSC band desired and then push the [ENTER] knob to open the DSC FREQ menu. Rotate the [ENTER] knob to choose DSC frequency desired and then push the [ENTER] knob. (See "How to set DSC frequency" on page 5-7 for details.)

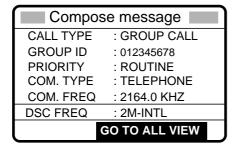

13. Press the [CALL] key to send the group call (transmission time: about seven seconds). The display shows "Group call in progress!" while the call is being sent.

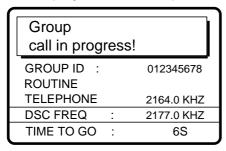

- 14. The radiotelephone screen automatically appears after the call is sent, if frequency was specified.
- 15. If you selected TELEPHONE at step 7, communicate by radiotelephone. For NBDP, do the following:

Sending message by NBDP Terminal Unit

- The message "STATION ENTRY COMPLETED FROM DSC. Press any key to escape." appears on the NBDP's display. Press any key on the NBDP Terminal Unit to erase the message.
- 2. Press the function key [F3] on the keyboard of the NBDP Terminal Unit to show the Operate menu.
- 3. Choose "Call Station" and then press the [Enter] key.
- 4. "DSC" is selected; press the [Enter] key. "Connect" appears in reverse video.
- 5. Type and transmit your message.
- 6. When you have finished sending your message, press the [F10] key to disconnect the line.

5.3.2 Receiving a group call

Group ID must be registered in order to receive a group call. See paragraph 6.2.

1. The audio alarm sounds and the display shows "Group call received" when a group call is received.



2. Press the [CANCEL] key to silence the alarm, and the display changes as below.



3. Press the [CANCEL] key to go to the radiotelephone screen. Watch on the working frequency.


Receiving message by NBDP Terminal Unit

After receiving a group call, do the following:

- 1. The controls unit's display shows "OCCUPIED" and the TX and RX frequencies.
- 2. The message from the sending station appears on your NBDP Terminal Unit.


5.4 Geographical Area Call

The geographical area call is for sending a call to all ships within the area you designate in your geographical area call. In the figure below, for example, the call will be sent to all ships within 24-34°N, 135-140°W.

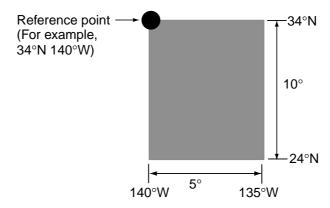


5.4.1 Sending a geographical area call

1. Press the [2/DSC] key and then push the [ENTER] knob to open the CALL TYPE menu.

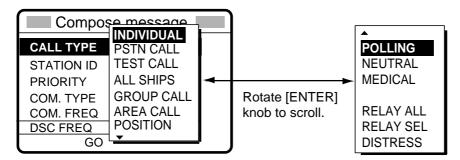


- 2. Rotate the [ENTER] knob to choose AREA CALL and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the AREA menu.

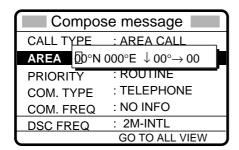


4. Using the numeric keys, enter latitude and longitude of reference point and southerly degrees and easterly degrees of area. To change coordinate, choose it and press the [1] key for North or East; [2] key for South or West. After entering data, push the [ENTER] knob.


5. Push the [ENTER] knob to open the PRIORITY menu.

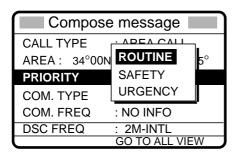


- 6. Rotate the [ENTER] knob to choose priority desired and then push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the COM. TYPE menu.

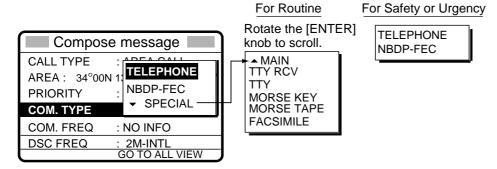

- 8. Rotate the [ENTER] knob to choose communication type desired and then push the [ENTER] knob.
- 9. **For routine priority**, push the [ENTER] knob to open the COM. FREQ menu. **For safety or urgency priority**, go to step 12.

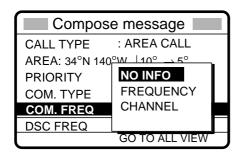

- Rotate the [ENTER] knob to choose frequency or channel and then enter frequency or channel. (See page 5-6 for details.)
- 11. Push the [ENTER] knob to open the DSC FREQ menu.

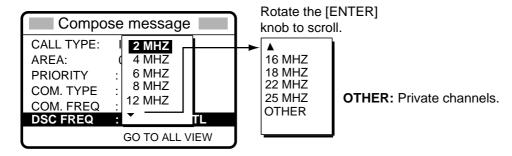


12. Rotate the [ENTER] knob to choose DSC band desired and then push the [ENTER] knob to open the DSC FREQ menu.

13. Rotate the [ENTER] knob to choose DSC frequency desired and then push the [ENTER] knob. (See "How to set DSC frequency" on page 5-7 for details.) Your display should now look something like one below.



14. Press the [CALL] key to send the geographical area call (transmission time: about seven seconds). The display shows "Geographical area call in progress!" while the call is being sent.

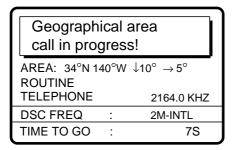

15. After the call is sent the radiotelephone screen appears. If you chose radiotelephone at step 8, you can now communicate with the other party. For NBDP, do the following:

Sending message by NBDP Terminal Unit


- The message "STATION ENTRY COMPLETED FROM DSC. Press any key to escape." appears on the NBDP's display. Press any key on the NBDP Terminal Unit to erase the message.
- 2. Press the function key [F3] on the keyboard of the NBDP Terminal Unit to show the Operate menu.
- 3. Choose "Call Station" and then press the [Enter] key.
- 4. "DSC" is selected; press the [Enter] key. "Connect" appears in reverse video.
- 5. Type and transmit your message.
- 6. When you have finished sending your message, press the [F10] key to disconnect the line.

5.4.2 Receiving a geographical area call

1. The alarm sounds and the display shows "Geographical area call received" when a geographical area call is received.



2. Press the [CANCEL] key to silence the alarm. The display changes as below.

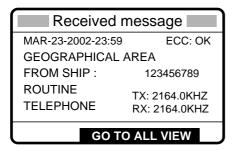

3. Press the [CANCEL] key to go to the radiotelephone screen. Watch on the working frequency specified in the geographic area call.

Receiving message by NBDP Terminal Unit

After receiving a geographic call, do the following to watch by NBDP Terminal Unit:


- 1. The control unit's display shows "OCCUPIED" and the TX and RX frequencies.
- 2. The message from the sending station appears on your NBDP Terminal Unit.

5.5 Neutral Craft Call


The neutral craft call, which contains own ship position and ID, informs all ships that your ship is not a participant in armed conflict. Send the call **BEFORE** entering an area of armed conflict.

5.5.1 Sending a neutral craft call


1. Press the [2/DSC] key and then push the [ENTER] knob to display the CALL TYPE menu.

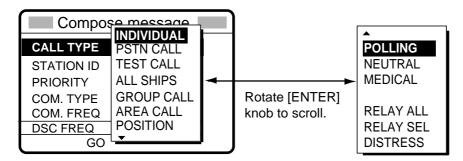

- 2. Rotate the [ENTER] knob to choose NEUTRAL and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the PRIORITY menu.

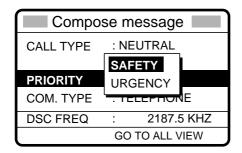

- 4. Rotate the [ENTER] knob to choose appropriate priority and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the COM. TYPE menu.
- 6. Rotate the [ENTER] knob to choose communication type desired (radiotelephone or NBDP-FEC) and then push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the DSC FREQ menu.

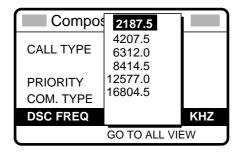

8. Rotate the [ENTER] knob to choose appropriate frequency and then push the [ENTER] knob.



9. Press the [CALL] key to send the neutral craft call (transmission time: approx. 7 sec.).



10. After the call is sent the radiotelephone screen appears. Inform all ships by radiotelephone that your ship is not a participant in armed conflict.

Sending message by NBDP Terminal Unit

- 1. The message "STATION ENTRY COMPLETED FROM DSC. Press any key to escape." appears on the NBDP's display. Press any key on the NBDP Terminal Unit to erase the message.
- 2. Press the function key [F3] on the keyboard of the NBDP Terminal Unit to show the Operate menu.
- 3. Choose "Call Station" and then press the [Enter] key.
- 4. "DSC" is selected; press the [Enter] key. "Connect" appears in reverse video.
- 5. Type and transmit your message.
- 6. When you have finished sending your message, press the [F10] key to disconnect the line.

5.5.2 Receiving a neutral craft call

1. When a neutral craft call is received the alarm sounds and the display changes as below.



2. Press the [CANCEL] key to silence the alarm. The display changes as below.



3. Press the [CANCEL] key to go to the radiotelephone screen. Watch on the working frequency specified by radiotelephone or NBDP.

Receiving message by NBDP Terminal Unit

After receiving a neutral craft call, do the following to watch by NBDP Terminal Unit.


- 1. The control unit's display shows "OCCUPIED" and the TX and RX frequencies.
- 2. The message from the sending station appears on your NBDP Terminal Unit.

5.6 Medical Transport Call

The medical transport call informs all ships, by urgency priority, that own ship carries medical supplies.

5.6.1 Sending a medical transport call


1. Press the [2/DSC] key and then push the [ENTER] knob to open the CALL TYPE menu.

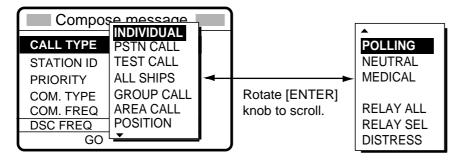


2. Rotate the [ENTER] knob to choose MEDICAL and then push the [ENTER] knob.

Note: PRIORITY is automatically selected to URGENCY.


- 3. Push the [ENTER] knob to open the COM. TYPE menu.
- 4. Rotate the [ENTER] knob to choose communication type desired (radiotelephone and NBDP-FEC) and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the DSC FREQ menu.

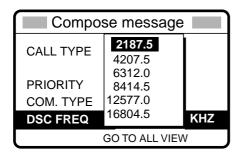

6. Rotate the [ENTER] knob to choose appropriate frequency and then push the [ENTER] knob. The display changes as below.

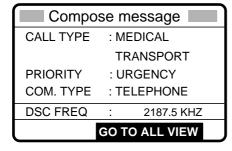

7. Press the [CALL] key to send the call (transmission time: about seven seconds). The display shows "Medical transport call in progress!" while the call is being sent.

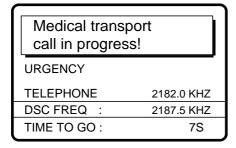


8. After the call is sent the radiotelephone screen automatically appears. Inform all ships (by radiotelephone) that your ship is transporting medical supplies. For NBDP do the following:

Sending message by NBDP Terminal Unit

- The message "STATION ENTRY COMPLETED FROM DSC. Press any key to escape." appears on the NBDP's display. Press any key on the NBDP Terminal Unit to erase the message.
- 2. Press the function key [F3] on the keyboard of the NBDP Terminal Unit to show the Operate menu.
- 3. Choose "Call Station" and then press the [Enter] key.
- 4. "DSC" is selected; press the [Enter] key. "Connect" appears in reverse video.
- 5. Type and transmit your message.
- 6. When you have finished sending your message, press the [F10] key to disconnect the line.

5.6.2 Receiving a medical transport call

1. When a medical transport call is received, the alarm sounds and the display looks as below.

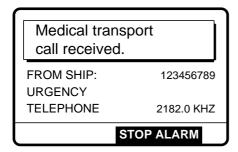

2. Press the [CANCEL] key to silence the alarm. The display changes as below.



3. Press the [CANCEL] key to go to the radiotelephone screen to watch on frequency specified.


Receiving message by NBDP Terminal Unit

After receiving a neutral craft call, do the following to watch by NBDP Terminal Unit.

- 1. The display shows "OCCUPIED" and the TX and RX frequencies.
- 2. The message from the sending station appears on your NBDP Terminal Unit.


5.7 Polling Call

Polling means confirming if own station is within communicating range with other station. This function only provides affirmative or negative response; it does not provide position information. Note that simultaneous polling to more than one station is not possible.

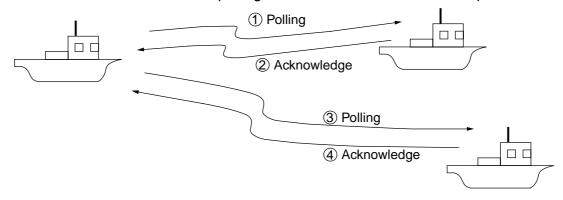


5.7.1 Sending a polling call


 Press the [2/DSC] key followed by pushing the [ENTER] knob to open the CALL TYPE menu.

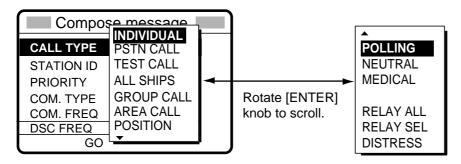


- 2. Rotate the [ENTER] knob to choose POLLING and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the STATION ID menu.

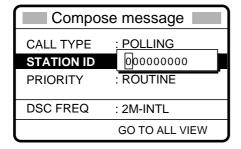


- 4. Key in ID of station with the numeric keys and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the PRIORITY menu.

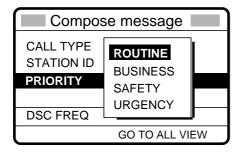


- 6. Rotate the [ENTER] knob to choose priority desired (usually ROUTINE) and then push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the DSC FREQ menu.

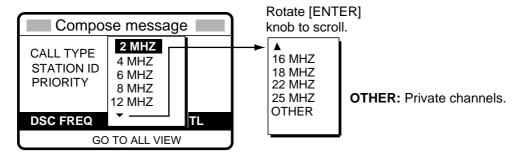


8. Rotate the [ENTER] knob to choose appropriate DSC band and then push the [ENTER] knob. Rotate the [ENTER] knob to choose DSC frequency desired and then push the [ENTER] knob. The display changes as below.

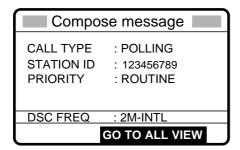


9. Press the [CALL] key to send the call (transmission time: about seven seconds). The display changes as below.

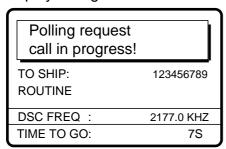


10. After the call is sent, the following display appears.

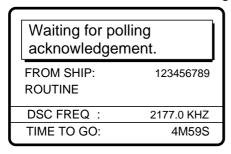

11. The timer counts down the time remaining to wait for acknowledgment of the call. One of the following displays appears. ("No response! Try calling again?" appears when there is no response from receiving station. The timer counts down to zero in this case.)

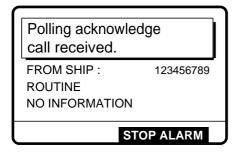

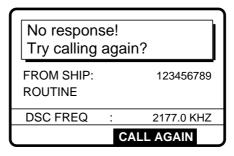


Polling acknowledge call received

No response

12. Do one of the following depending on the message shown in step 11.

Polling acknowledge call received

The audio alarm sounds; press the [CANCEL] key to silence the alarm. The display changes as below. You can confirm if called party is within communicating range.

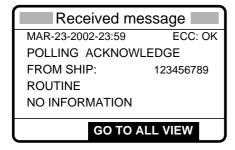

No response! Try calling again?


Re-send call: Push the [ENTER] knob followed by the [CALL] key.

Cancel call: Press the [CANCEL] key to return to the DSC standby screen.


5.7.2 Receiving a polling call

Automatic reply

1. The display changes as shown in the illustration below and the audio alarm sounds when a polling request call is received and the equipment is set up for automatic acknowledge: POLLING on the Auto Ack menu is ON and the [5/ACK/ SQ] key is set to show AUTO ACK on the display. For details see paragraph 7.2.

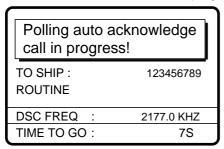

2. After the polling automatic acknowledge call is transmitted, the following display appears and the audio alarm sounds.

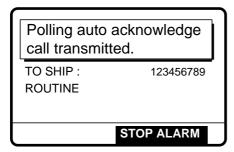

3. Press the [CANCEL] key to silence the alarm. The display changes as below.



4. Press the [CANCEL] key to return to the DSC standby screen.

Manual reply


1. The display changes as shown in the illustration below and the audio alarm sounds when a polling request call is received and the status of the [5/ ACK/SQ] key is MANUAL ACK.




2. Press the [CANCEL] key to silence the alarm. The display changes as below.



3. To respond to the call, rotate the [ENTER] knob to choose ANSWER and then push the [ENTER] knob. The display changes as below.

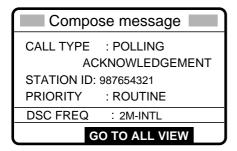

4. Press the [CALL] key to send the polling acknowledge call. The display changes as below.

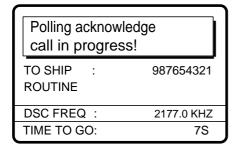


After the call is sent the DSC standby screen appears.


5.8 Position Call

There are two types of position calls: other station requires your ship's position and your ship requests position of another ship.

Finding position of other station

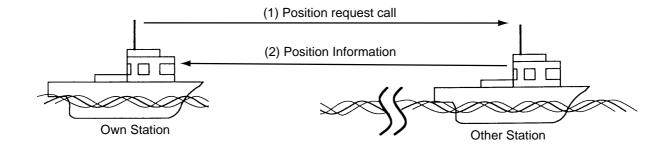


Sending own ship's position to other station

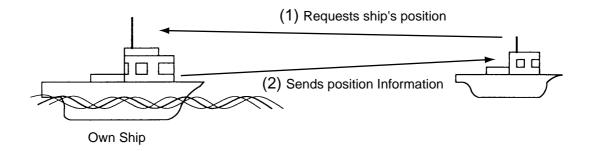


5.8.1 Position call: requesting other ship's position


1. Press the [2/DSC] key and then push the [ENTER] knob to open the CALL TYPE menu.

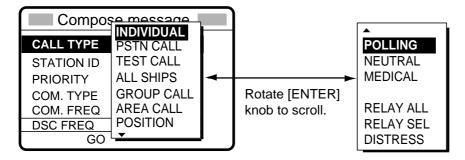


- 2. Rotate the [ENTER] knob to choose POSITION and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the STATION ID menu.

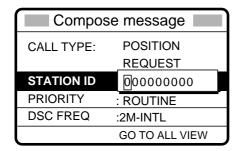

- 4. Key in ID of station (nine digits) which you want to know its position and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the PRIORITY menu.

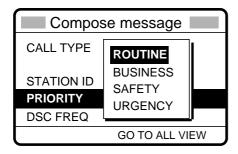


- 6. Rotate the [ENTER] knob to choose priority desired (usually ROUTINE) and then push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the DSC FREQ menu.

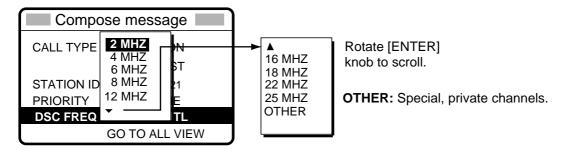

8. Rotate the [ENTER] knob to choose appropriate DSC band and then push the [ENTER] knob. Rotate the [ENTER] knob to choose DSC frequency desired and then push the [ENTER] knob.


9. The display now looks something like the illustration below.

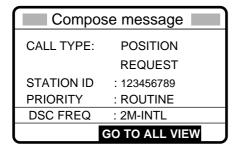

10. Press the [CALL] key to send the call (transmission time: about seven seconds). The following display appears.



11. After the call has been sent, the following display appears.

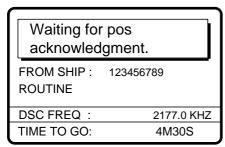

12. One of the following messages appears. ("No response! Try calling again?" appears after the time has counted down to zero, meaning there was no response from the party called.)



Position acknowledge call received




No response

13. Do one of the following depending on the message displayed at step 12.

Acknowledge call received

The audio alarm sounds; press the [CANCEL] key to silence the alarm. The display looks as below. You can now confirm position of other ship.

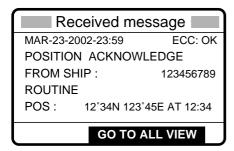

No response! Try calling again?

Re-send call: Push the [ENTER] knob followed by the [CALL] key.


Cancel call: Press the [CANCEL] key.

5.8.2 Position call: other ship requests your position

You may turn automatic acknowledge of position request on or off with POSITION CALL in the AUTO ACK menu. For further details, see page 8-3.

Automatic reply


1. When another ship requests your position and the status of the [5/ACK/SQ] key is AUTO ACK and the setting of POSITION CALL on the Auto ack menu is ON, the FS-1570/2570 transmits own position data (transmission time: approx. 7 sec.), showing the display below.

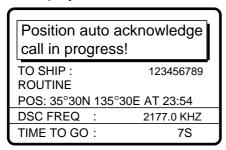

2. After the call is sent the audio alarm sounds and the display below appears.



3. Press the [CANCEL] key to silence the alarm, and the display changes as below.

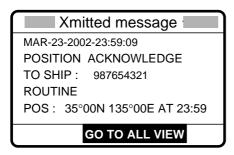

4. Press the [CANCEL] key to return to the DSC standby screen.

Manual reply


1. When a position request call is received and the status of the [5/ ACK/SQ] key is MANUAL ACK, the audio alarm sounds and the display changes as below.




2. Press the [CANCEL] key to silence the alarm. The display changes as below.



3. To send your ship's position, rotate the [ENTER] knob to choose ANSWER and then push the [ENTER] knob. Your display should now look something like the one below.

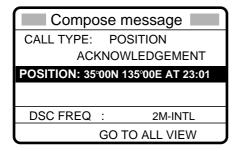

4. Confirm the position shown and then press the [CALL] to send the position data call (transmission time: approx. 7 sec.). The display changes as below.

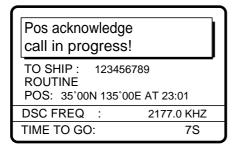


5. The DSC standby screen automatically appears after the call is sent.

5.9 PSTN Call


The PSTN call allows the making and receiving of telephone calls over public switched telephone networks. To use the PSTN call feature, use a handset which has a HOOK ON/OFF function. The standard supply handset has this feature.

5.9.1 Sending a PSTN call, receiving acknowledge back (ACK BQ)

1. Press the [2/DSC] key and then push the [ENTER] knob to open the CALL TYPE menu.

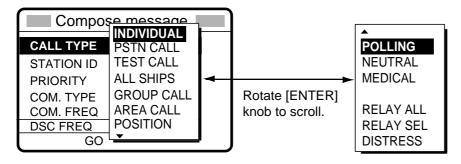


- 2. Rotate the [ENTER] knob to choose PSTN CALL and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the COAST ID menu.

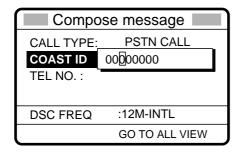


4. Key in ID of coast station (seven digits) with the numeric keys and then push the [ENTER] knob.


5. Push the [ENTER] knob to open the TEL NO. menu.

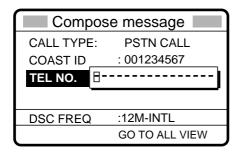


- 6. Enter telephone no. (up to 16 digits) with the numeric keys and then push the [ENTER] knob
- 7. Push the [ENTER] knob to open the DSC FREQ menu.

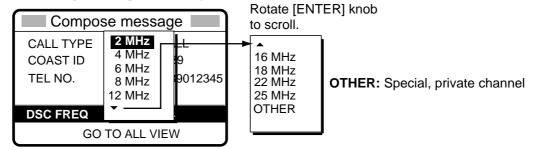

8. Rotate the [ENTER] knob to choose DSC band desired and then push the [ENTER] knob to open the DSC FREQ menu. Rotate the [ENTER] knob to choose DSC frequency desired and then push the [ENTER] knob. The display changes as below.

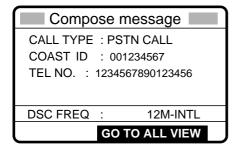

9. Press the [CALL] key to send the PSTN call (transmission time: about seven seconds). The display shows the following message.

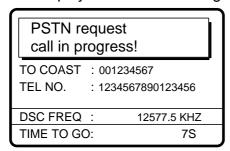

10. One of the following three displays appears. ("No response. Try calling again." Appears after timer counts down to zero and it means there was no response from the coast station.)

Waiting for acknowledgement.

FROM COAST: 001234567
TEL NO.: 1234567890123456

DSC FREQ: 12577.5 KHZ
TIME TO GO: 25S

Unable acknowledge call received.

BUSY

FROM COAST: 001234567
TEL NO. : 1234567890123456

STOP ALARM

No response!
Try calling again?

FROM COAST: 001234567
TEL NO. : 1234567890123456

DSC FREQ : 12577.5 KHZ

RE-SEND

11. Do one of the following depending on the message shown at step 10.

Waiting for acknowledgement

1) If the PSTN call is accepted, the PSTN connection call is sent (transmission time: about seven seconds), showing the display below.

PSTN connection call in progress!

TO COAST: 001234567
TEL NO.: 1234567890123456

DSC FREQ: 12577.0 KHZ
TIME TO GO: 7S

2) After the call is sent the following messages appears.

Waiting for acknowledgement.

FROM COAST: 001234567
TEL NO.: 1234567890123456

DSC FREQ: 12577.5 KHZ
TIME TO GO: 25S

3) Then, one of the following displays appears.

PSTN call connected.

TO COAST : 001234567
TEL NO. : 1234567890123456

DSC FREQ : 12577.5 KHZ

PSTN call connected

PSTN end of call in progress!

TO COAST: 001234567
TEL NO. : 1234567890123456

DSC FREQ : 12577.5 KHZ
TIME TO GO: 8S

PSTN end of call

Note: Volume may be adjusted in this condition. Rotate the [ENTER] knob and the popup window below appears.
Continue rotating to adjust volume.

VOL

4) Follow the instructions below depending on the message shown in 3) above.

PSTN call connected: Your phone rings; pick up the handset and communicate with the party you called.

PSTN end of call in progress: This means channel could not be used. After the timer counts down to zero repeat this procedure to re-send the call.

Unable acknowledge call received

1) The audio alarm sounds; press the [CANCEL] key or [ENTER] knob to silence the alarm. The display shown below appears.



2) Press the [CANCEL] key to return to the DSC standby screen. Try the call again later.

No response! Try calling again?

Re-send call: Push the [ENTER] knob followed by the [CALL] key.

Cancel call: Press the [CANCEL] key to return to the DSC standby screen.

5.9.2 Receiving a PSTN call, sending acknowledge back (ACK BQ)

1. The following display appears when a PSTN call is received when automatic acknowledge is turned on.

Able acknowledge call in progress!

TO COAST: 001234567
TEL NO. : 1234567890123456

DSC FREQ: 4208.0 KHZ
TIME TO GO: 8S

2. The timer counts down to zero and then the following display appears.

Pick up the handset or press CALL key.

FROM COAST: 001234567
TEL NO. : 1234567890123456

DSC FREQ: 4208.0 KHZ
TIME TO GO: 60S

3. Pick up the handset or press the [CALL] key within one minute.

PSTN connection call in progress!

TO COAST: 001234567
TEL NO. : 1234567890123456

DSC FREQ: 4208.0 KHZ
TIME TO GO: 7S

4. When the timer counts down to zero the following message appears.

Waiting for acknowledgement.
FROM COAST: 001234567
TEL NO.: 1234567890123456

DSC FREQ: 4208.0 KHZ
TIME TO GO: 25S

5. Shortly thereafter, one of the following messages appears.

PSTN call connected.

TO COAST : 001234567
TEL NO. : 1234567890123456

DSC FREQ : 4208.0KHZ

PSTN connection
call in progress!

FROM COAST: 001234567
TEL NO. : 1234567890123456

DSC FREQ: 4208.0KHZ
TIME TO GO: 25S

PSTN end of call in progress!

TO COAST: 001234567
TEL NO. : 1234567890123456

DSC FREQ : 4208.0KHZ
TIME TO GO: 7S

PSTN call connected

PSTN connection call in progress

PSTN end of call

6. Do one of the following depending on the message shown at step 5. Note that volume can be adjusted in this condition. Rotate the [ENTER] knob and the VOL popup window appears. Continue rotating to adjust volume.

PSTN call connected: Your phone rings; communicate with party.

PSTN connection call in progress!: If the channel assigned is appropriate, the message "Waiting for acknowledgment." appears. (If the channel cannot be used the message "PSTN end of call in progress!" appears. In this case, start this procedure again.)

PSTN end of call in progress!: The channel could not be used. Press the [CANCEL] key to return to the DSC standby screen.

5.9.3 PSTN call disconnection, receiving charge information (ship disconnects line)

1. After hanging up the handset or pressing the [CANCEL] key to complete your call, the display shows the following message.

PSTN end of call in progress!

TO COAST: 001234567
TEL NO.: 1234567890123456

DSC FREQ: 12577.5 KHZ
TIME TO GO: 8S

2. After the call is sent, the following messages appears.

Waiting for charge information.

FROM COAST: 001234567
TEL NO.: 1234567890123456

DSC FREQ: 12577.5 KHZ
TIME TO GO: 208

3. When the timer counts down to zero one of the following displays appear.

Charge information call received.

CHARGE TIME: 00H 12M 34S
FROM COAST: 001234567
TEL NO. : 1234567890123456


STOP ALARM

No response! charge information. FROM COAST: 001234567 TEL NO. : 1234567890123456 4. **For "No response! charge information."**, the equipment reverts to step 2 in this procedure to await charge information. **For "Charge information call received."**, the audio alarm sounds; press the [CANCEL] key or [ENTER] knob to silence the audio alarm. The display shown below appears.



5.9.4 PSTN call disconnection, receiving charge information (coast station disconnects line)

 The PSTN line is disconnected by the coast station when it finds no evidence of communications or the land subscriber hangs up. The coast station then sends charge information as below.

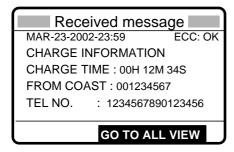

2. For no charge information the display looks as below.




5.10 Log File

Three log files are provided for storage of calls: received ordinary log, received distress log and transmitted log. Each log file stores 50 calls, on a first-in, first-out basis. This means that the latest call is saved as log no.1 and the log no. of all previous calls in that log increments by one. When the storage capacity is exceeded, the oldest call is deleted to make room for the latest. An asterisk (*) marks unread or unacknowledged calls. Received distress calls are automatically deleted 48 hours after being read.


5.10.1 Opening a log file

The procedure for opening a log is common to all logs. The example below shows how to open the received distress log.

1. At the DSC standby screen, press the [LOG/TUNE] key to open the Log file menu.

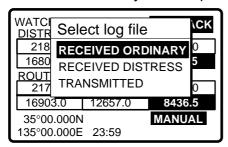

2. Rotate the [ENTER] knob to choose desired log and push the [ENTER] knob. For example, choose the RECEIVED DISTRESS log and then push the [ENTER] knob. Rotate the [ENTER] knob to scroll the log. Asterisk indicates unread message.

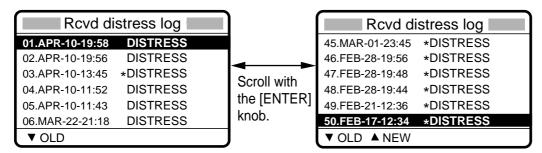

- 3. To view the contents of a file, do the following:
 - a) Rotate the [ENTER] knob to choose the file desired and then push the [ENTER] knob.



b) DETAIL is selected; push the [ENTER] knob.



- 4. **To scroll the log up and down,** use the [FILE/CURSOR] and [#/SETUP] keys, respectively. Use [FILE/CURSOR] key to scroll forward; the [#/SETUP] to scroll backward.
- 5. To print all files in the log selected, press the [8/PRINT] key.
- 6. **To reply to an unanswered call**, rotate the [ENTER] knob to choose ANSWER, press the [ENTER] knob, and then press the [CALL] key.
- 7. To return to the log selected, press the [CANCEL] key.

Deleting files


- 1. Do steps 1-2 and 3a) in the previous procedure to choose the file you wish to delete.
- 2. Rotate the [ENTER] knob to choose DELETE and then press the [ENTER] knob.

The log files are renumbered to reflect the deletion. Unread files cannot be deleted.

5.11 Erasing Message Files

The Erase file menu allows you to erase the entire contents of the received ordinary log, received distress log, transmitted log and send message log.

- 1. At the DSC standby screen, press the [#/SETUP] key.
- 2. Rotate the [ENTER] knob to choose ERASE and then push the [ENTER] knob to display the Erase file menu.
- 3. Rotate the [ENTER] knob to choose the item to erase and then push the [ENTER] knob.
- 4. Rotate the [ENTER] knob to choose YES and then push the [ENTER] knob.

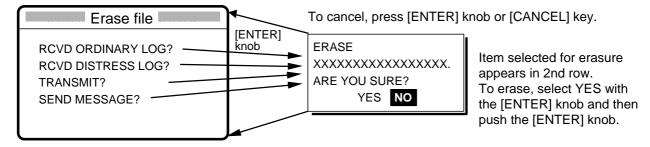


6. PREPARING TX CALLS

In Chapter 5 you learned how to prepare and send various types of DSC calls. In this chapter you will learn how to prepare and store individual, PSTN, group, area and test calls for future transmission. 150 calls can be stored.


.

6.1 Preparing Individual Calls


1. At the DSC standby screen, press the [#/SETUP] key to open the Setup menu.

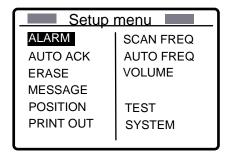

- 2. Rotate the [ENTER] knob to choose MESSAGE and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the CALL TYPE menu.

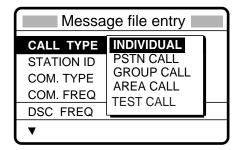


- 4. Rotate the [ENTER] knob to choose INDIVIDUAL and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the STATION ID entry window.

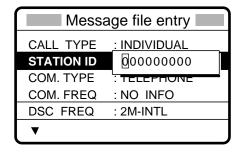


6. Key in ID of coast station or ship station with the numeric keys and then push the [ENTER] knob.

7. Push the [ENTER] knob to open the COM. TYPE window.

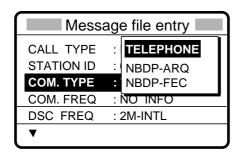

- 8. Rotate the [ENTER] knob to choose communication type desired and then push the [ENTER] knob.
- 9. Push the [ENTER] knob to open the COM. FREQ window.

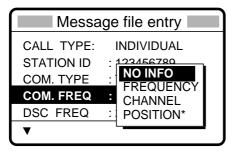


- * POSITION appears when coast station ID is entered in the field STATION ID.
- 10. Rotate the [ENTER] knob to choose appropriate item and then push the [ENTER] knob.

Call to coast station: NO INFO or POSITION.

Call to ship station: FREQUENCY or CHANNEL. Enter appropriate frequency or channel, referring to page 5-6.


11. Push the [ENTER] knob to open the DSC FREQ menu.

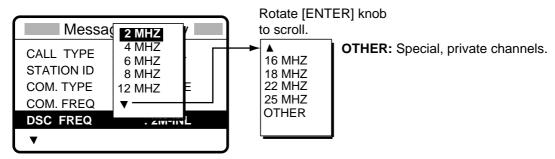


- 12. Rotate the [ENTER] knob to choose appropriate DSC band and then push the [ENTER] knob.
- 13. Rotate the [ENTER] knob to choose appropriate DSC frequency and then push the [ENTER] knob.
- 14. Enter file name and number as shown on the next page.

How to Enter File Name and Number

1. Push the [ENTER] knob to open the file name entry window.

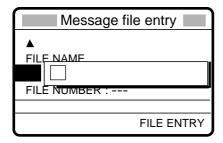


2. Use the numeric keys and [ENTER] knob to enter file name (max. 16 characters). For example, enter FURUNO as the file name. Push the [ENTER] knob after entering.

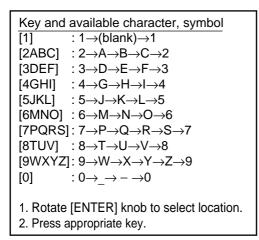

How to enter "FURUNO" as file name


- 1. Press the [3] key to display F.
- 2. Rotate [ENTER] knob to shift cursor.
- 3. Press the [8] key to select U.
- 4. Rotate [ENTER] knob to shift cursor.
- 5. Press the [7] key to select R.
- 6. Rotate [ENTER] knob to shift cursor.
- 7. Press the [8] key to select U.
- 8. Rotate [ENTER] knob to shift cursor.
- 9. Press the [6] key to select N.
- 10. Rotate [ENTER] knob to shift cursor.
- 11. Press the [6] key to select O.
- 12. Push the [ENTER] knob.

3. Push the [ENTER] knob to open the file number entry window. Key in file number in three digits with the numeric keys and then push the [ENTER] knob. For example, press [0], [0], [1], [ENTER] knob to enter file number 001.

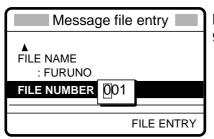

Note: The available file number is 001-799 and 900-999.

4. Push the [ENTER] knob. The display shows the name and file number entered.

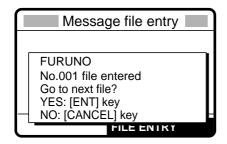


If the file name or number exists the message "Duplicate name (number)! Overwrite OK?" appears. Push the [ENTER] knob to write over the name, or press the [CANCEL] key to escape.


5. Push the [ENTER] knob to continue.

6.2 Preparing Group Calls


1. At the DSC standby screen, press the [#/SETUP] key to open the Setup menu.

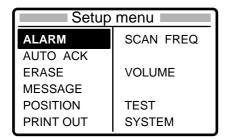


- 2. Rotate the [ENTER] knob to choose MESSAGE and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the CALL TYPE menu.

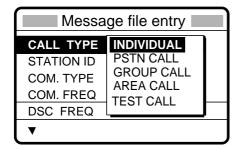


- 4. Rotate the [ENTER] knob choose GROUP CALL and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the GROUP ID entry window.

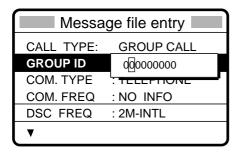


- 6. Key in ID of group with the numeric keys and then push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the COM. TYPE menu.

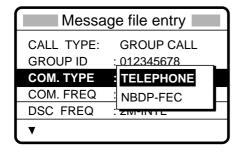

- 8. Rotate the [ENTER] knob to choose appropriate communications type and then push the [ENTER] knob.
- 9. Push the [ENTER] knob to open the COM. FREQ menu.

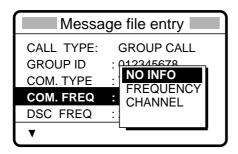


- 10.Rotate the [ENTER] knob to choose appropriate item and then push the [ENTER] knob. Enter frequency or channel. (See page 5-6 for details for how to enter frequency and channel.)
- 11. Push the [ENTER] knob to open the DSC FREQ menu.

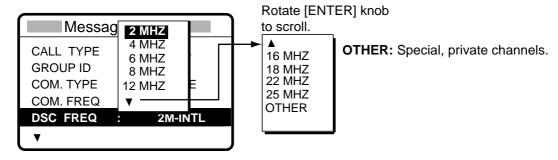


- 12. Rotate the [ENTER] knob to choose appropriate DSC band and then push the [ENTER] knob. Choose appropriate DSC frequency and then push the [ENTER] knob.
- 13. Follow "How to Enter File Name and Number" on page 6-3 to enter file name and number.

6.3 Preparing Geographical Area Calls


- 1. At the DSC standby screen, press the [#/SETUP] key to open the Setup menu.
- 2. Rotate the [ENTER] knob to choose MESSAGE and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the CALL TYPE menu.

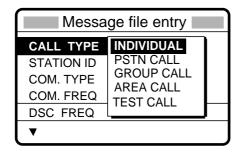


- 4. Rotate the [ENTER] knob to choose AREA CALL and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the AREA entry window.

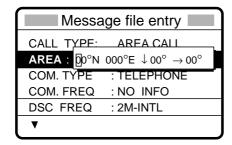


- 6. Using the numeric keys, enter latitude and longitude of reference point and southerly degrees and easterly degrees of area. To change coordinate, choose it and press the [1] key for North or East; [2] key for South or West. After entering data, push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the COM. TYPE menu.

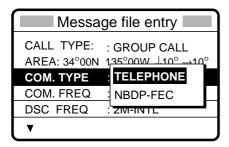

- Rotate the [ENTER] knob to choose appropriate communications type and then push the [ENTER] knob.
- 9. Push the [ENTER] knob to open the COM. FREQ menu.

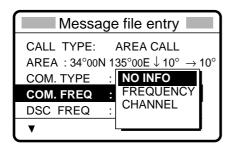


- 10. Rotate the [ENTER] knob to choose appropriate item and then push the [ENTER] knob. Enter channel or frequency. (See page 5-6 for how to enter channel and frequency.)
- 11. Push the [ENTER] knob to open the DSC FREQ menu.

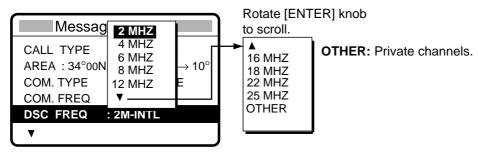


- 12. Rotate the [ENTER] knob to choose appropriate DSC band and then push the [ENTER] knob. Choose appropriate DSC frequency and then push the [ENTER] knob.
- 13. Follow "How to Enter File Name and Number" on page 6-3 to enter file name and number.

6.4 Preparing PSTN Calls


- 1. At the DSC standby screen, press the [#/SETUP] key to open the Setup menu.
- 2. Rotate the [ENTER] knob to choose MESSAGE and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the CALL TYPE menu.

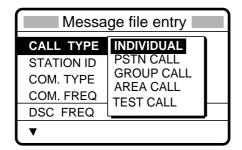


- 4. Rotate the [ENTER] knob to choose PSTN CALL and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the COAST ID entry window.

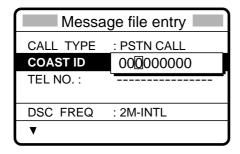

- 6. Key in ID of coast station (seven digits) with the numeric keys then push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the TEL. NO. entry window.

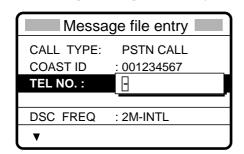


- 8. Key in telephone no. (up to 16 digits) with the numeric keys and then push the [ENTER] knob.
- 9. Push the [ENTER] knob to open the DSC FREQ menu.

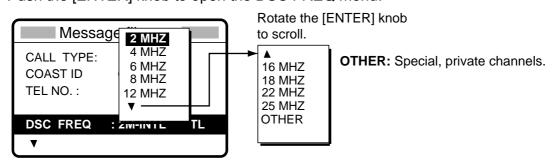


- 10. Rotate the [ENTER] knob to choose appropriate DSC band and then push the [ENTER] knob. Choose appropriate DSC frequency and then push the [ENTER] knob.
- 11. Follow "How to Enter File Name and Number" on page 6-3 to enter file name and number.

6.5 Preparing Test Calls


- 1. At the DSC standby screen, press the [#/SETUP] key to open the Setup menu.
- 2. Rotate the [ENTER] knob to choose MESSAGE and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the CALL TYPE menu.

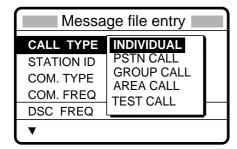

- 4. Rotate the [ENTER] knob to choose TEST CALL and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the COAST ID entry window.

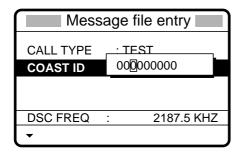

- 6. Enter coast ID where to send the test message and then push the [ENTER] knob.
- 7. Push the [ENTER] knob to open the DSC FREQ menu.

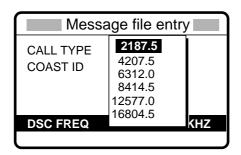


- 8. Rotate the [ENTER] knob to choose appropriate DSC frequency and then push the [ENTER] knob.
- 9. Follow "How to Enter File Name and Number" on page 6-3 to enter file name and number.

6.6 Sending Prepared Calls

Sending without modification

1. Press the [FILE/CURSOR] key at the DSC standby screen to show the send message file list. Below is an example of the send message file list.

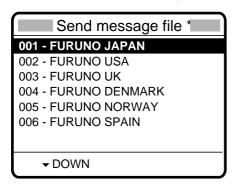

- 2. Rotate the [ENTER] knob to choose a file.
- 3. Press the [CALL] key to send the message.

Editing before sending

- 1. Press the [FILE/CURSOR] key at the DSC standby screen to show the send message file list.
- 2. Rotate the [ENTER] knob to choose file desired and then push the [ENTER] knob.



- 3. DETAIL is selected; push the [ENTER] knob. The message contents are shown on the "Compose message" screen.
- 4. Edit the message as necessary.
- 5. Press the [CALL] key to send the message.

6.7 Deleting Send Message Files

- 1. Press the [FILE/CURSOR] key at the DSC standby screen to show the send message file list.
- 2. Rotate the [ENTER] knob to choose file desired and then push the [ENTER] knob.



3. Rotate the [ENTER] knob to choose DELETE and then push the [ENTER] knob.

Note: You may collectively erase all send message files. For details see paragraph 5.11.

6.8 Printing List of Send Message Files

You can print a list of send message files as follows:

- 1. Press the [FILE/CURSOR] key to open the Send message file list.
- 2. Press the [8/PRINT] key.
- 3. YES is selected; push the [ENTER] knob to print.

```
******** Send message file ********

001. FURUNO JAPAN INDIVIDUAL CALL

002. FURUNO USA INDIVIDUAL CALL

003. FURUNO UK PSTN CALL

004. FURUNO DENMARK GROUP CALL

005. FURUNO NORWAY INDIVIDUAL CALL

006. FURUNO SPAIN ALL SHIPS CALL


007. FURUNO FRANCE INDIVIDUAL CALL
```

Note: Message not framed in actual printout.

7. DSC/WATCH RECEIVER SETUP

7.1 Setting Alarms


The Alarm menu enables/disables internal and external alarms. Note that the Distress/Urgency alarm cannot be disabled. Press the [#/SETUP] key at the DSC standby screen, choose ALARM and then push the [ENTER] knob to display the Alarm menu.

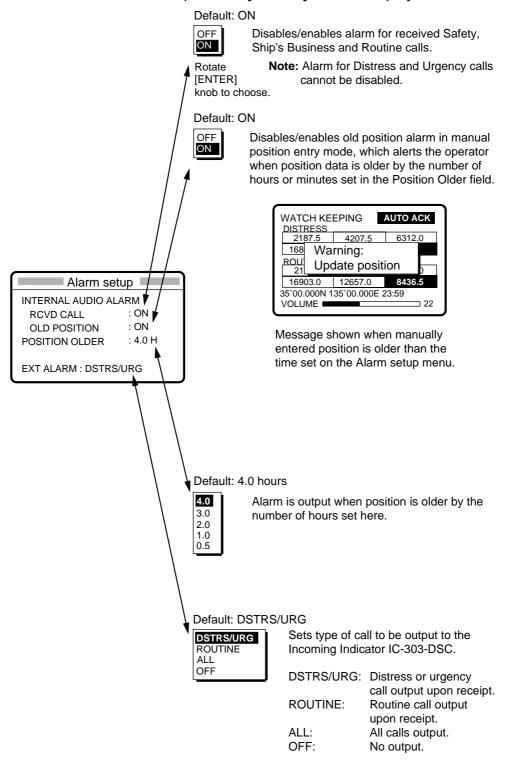

7.2 Auto Ack Menu


The Auto Ack menu enables/disables automatic acknowledgement of individual, position and polling calls. Press the [#SETUP] key, choose AUTO ACK at the DSC standby screen and then push the [ENTER] knob to display the Auto Ack setup menu.

Comply type Setting of [5/ACQ /SQ] key	ABLE	UNABLE
AUTO ACK	Can send acknowledge automatically	Can send UNABLE automatically.
MANUAL ACK	Can send acknowledge manually	Can send UNABLE manually.

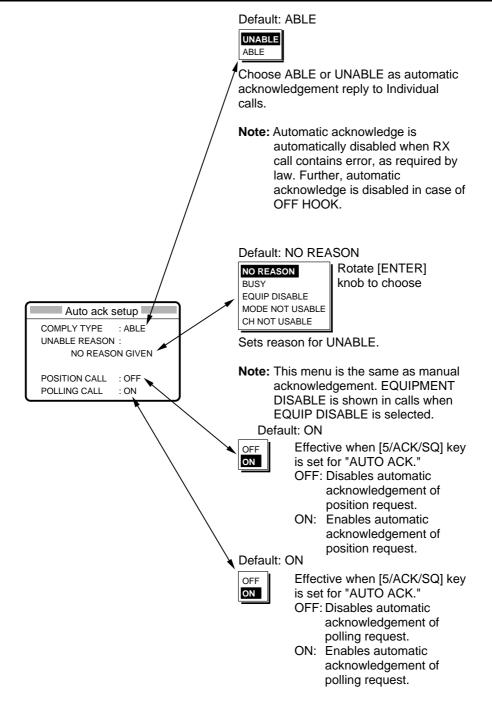

7.3 Printing Messages

The Print Out menu enables/disables automatic printing of all transmitted and received calls and the results of the daily test. Press the [#/SETUP] key at the DSC standby screen, choose PRINT OUT and then push the [ENTER] knob to display the Print Out menu.

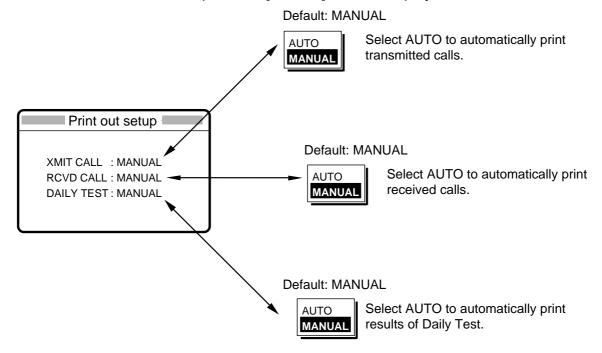

Sample printouts

Printing can be done automatically or manually. For manual printing, press the [8/PRINT] key. Note that calls having more than one page (for example, received calls) are printed out in their entirety.

```
* Received message at JAN-08-2002-16:10:12 *
FORMAT
                        : DISTRESS CALL
SELF-IDENTITY
                        : 987654321
NATURE OF DISTRESS
                        : UNDESTGNATED DISTRESS
DISTRESS COORDINATES
                        : NO INFORMATION
DISTRESS TELECOMMAND
                        : J3E TELEPHONE
END OF SEQUENCE
                        : EOS
ERROR-CHECK
                TX: 2187.5 kHz
                 RX: 2187.5 kHz
```

Sample Received Message Printout (Distress)

```
* Received message at JAN-08-2002-16:10:12 *
FORMAT
                        : INDIVIDUAL CALL
ADDRESS
                        : 111660000
CATEGORY
                        : ROUTINE
SELF-IDENTITY
                        : 987654321
1st TELECOMMAND
                       : J3E TELEPHONE
2nd TELECOMMAND
                        : NO INFORMATION
WORKING FREQUENCY
                        : NO INFORMATION
END OF SECTIONCE
                        : ACK. RO
ERROR-CHECK
                        : OK
DSC FREQUENCY
                 TX: 2177.0 kHz
                 RX: 2177.0 kHz
```

Sample Received Message Printout (Individual)

```
******* Send message *******
FORMAT
                       : INDIVIDUAL CALL
ADDRESS
                       : 111660000
CATEGORY
                       : ROUTINE
SELF-IDENTITY
                       : 987654321
1st TELECOMMAND
                       : J3E TELEPHONE
2nd TELECOMMAND
                       : NO INFORMATION
WORKING FREQUENCY
                       : NO INFORMATION
END OF SEQUENCE
                       : ACK. RQ
DSC FREQUENCY
                TX: 2177.0 kHz
                RX: 2177.0 kHz
```

*Transmitted message at JAN-08-2002-16:10:12 FORMAT : INDIVIDUAL CALL ADDRESS : 987654321 CATEGORY : ROUTINE SELF-IDENTITY : 111660000 1st TELECOMMAND : J3E TELEPHONE 2nd TELECOMMAND : NO INFORMATION WORKING FREQUENCY : NO INFORMATION END OF SEQUENCE : ACK. RO DSC FREQUENCY TX: 2177.0 kHz RX: 2177.0 kHz

Sample Send Message Printout (Individual) Sample Transmitted Message Printout (Individual)


Note: Messages are not framed in actual printouts.

7.4 Setting Scan Frequencies


The Scan freq menu determines which DSC routine and distress frequencies to scan. Follow the instructions below to select/deselect DSC routine and distress frequencies to scan.

7.4.1 Distress frequencies

1. Press the [#/SETUP] key at the DSC standby screen, choose SCAN FREQ and then push the [ENTER] knob to display the SCAN FREQ menu.

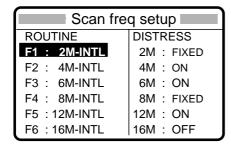

- 2. Rotate the [ENTER] knob clockwise to shift the cursor to the DISTRESS column.
- 3. Rotate the [ENTER] knob to choose the frequency to process and then push the [ENTER] knob. For example, choose 4 MHz.

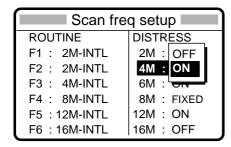


- 4. Rotate the [ENTER] knob to choose ON or OFF as appropriate and then push the [ENTER] knob.
- 5. Press the [CANCEL] key twice to return to the DSC standby screen.


Note: Regulations require that 2 MHz and 8 MHz and one more DSC distress frequency be watched continuously. These frequencies cannot be turned off. Maximum three bands may be turned off.

7.4.2 Routine frequencies


1. Press the [#/SETUP] key, choose SCAN FREQ and then push the [ENTER] knob to display the Scan freq menu.

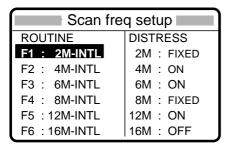

2. Rotate the [ENTER] knob to choose the frequency to process and then push the [ENTER] knob. For example, choose F1: 2 M-INTL.

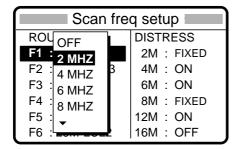

3. Push the [ENTER] knob, and the display looks something like the one below.

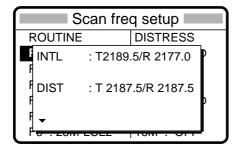

4. Rotate the [ENTER] knob to choose frequency desired and then push the [ENTER] knob.

INTL: International channels
DIST: Distress channels
LOCAL1/LOCAL2: Local channels
USER CH: User channels


5. Press the [CANCEL] key twice to return to the DSC standby screen.

Note: Distress frequencies can be stored on the routine frequency memory. This is convenient for backing up the watch keeping receiver.

7.5 Automatic Frequency Change

If a DSC call is received during NBDP communications, you can forcibly stop or continue NBDP communications as desired. For NBDP communications, see Chapter 8.

1. At the DSC standby screen, press the [#/SETUP] key, choose AUTO FREQ and push the [ENTER] knob to show the Auto Freq Setup sub menu.

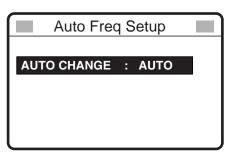

2. Push the [ENTER] knob.to open the AUTO CHANGE menu.



3. Rotate the [ENTER] knob to choose OFF or AUTO as applicable.


OFF: NBDP communications are normally not interrupted. However, when a distress alert, distress acknowledgement or distress relay is received, NBDP communications are forcibly stopped and communication frequency is automatically changed.

AUTO: NBDP communications are forcibly stopped when any DSC call is received, and communication frequency is automatically changed.

- 4. Push the [ENTER] knob to confirm setting.
- 5. Press the [CANCEL] key twice to return to the DSC standby screen.

7.6 Adjusting Volume

The Volume menu enables/disables key beep (acknowledges correct key input) and adjusts the volume of the handset, ordinary alarm and distress/urgency alarm. Press the [#/SETUP] key at the standby screen, choose VOLUME and then push the [ENTER] knob to display the Volume setup menu.

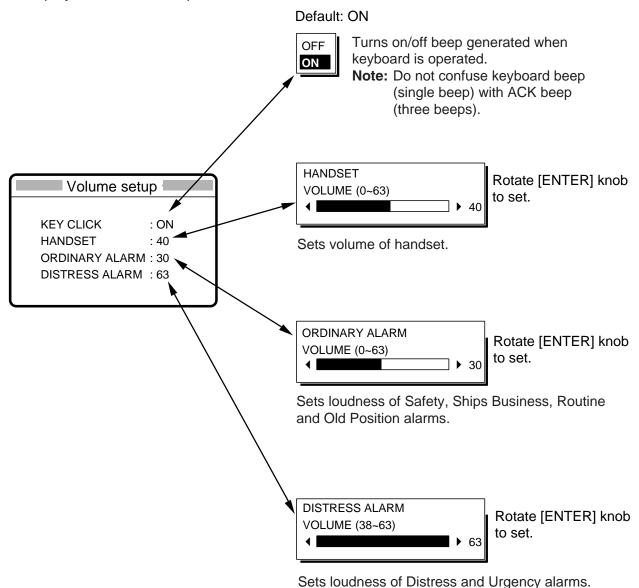


This page intentionially left blank.


8 NBDP SYSTEM OVERVIEW

8.1 Turning on the NBDP System

Turn on the terminal unit and the printer with their respective power switches.

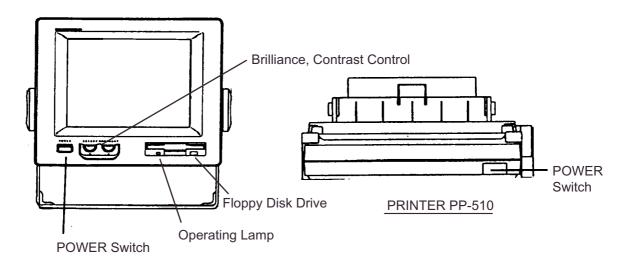

TERMINAL UNIT IB-581

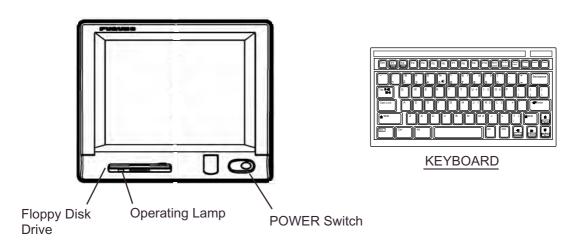

TERMINAL UNIT IB-583

NBDP terminal unit, printer and keyboard

- **Note 1:** The Printer PP-510 prints messages. Refer to its operator's manual for operating information.
- **Note 2:** When the NBDP controller has priority the radiotelephone displays "OCCUPIED (NBDP)." At this time the volume of the speaker may be adjusted by rotating the [ENTER] knob and observing the VOL indicator on the radiotelephone.



8.2 Description of Equipment

8.2.1 Terminal unit

The terminal unit is a visual display incorporating a floppy disk drive, which provides for storage of files on floppy disks. Two models are available, IB-581 (monochrome) and IB-583 (color). Controls for power and adjustment of display brilliance and contrast are provided on the front panel of the IB-581. To adjust the brilliance on the IB-583, press [Alt] while pressing [F6] to lower the brilliance; [F7] to raise it. (The IB-583 does not have a control for adjustment of contrast.) Eight levels of brilliance are available.

When the terminal unit is turned on, the communication status display, shown below, appears. This is where all phases of telex communications begin.

```
1:File 2:Edit 3:Operate 4:Window 5:Station 6:System 7:WRU 8:HR 9:Over 10:Break
------ 2002-10-15 2:26:45 UTC ----- Caps-Eng
Station Name
Frequency (T/R):
                             (kHz) Comm Mode:
Comm Status : Connect Send Lock Error
Sending Volume : (%) ARQ Error : 0 ARQ Time : 0(sec)
```

Communication status display

Features of the IB-583


The IB-583 is fitted with both English and Russian interface. Choose desired interface as below:

English: Turn on the IB-583 while pressing the [E] key. Russian: Turn on the IB-583 while pressing the [R] key.

The IB-583 has a battery (type CR2450-F2ST2L, code no. 000-144-941) on its TERM/CPU Board (16P0209) and its life is about six years. When the voltage of the battery is low, the time will be slow. When this occurs, contact your dealer about replacement of the battery.

8.2.2 Keyboard

The terminal unit is operated from the keyboard, and is almost 100% keyboard controlled. Operation is simplified by the use of menus which you access by pressing a function key, labeled F1-F10 at the top of the keyboard. The figure below shows the function menus and their corresponding function keys.

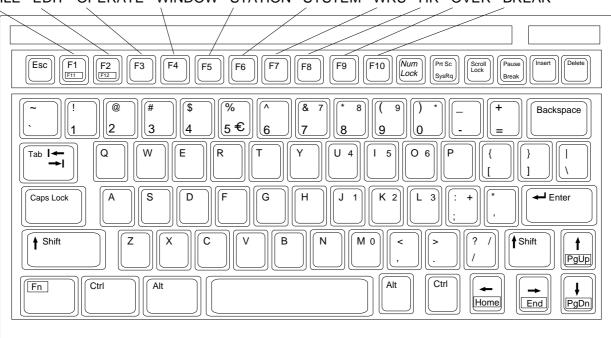

FILE EDIT OPERATE WINDOW STATION SYSTEM WRU HR OVER BREAK

Keyboard

Note: € (Euro mark) on \$\int_{5}^{\infty}\$ key is not used.

8.3 Function Keys, Menu Operation

The function keys at the top of the keyboard control most operations of this unit through a menu system.


8.3.1 Menu conventions

Inverse video

As you move the cursor down through a menu, a selected item, initially shown as white on black (monochrome display), inverses to black on white. This highlighting indicates that it is available for selection.

Underline

The underline shows current selection. In the figure below, for example, the underline is beneath "Receive."

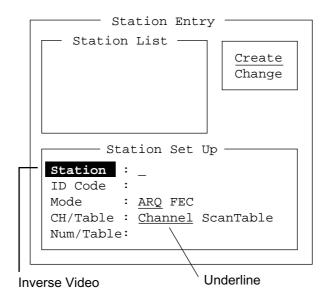

Station entry screen IB-581

Note: The example display screens shown in this manual are taken from the IB-581. The screens of the IB-583 are nearly identical to those of the IB-581 except cursor configuration.

Cursor	IB-581	IB-583

8.3.2 Menu overview

Selecting menus

Press appropriate function key to open a menu. To display the File menu, for example, press the function key [F1].

```
File

1: New
2: Open
3: Close

4: Delete

5: Rename

6: Real Time Printing
7: File to Print
8: Cancel Printing

9: Clear Buffer

0: Floppy Disk Format
```

File menu

Selecting menu items and options

Menu items can be selected by pressing appropriate numeric key or selecting item desired with the arrow keys and pressing the [Enter] key. Menu options can be selected by operating the $[\leftarrow]$ or $[\rightarrow]$ keys. After selecting option desired, press the [Enter] key to register your selection and close the menu.

8.3.3 Function key description

Function key [F1]: File menu

The File menu is where you will create, open, save and print telex messages. Floppy disks are also formatted from this menu.

File —
1: New 2: Open
3: Close 4: Delete
5: Rename
6: Real Time Printing
7: File to Print 8: Cancel Printing
9: Clear Buffer
0: Floppy Disk Format

File menu

1: New Opens a new untitled window.

2: Open Opens files.3: Close Closes files.4: Delete Deletes files.

5: Rename Renames files.

6: Real Time Printing Turns real time printing on/off.

7: File to Print Prints files.8: Cancel Printing Stops printing.

9: Clear Buffer Clears the communications buffer.

0: Floppy Disk Format Formats a floppy disk.

Function key [F2]: Edit menu

The Edit menu provides a full line of editing features.



Edit menu

1: Undo	Cancels the last change (cut, copy or paste).
2: Cut	Removes the selected text and stores it in the paste buffer. (Previous text in the paste buffer is cleared.)
3: Copy	Copies the selected text and stores it in the paste buffer. (Previous text in the paste buffer is cleared.)
4: Paste	Inserts the text stored in the paste buffer at the current location of the cursor.
5: Select All	Selects the entire current file for cut or copy.
6: Search	Searches a file for a character string.
7: Replace	Replaces a word with a different word or character string.
8: Goto Top	Brings the cursor to the top line of the current file.
9: Goto Bottom	Brings the cursor to last line of the current file.
0: Goto Line	Moves the cursor to the desired line in the current file.
A: Change Text	Switches between the display window 1 and 2.

Function key [F3]: Operate menu

The Operate menu mainly controls transmitting and receiving.

1: Call Station
2: Macro Operation
3: File to Send
4: Cancel Sending
5: Scan (Start/Stop)
6: Manual Reception
7: Timer Operation
8: Manual Calling
9: Set Frequency

Operate menu

1: Call Station Chooses a station from the station list.

2: Macro Operation Enables macro operation. For details, see paragraph 11.10.

3: File to Send Selects a file (to transmit).

4: Cancel Sending Stops sending a file.

5: Scan Start/Stop Starts/stops frequency scanning.

6: Manual Reception Selects communication mode for reception; AUTO, ARQ, FEC

DIRC.


7: Timer Operation Timer programming.

8: Manual Calling Sets TX mode and subscriber's ID number in manual calling.

9: Set Frequency Sets TX and RX frequencies in manual calling.

Function key [F4]: Window menu

The Window menu lets you display the corresponding data of the window below.

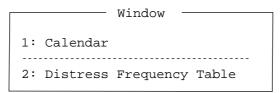

Window menu

1: Calendar

Displays desired calendar month and year. To change year or month, choose item with $[\uparrow]$ or $[\downarrow]$ key and change setting with $[\leftarrow]$ or $[\rightarrow]$ key.

2: Distress Frequency Table Displays all distress frequencies.

		D:	istress	Frequenc	ies ——		
Telephone	e (kHz):	2182.0	4125.0	6215.0	8291.0	12290.0	16420.0
NBDP	(kHz) :	2174.5	4177.5	6268.0	8376.5	12520.0	16695.0
DSC	(kHz) :	2187.5	4207.5	6312.0	8414.5	12577.0	16804.5

Function key [F5]: Station menu

The Station menu provides for storage of stations, timer program setup, user channel setup, and entry of various ID codes.

Station —
1: Station Entry
2: Timer Operation Entry
3: Scan Entry
4: User Channel Entry
5: Answerback Code Entry
6: Group ID Entry (4/5 digit)
7: Group ID Entry (9 digit)
8: Select ID Entry (4/5 digit)
9: Select ID Entry (9 digit)

Station menu

1: Station Entry Registers stations.

2: Timer Operation Entry Registers timer programs.

3: Scan Entry Creates scan groups for scanning.

4: User Channel Entry Registers user channels.

5: Answerback Code Entry Registers own ship's answerback code.

6: Group ID Entry Registers own ship's group ID codes (4 or 5 digit).

7: Group ID Entry Registers own ship's group ID codes (9 digit).

8: Select ID Entry Registers own ship's selective ID codes (4 or 5 digit).

9: Select ID Entry Registers own ship's selective ID codes (4 or 5 digit).

Function key [F6]: System menu

The System menu is mainly for use by technicians and contains diagnostic tests. To change settings, choose "Change" from the item "Setup" and operate arrow keys to choose item and option. Press the [Enter] key to register selection and close the menu.

Setup	System Lock Change Default
Slave Delay	8 msec (0- 50 msec)
TX/RX MSG Save Edit Before sending	ΩFE O N <u>OFF</u> O N
Time System Time & Date Display Mode* Self Test	OFF <u>UTC</u> SMT JST 2002/10/16 10:00:00 <u>Normal</u> Reverse


^{* = &}quot;Window Color" shown on IB-583.

System menu

Setup Slave Delay Locks, changes settings; restores default system settings.

Sets the length of the slave delay timing from the end of RX to the start of TX in the ARQ mode. The default setting is suitable in

most cases. This item cannot be adjusted by the user.

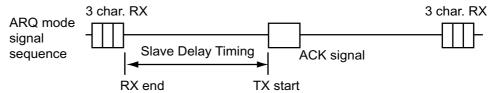

TX/RX MSG Save

Turn on to automatically save incoming and outgoing messages to a floppy disk. "Log" appears at the top of the screen when on.

Edit Before sending

"OFF" transmits keying operation one by one. "ON" transmits message only when the [Enter] key is pressed after confirming

text typed.

Time System

Chooses time system. SMT is local time and JST is Japan

standard time.

Time & Date

Enter date and time manually. If a navigation device is connected, the time is automatically set when the power is turned on or whenever the time system is switched. Manual entry takes priority over automatic entry. This item cannot be adjusted when

using JST or UTC.

Display Mode (IB-581) Selects display mode to normal and reverse alternately.

Window Color (IB-583) Chooses display colors. To change display colors:

- 1. Choose the option Change from Setup.
- 2. Press the [↓] key to choose Window Color and press the [Enter] key.

Window Color Change
Window Color Setup
Default Color
To Change: ENTER To quit: ESC

3. The cursor is choosing Window Color Setup; press the [Enter] key.

Window Color Setup

Window : Base Window
Fore Color : L_WHITE
Back Color : BLUE

To Change: ENTER To Change Value: L<=>R

- Press the [→] key to choose the item to change: BASE WINDOW, BACK SCROLL, EDIT 1-3, FUNCTION, SUB MENU 1-3, MESSAGE.
- 5. Press the [↓] key to choose Fore Color.
- Press the [→] key to choose color: L-WHITE, BLACK, BLUE, GREEN, CYAN, RED, MAGENTA, BROWN, WHITE, GRAY, L-BLUE, L-GREEN, L-CYAN, L-RED, MAGENTA, YELLOW.
- 7. Press the [↓] key to choose Back Color.
- 8. Press the $[\rightarrow]$ key to choose color.
- 9. Press the [↑] key to choose Window.
- 10. Repeat the step 4 to 9 to set other colors.
- 11. Press the [Enter] key followed by the [Esc] key.

Self Test: Starts diagnostic test.

Function key [F7]: WRU (Who Are You?): In the ARQ mode, requests other station's answerback code.

Function key [F8]: HR (Here Is): In the ARQ mode, sends your ship's answerback code.

Function key [F9]: OVER: In the ARQ mode, switches the direction of traffic; the information receiving station becomes the information sending station, the information sending station becomes the information receiving station.

9 NBDP PREPARATIONS

This chapter provides the procedures necessary for preparing the NBDP Terminal Unit for transmitting and receiving. For automatic telex, you will need to register the following:

- Your ship's ID and answerback codes
- Stations
- Timer programs
- Scan channel groups
- User channels


9.1 Registering Answerback Code & ID Codes

Enter your ship's answerback code and ID codes as shown below.

Note: The answerback and ID codes cannot be changed once entered; be sure to enter the codes correctly.

9.1.1 Registering answerback code

1. Press the function key [F5] and then the [5] key. The display should look something like the illustration below.

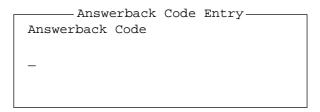


Answerback code entry screen

2. Enter your ship's answerback code (max. 20 characters, including spaces) and press the [Enter] key. The prompt "OK/Cancel" asks for verification of data. If the code is correct, press the [Enter] key again.

Note: Example of answerback code: 12345789 FURU X.

For final verification of the data, the Caution shown in the illustration below appears.

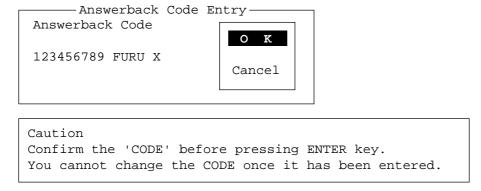

Message for confirmation of code entered

3. If the code is correct, press the [Enter] key again.

9.1.2 Registering ID codes


1. Press function key [F5] and then the [6], [7], [8] or [9] key to enter the Group ID Code (4 or 5 digits), Group ID Code (9 digits), Select ID Code (4 or 5 digits) or Select ID Code (9 digits), respectively.

```
Select ID Entry
Select ID Code (4/5)
-
```

ID code screen

2. Enter Group ID or Select ID as appropriate and then press the [Enter] key. A prompt asks you to verify data. If the ID is correct, press the [Enter] key.

For final verification of the data, the Caution shown in the illustration below appears.

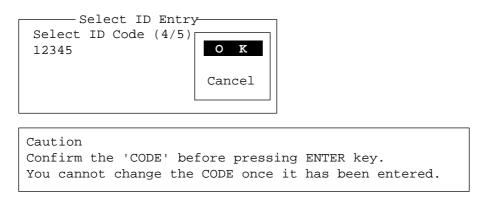

Message for confirmation of code entered

3. If the ID is correct, press the [Enter] key again.


9.2 Station List

The station list provides for storage of up to 50 stations, one frequency pair (RX and TX) per station. For stations which have more than one frequency pair, you might add a suffix

to the station name to denote multiple frequency pairs. For example, station name FURUNO followed by -1, -2, -3, etc. for each frequency pair required.

9.2.1 Registering stations

1. Press the function key [F5] followed by the [1] key to show the Station Entry screen.

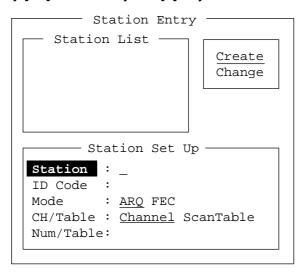

Station entry screen

- 2. On the right-hand side of the screen, Create and Change are shown and Create should be underlined. If it is not, underline it by pressing $[\rightarrow]$, $[\uparrow]$ and the [Enter] key.
- 3. The cursor is now choosing Station. Enter station name, using up to 18 characters.
- 4. Press the $[\downarrow]$ key to choose ID Code. Enter station ID code.
- 5. Press the $[\downarrow]$ key to choose Mode. Choose communication mode with $[\leftarrow]$ or $[\rightarrow]$ among the following:

ARQ: Automatic Retransmission Request

FEC: Forward Error Correction

- 6. Press the $[\downarrow]$ key to choose CH/Table. Choose ScanTable or Channel as appropriate.
- 7. Press the $[\downarrow]$ key to choose Num/Table.

8. If you selected "Channel" at step 6, enter ITU channel number (see Appendix) or User channel number.

If you selected "ScanTable" at step 6, press the $[\rightarrow]$ key to show scan group list registered. For scan group, refer to paragraph 9.5. Choose a scan group name by using the $[\downarrow]$ or $[\uparrow]$ key followed by pressing the $[\vdash]$ key.



Scanning group list

9. Press the [Enter] key. The prompt OK/Cancel asks for verification of data.



OK/Cancel prompt

- 10. If the data are correct, press the [Enter] key. (To cancel entry, place the cursor on Cancel by pressing the [↓] key, and then hit the [Enter] key. Data entered are erased.) The station name entered at step 3 appears at the Station List window.
- 11. To register other stations, press the [Enter] key twice and then repeat steps 3 through 10.
- 12. Press the [↓] key. Check data on the Station List for correctness. Stations displayed in reverse video on the Station List are displayed on Station Set Up.
- 13. Press the [ESC] key to quit.
- **Note 1:**If you enter a station which already exists, the indication "Station by that name already exists. Press any key to escape." appears. Press any key to return to the Station List. Check the list.
- **Note 2:** If you enter an invalid code, the message "Input Error. (ID Code) Press any key to escape." appears. Press any key and reenter ID code.

9.2.2 Editing/Deleting stations

- 1. Press the function key [F5] and then the [1] key.
- 2. Press the $[\downarrow]$ key to choose a station name from the Station List.
- 3. Press the $[\rightarrow]$ key followed by $[\downarrow]$ key to choose Change and press the [Enter] key.
- 4. Do one of the following;

Edit station: Use $[\uparrow]$, $[\downarrow]$ and the [Backspace] key to make corrections.

Delete station: Erase station name with the [Backspace] key.


- 5. Press the [Enter] key twice.
- 6. Press the [Esc] key.

9.3 Timer Programming

A built-in timer allows you to automatically receive and transmit files. 10 timer programs can be registered.

9.3.1 Registering timer programs

1. Press the function key [F5] and the [2] key to display the Timer Operation Entry screen.

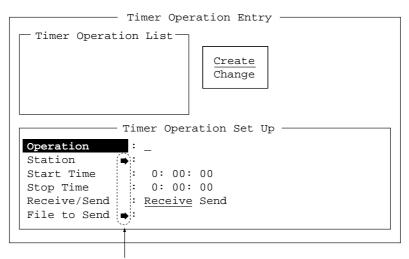

Press $[\rightarrow]$ to show station list, file list.

Timer operation entry screen

- 2. If Create is not underlined, press $[\rightarrow]$, $[\uparrow]$ and the [Enter] key to underline it.
- 3. Operation is selected. Enter a suitable operation name on the Operation line. Any alphanumeric characters may be used.

Note: If the operation name entered already exists, the display "Operation name already exists. Press any key to escape." Press any key and change the operation name.

- 4. Press the $[\downarrow]$ key to choose Station. Press the $[\rightarrow]$ key to display the Station List (which you registered stations in the previous paragraph.) Choose a station and press the [Enter] key.
- 5. Press the [↓] key to choose Start Time. Enter start time, in 24-hour notation. To have the operation start at 8:35 a. m., for example, the keying sequence would be;
 [0] [8] [3] [5] [0]
- 6. Press the $[\downarrow]$ key to choose Stop Time. Enter stop time, in 24-hour notation.
- 7. Press the [↓] key to choose Receive/Send. Choose operation category; Receive or Send. If you have chosen "Send," go to step 8. For "Receive," go to step 9.
- 8. For send, insert the floppy disk which you want to send in the floppy drive, press the [↓] key to choose File to Send, press the [→] key to display the TX window, choose a file, and press the [Enter] key.
- 9. Press the [Enter] key.
- 10. Press the [Enter] key. The operation name appears in the Timer Operation List.

Note: If the station name entered has not been registered, the display shows "Operation name already exists. Press any key to escape." Press any key and change operation name.

- 11. To enter another timer program, press the [Enter] key twice and the repeat steps 3-10.
- 12. Press the [Esc] key to finish.

9.3.2 Editing/Deleting timer programs

- 1. Press the function key [F5] and the [2] key.
- 2. Choose a timer program name from the Timer Operation List.
- 3. Press the $[\rightarrow]$ key to choose Change and press the [Enter] key.
- 4. Do one of the following;

Edit program: Use $[\uparrow]$, $[\downarrow]$ and the [Backspace] key to make corrections.

Delete program: Erase operation name with the [Backspace] key.


- 5. Press the [Enter] key twice.
- 6. Press the [Esc] key.

9.4 User Channels

The user channel list provides storage for up to 100 user channels, numbered 0-99. Note that user channels may be used in channel scanning.

9.4.1 Registering user channels

1. Press the function key [F5] and then the [4] key to show the User Channel Entry screen.

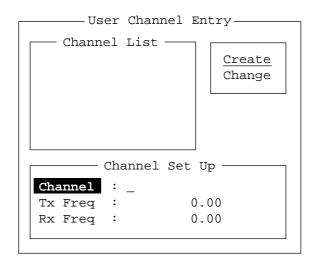

User channel entry screen

- 2. If Create is not underlined, press $[\rightarrow]$, $[\uparrow]$ and the [Enter] key to underline it.
- 3. Channel is selected. Enter channel number. (100 channels may be registered. When you attempt to register more, the message "Channel memory is full. Press any key to escape." appears. In this case delete unnecessary channels to register new ones.)
- 4. Press the $[\downarrow]$ key to choose "Tx Freq." Enter TX frequency.
- 5. Press the $[\downarrow]$ key to choose "Rx Freq." Enter RX frequency.
- 6. Press the [Enter] key. The "OK/Cancel" confirmation window appears.
- 7. Press the [Enter] key. Channel number entered appears in the Channel List. (If the channel entered already exists, the message "Channel by that number already exists. Press any key to escape." appears. Press any key and then reenter number.)

8. To quit, press the [Esc] key.

9.4.2 Editing/Deleting user channels

- 1. Press function key [F5] and then the [4] key.
- 2. Press the $[\uparrow]$ or $[\downarrow]$ key to choose channel from the Channel List.
- 3. Press $[\rightarrow]$ and $[\downarrow]$ keys to choose Change and press the [Enter] key.
- 4. Do one of the following:

Edit channel: Use $[\uparrow]$, $[\downarrow]$ and the [Backspace] key to make modifications.

Delete channel: Erase channel number with the [Backspace] key.

- 5. Press the [Enter] key twice.
- 6. Press the [Esc] key.

9.5 Scan Channel Groups


You may store up to 10 scan groups, 20 channels per group. Note that scanning is only possible in the ARQ and FEC-collective modes.

The NBDP Terminal Unit can automatically control radio equipment through channel scanning. The radio equipment scans a number of channels (according to your selection), stopping when an incoming signal is found. In the ARQ mode it stops when your own ID code is detected in an incoming signal. Also, in the ARQ mode, the transmitter is then tuned to the corresponding transmitter frequency, the communication link is established and the traffic is automatically exchanged. Scanning resumes once the link is disconnected.

9.5.1 Registering scan channel groups

You may register ITU and user scan channels as follows:

1. Press the function key [F5] followed by the [3] key to display the Scan Entry screen.

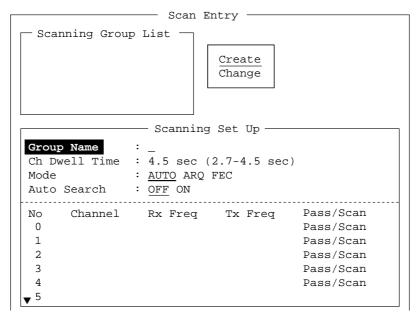

Scan entry screen

2. If Create is not underlined, press $[\rightarrow]$, $[\uparrow]$ and the [Enter] key to underline it.

- 3. Group Name is selected. Enter suitable group name. (10 group names may be entered. If you attempt to enter more the message "Scan group memory is full. Press any key to escape." appears. Press any key and then delete unnecessary group names to enter new ones.)
- 4. Press the [↓] key to choose CH Dwell Time. Enter channel dwell time in seconds. Dwell time is the time in seconds the receiver waits on each channel in a scan group before it selects the next frequency.
- 5. Press the [↓] key to choose Mode, and then choose the communication mode; AUTO, ARQ or FEC.

Note: AUTO is used to register scanning channel group when both ARQ and FEC exist in the same Scanning Channel Group. When you choose scan group by the call station menu, set Mode to FEC. See paragraph 11.3.

6. Press the $[\downarrow]$ key to choose Auto Search. Choose Auto Search to ON or OFF.

Auto Search ON: The radio stops scanning when it finds the strongest signal (highest

S/N ratio). To find the strongest signal, the radio scans all channels, which may take some time. Therefore, use this setting where signal

propagation is poor.

Auto Search OFF: The radio stops scanning on the first signal it finds. We recommend that you set Auto Search to OFF when signal propagation is good.

- 7. Press the [↓] key to choose line no. 1 in the Scanning Set Up window. Enter channel number (ITU or user channels) and press the [→] key to choose "Scan." (If you enter an invalid channel, the message "Channel by that name does not exist. Press any key to escape." appears. Press any key and reenter channel.)
- 8. Press the $[\downarrow]$ key to choose line No. 2. Enter channel number.
- 9. Enter other channel numbers and then press the [Enter] key. A confirmation message appears.
- 10. Press the [Enter] key again to save the data. The group name is displayed in the Scanning Group List window. (If the group name alredy exists, the message "Scan group by that name already exists. Press any key to escape." appears. Press any key and change the scan group name.)
- 11. To continue, press the [Enter] key twice and then repeat steps 3-10.
- 12. Press the [Esc] key to quit.

9.5.2 Editing/Deleting scan channel groups

- 1. Press the function key [F5] and the [3] key. Choose scan group name from the Scanning Group List.
- 2. Press the $[\rightarrow]$ key to choose Change and press the [Enter] key.
- 3. Press the $[\downarrow]$ key to place the cursor on the field (channel) to change.
- 4. Do one of the following:

Editing channels: Press the [Backspace] key to delete the channel

number and then enter new channel number.

Adding channels: Enter channel number on a blank line.

Deleting channels: Delete group name with the [Backspace] key.

Disabling channels temporarily: Press the $[\leftarrow]$ key to underline Pass.


5. Press the [Enter] key twice.

10 NBDP FILE OPERATIONS

This chapter mainly describes how to create, save, open, edit and print files. The Edit menu provides a full lineup of editing facilities, including search and replace.

10.1 Opening and Closing Files


To create a telex message you will need to make a new file, which you do with the File Open command. When you open a new file it is placed (opened) in one of two working areas. When both working areas are occupied you must close a file to open a new file. This is done with the File Close command.

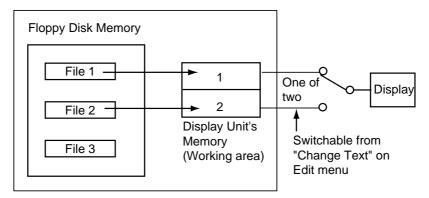

How a file is opened

10.2 Creating Files

1. Press the function key [F1] to display the File menu.

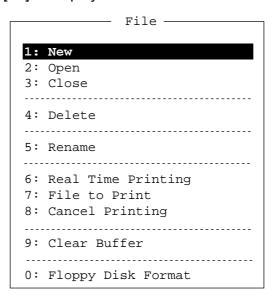

File menu

2. Press the [1] key to choose New. The title bar shows UNTITLED 1 or UNTITLED 2. The cursor marks the location where you may type text.

10 NBDP FILE OPERATIONS


Note: When two working areas have been opened, the close confirmation window appears. See paragraph 10.3.2 below. In this case, choose Yes or No and press the [Enter] key to close an open file in order to open another file.

3. Type your message.

Note: Do not use lower case letters, or the symbols #, &, *, \$ and % in telex messages. Also, do not put "\$\$\$" in the middle of a TX message, but at the end. The communication line is automatically disconnected when this string is detected.

10.3 Saving a File


Use only 2HD type floppy disks. Insert floppy disk with care. Rough handling can destroy the information stored inside. To eject a disk, press the eject button on the right side of the floppy disk drive and then remove the disk. Do not eject a disk while the operating lamp is lit; the contents of the disk may become damaged.

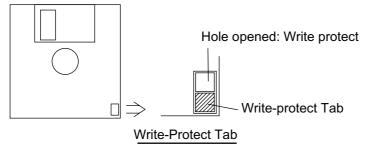

10.3.1 Formatting floppy disks

Before you can save a file to a floppy disk, the disk must be formatted. Formatting prepares the disk for use in the system.


- 1. Press function key [F1]. For the IB-583, insert a new floppy disk in the disk drive.
- 2. Press the [0] key to choose Floppy Disk Format.
- 3. Press the [†] key to choose Yes.
- 4. Press the [Enter] key. For the IB-581, insert a new floppy disk in the drive.
- 5. Press the [Enter] key. For the IB-583, the screen shows formatting progress as below.

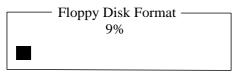

- 6. After the formatting has been completed, the following occurs:
 - IB-581: You are asked "Format another (Y/N)?" Press [N] and [Enter] to quit.
 - IB-583: Control is returned to the DSC standby screen.

10.3.2 Saving a file

- 1. Press the function key [F1] to display the File menu.
- 2. Press the [3] key. The screen should look something like the illustration at right.

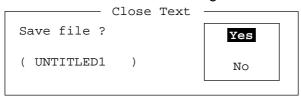

Close text screen

3. Yes is selected; press the [Enter] key. Enter file name, using up to eight characters. You may use any alphabet or numeric on the keyboard. But you may not use the symbols shown below. You may add an extension at the end of the file name, for example, .TXT, to distinguish text files from macro files.

```
\" * + , / : ; < = > ? [ ] | space
```

4. Press the [Enter] key.

10.4 Editing Files

10.4.1 Cutting and pasting text


You can delete, move and copy text by using the Cut, Copy and Paste functions in the Edit menu.



Edit menu

Cutting text

- 1. Place the cursor on the first character of the text to be cut.
- 2. Highlight the text to be cut by pressing and holding the [Shift] key while pressing the $[\rightarrow]$. If you highlight text which you do not want to cut, press the $[\leftarrow]$ to adjust the highlight.

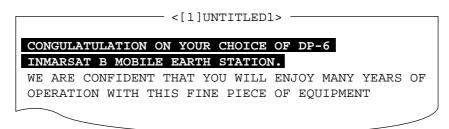

The highlight

3. Press the function key [F2] and the [2] key, or the [Delete] key. The highlighted text is cut and the remaining text is reformatted.

If you make a mistake, you can restore the text by immediately selecting Undo from the Edit menu.

Pasting text

To paste the cut text to a new location, do the following:

- 1. Place the cursor at the exact spot in the message where the cut text is to start.
- 2. Press the function key [F2] and the [4] key, or the [Insert] key.

10.4.2 Copying and pasting text

You may copy a portion of text and paste it elsewhere.

- 1. Choose the text to copy. (See "cutting text" above for the procedure.)
- 2. Press the function key [F2] and the [3] key.


 The text selected is copied to the paste buffer memory where the cut or copied text is stored.

 The display returns to the normal screen.
- 3. Place the cursor at the exact spot in the message where the copied text is to start.
- 4. Press the function key [F2] and the [4] key.

10.4.3 Select all

The Select All feature lets you select all of the file currently displayed. This feature can be useful when you want to combine files. The procedure below explains how to place the file loaded in working area 1 onto the end of the file loaded in working area 2.

- 1. Load the file to be copied from a floppy disk in working area 1.
- 2. Press the function key [F2] and the [5] key. The entire file appears in inverse video.
- 3. Press the function key [F2] and the [3] key. The file is placed in the paste buffer memory.
- 4. Load the file to be combined in working area 2.
- 5. Place the cursor at the exact spot in the message where the text now in the paste buffer memory is to start and press the [Insert] key.

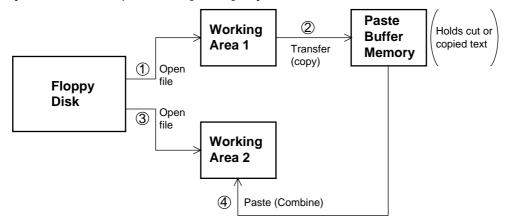


Copy and paste flow diagram

10.4.4 Searching text

The Search feature lets you search for text in a forward or backward direction.

1. Display a text and press the function key [F2] and the [6] key. The Search display appears.

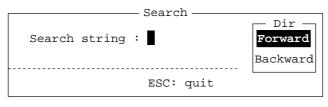

Search screen


2. Type the word you want to find. Use the Choose Forward or Backward to search the file in a forward or backward direction respectively from the cursor position. Press the [Enter] key to begin the search.

When the unit finds the word, the cursor stops at the first character of the word. Press the [Enter] key to continue the search. If the string could not be found, the message "Not Found (To quit: ESC)" appears. Press the [Esc] key to quit.

10.4.5 Replacing text

The Replace feature helps you replace every occurrence of a word or phase with another word or phase in a file.

1. Press the function key [F2] and the [7] key. The Replace display appears.

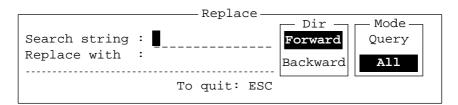

Replace screen

- 2. Type the word you want to replace on the "Search string" line.
- 3. Press the $[\downarrow]$ key to choose "Replace with." Type the new word.
- 4. Use the $[\uparrow]$ or $[\downarrow]$ key to choose Forward or Backward to search the file in a forward or backward direction respectively from the cursor position.
- 5. Use the $[\uparrow]$ or $[\downarrow]$ key to choose whether you want to be queried or not each time the word is found.

Query: Stop at each occurrence of word to answer yes or no to replacement.


All: Replace every occurrence of word without stopping to confirm.

6. Press the [Enter] key to start the replacement.

10.4.6 Goto line

The Goto line feature places the cursor at the head of a line desired.

1. Press the function key [F2] and the [0] key. The following display appears.

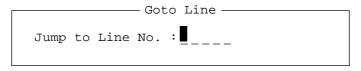

Goto line screen

2. Key in line number and press the [Enter] key. The cursor shifts to the head of the line selected.

10.4.7 Goto top, Goto bottom


You can easily go to the top or bottom line of a file. Press [F2], [8] to go to the top line; press [F2], [9] to go to the bottom line. Note that this feature can also be executed on the editor screen by pressing the [Home] key while pressing the [Fn] key.

10.5 Opening Files

Two working areas (called working area 1 and working area 2) are provided to which you can load a file, and one file may be displayed on the LCD.

10.5.1 Opening a file

- 1. Insert the floppy disk which contains the file you want to open.
- 2. Press the function key [F1] to display the File menu.
- 3. Press the [2] key. A chronological list of files on the floppy disk appears.

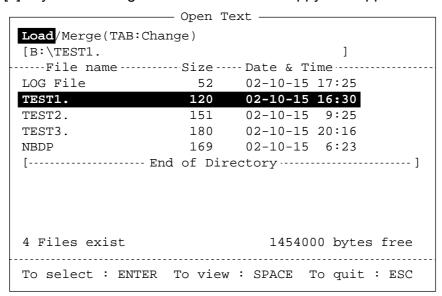

- 4. Use the $[\uparrow]$ or $[\downarrow]$ key to choose a file.
- 5. Press the [Enter] key.

The file appears and the title bar shows the file name. You may repeat this procedure to load another file into a working area.

Note: When two working areas have been opened, the close confirmation window appears. In this case, choose Yes or No and press the [Enter] key to close an open file in order to open another file.

10.5.2 Switching between files

Two files can be opened and one displayed on the LCD. To switch between files do the following:

- 1. Press the function key [F2].
- 2. Press the [A] key to switch between files.

10.6 Renaming Files

To rename a file, do the following:

- 1. Press the function key [F1].
- 2. Press the [5] key.
- 3. Use the $[\uparrow]$ or $[\downarrow]$ key to choose a file and press the [Enter] key.
- 4. Enter a new name.
- 5. Press the [Enter] key.

10.7 Saving a File Under a New Name

You may save a file under a new name as follows:

- 1. Open a file.
- 2. Edit the file as necessary.
- 3. Press the function key [F1].
- 4. Press the [3] key to save the file.
- 5. Press the [Y] key.
- 6. Press the [Backspace] key to erase the original name and then enter a new name.
- 7. Press the [Enter] key.

10.8 Deleting Files

Insert appropriate floppy disk in the drive and do the following to delete unnecessary files.

- 1. Press the function key [F1].
- 2. Press the [4] key.
- 3. Use the $[\uparrow]$ or $[\downarrow]$ key to choose the file to delete and then press the [Enter] key.
- 4. Press the [Enter] key again. (To cancel, press the $[\downarrow]$ key to select NO followed by the [Enter] key.)

10.9 Real Time Printing

An incoming or outgoing message can be printed out while it is being received or transmitted.

- 1. Press the function key [F1] to display the File menu.
- 2. Press the [6] key to turn real time printing on/off.

[&]quot;Print" appears in reverse video at the top of the display.

10.10 Printing Files

You can print files stored on floppy disks as follows:

- 1. Press the function key [F1].
- 2. Press the [7] key.
- 3. Use the $[\uparrow]$ or $[\downarrow]$ key to choose a file and press the [Enter] key.
- 4. Press the [Y] key.

To stop printing at any time, press [F1] and [8] keys.

If the file could not be printed, "Cannot print. Check connection between printer and terminal. Press any key to escape." is displayed.

11 NBDP TRANSMITTING, RECEIVING

This chapter mainly shows you how to transmit and receive telex messages.


11.1 Manual Calling

NOTICE

Before calling, watch the intended TX frequency carefully to confirm that is unoccupied.


The simplest way to communicate with a telex subscriber is Manual Calling. For the ARQ mode, you may display beforehand the message to send, or type your message manually.

1. Press the function key [F3] to display the Operate menu.

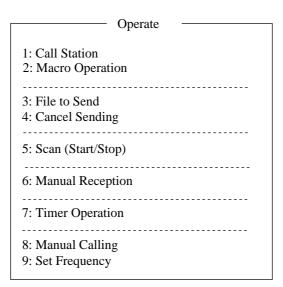


Operate menu

2. Press the [9] key to choose Set Frequency.

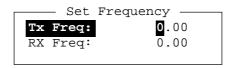

Set frequency screen

- 3. Input Tx and Rx frequency pair.
- 4. Press the [Enter] key.
- 5. Press the function key [F3] again and then the [8] key to choose Manual Calling. The following screen appears.

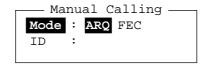

Manual calling screen

- 6. Use the $[\leftarrow]$ or $[\rightarrow]$ key to choose appropriate communication mode.
- 7. Press the $[\downarrow]$ key and input party's ID number.
- 8. Press the [Enter] key to connect the communication line. "Channel Busy Check" appears to inform you that the equipment is checking if the line is busy. If the line is free, "Connect", "Send" and "Lock" appear in highlight as below. Further, "HT" (High Tension) also appears when the line is connected.

For ARQ mode, go to step 9. For FEC mode, type your message and go to step 13.

9. Press the function key [F7] (WRU). The party's answerback code appears on the screen.

Note: Step 9 and 10 are needed for ship-to-ship calling only.


- 10. Press the function key [F8] (HR). Your ship's answerback code is sent to the party.
- 11. Press the [Enter] key and type your message.
- 12. If you want to receive other party's response, press the function key [F9] (Over).
- 13. Press the function key [F10] (Break) to disconnect the line.

11.2 ARQ Mode Operation


In ARQ operation, one station (information sending station) sends data to another block by block, then listens for the acknowledge signal between blocks from the information receiving station which requests either the next block or retransmission of the last block if there is error. The request may be repeated up to 32 times, until the complete block is received free of error.

Establishing connection

1. Press the function key [F3] to display the Operate menu.

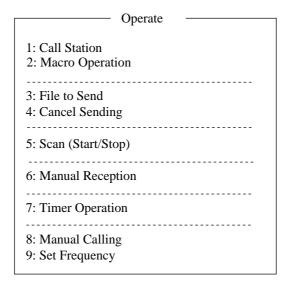

2. Press the [1] key to choose Call Station.

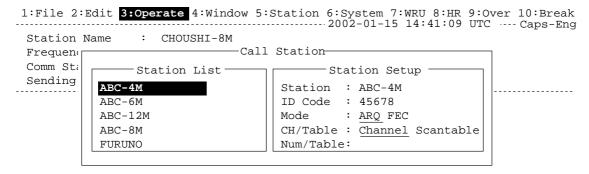

Call Station menu


- 3. Choose a station. (Station must be registered for use in the ARQ mode). Press the [Enter] key. The message "Calling Station" appears. If the message "Station calling suspended. Check radio and interconnections. Press any key to escape." appears, check both the power of the radiotelephone and the connections between the radiotelephone and the NBDP Terminal Unit.
- 4. When an acknowledge signal is detected, "Connect" appears in reverse video on the communication status display (see below).

Note: If signal conditions are poor, connection may take a while. If the line could not be connected in one minute, calling stops and "Calling failed" appears. Try step 3 again, one minute later. Should signal conditions worsen during message transmission, "Error" appears in reverse video and 30 seconds later the line is disconnected.

5. Transmit message by one of the following methods:

Sending a file stored on a floppy disk

- a) Press the function key [F7] (WRU) to receive the answerback code of the other station. Verify that the code from the station called is correct.
- b) Press the function key [F8] (HR) to transmit your own identity (answerback code).
- c) Press the function key [F3] and then the [3] key to display the Send screen. Choose file to send and press the [Enter] key. Press the [Enter] key again, and "Send" appears in reverse video while the file is being transmitted.

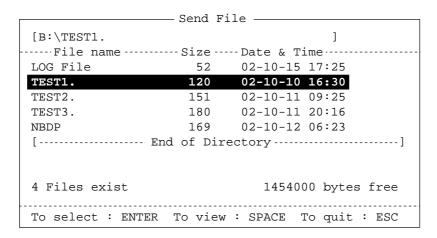

Send file screen

Sending volume (percentage of message transmitted, counts upward as the message is being transmitted), ARQ error count and ARQ transmission time appear on the display. "Lock" appears in reverse video when the mark and space signals in the receive signal are normal. "Sending Volume" shows what percentage of the message has been sent. "ARQ Error" shows the number of times error was found during transmission. "ARQ Time" is the time in seconds the communication line has been established.

```
1:File 2:Edit 3:Operate 4:Window 5:Station 6:System 7:WRU 8:HR 9:Over 10:Break 2:002-09-08 2:14:28 UTC -----Caps-Eng
Station Name : HT
Frequency (T/R): 8765.00 / 8965.00(kHz) Comm Mode :ARQ
Comm Status : Connect Send Lock Error
Sending Volume : 100(%) ARQ Error : 0 ARQ Time : 0(sec)
```

Communication status display

Type a message from the keyboard

After exchanging answerback code by the function key [F7] (WRU) and [F8] (HR), type your message directly from the keyboard.

- a) To change direction of traffic, press either function key [F9] (OVER), or [+] and [?]. Then, the other station becomes the information sending station, your station the information receiving station.
- b) Receive a message from the sending station, if any.
- c) After completion of communication, press the function key [F7] (WRU) key to receive the answerback code of the other station and then press the function key [F8] (HR) to transmit your own answerback code.
- d) Press the function key [F10] (Break) to disconnect the line.

Stopping transmission

- 1. Press the function key [F3] and then the [4] key. "Canceled Sending" appears on the screen. Transmission is stopped but the line is still connected.
- 2. To disconnect the line, press the [F10] key.

11.3 FEC Mode Operation

The FEC mode transmits the same data twice to yield less errors. Compared to the ARQ mode, the FEC mode is better at communicating with weak signals.

- 1. Press the function key [F3].
- 2. Press the [1] key to display the Call Station menu.
- 3. Choose a station which is registered for the FEC mode. Press the [Enter] key. "CONNECT" appears in reverse video.
- 4. Transmit a message directly from the keyboard, or do the following to transmit a message stored on a floppy disk:
 - Press the function key [F3] and the [3] key to choose File to Send. Choose file to send and then press the [Enter] key.
- 5. After the message is transmitted, press the function key [F10] (Break) to disconnect the line.

11.4 Choosing Receive Mode

- 1. Press the function key [F3] and then the [6] key.
- 2. Choose receive mode:

AUTO: Automatic reception in ARQ or FEC mode

ARQ: International radiotelex ARQ mode

FEC: International radiotelex FEC mode


DIRC: Receive message from teleprinter

3. Press the [Enter] key. The reception mode appears on the screen.

All received (and transmitted) messages are saved to a floppy disk when "TX/RX Msg Save" is ON in the System menu. The file is automatically named as follows.

11.5 Communication Example

Call the coast station following the procedure in paragraph 11.2. Then, communicate with the coast station. Below is a communication example.

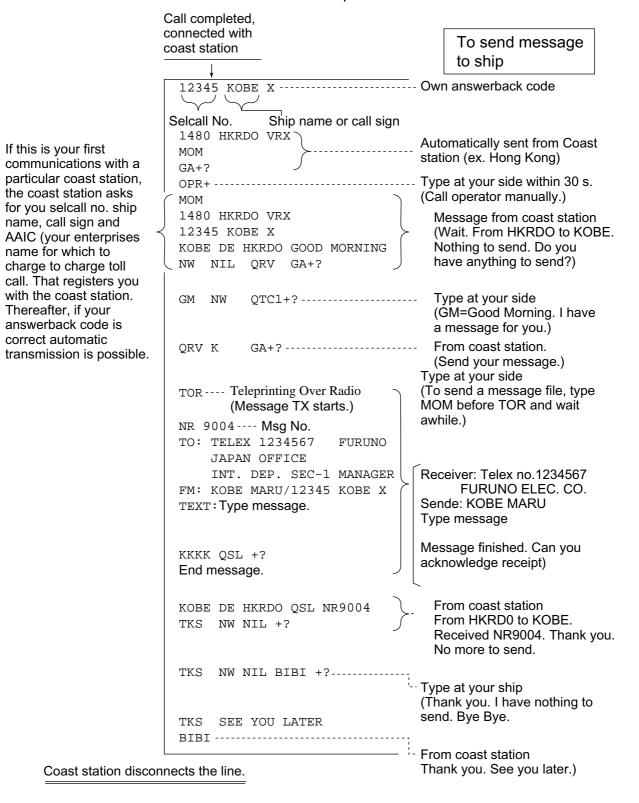

Communications example

Table of abbreviations

Question	Answer or Advice	
What is the name your station?	The name of my station is · · · · .	
By what private enterprise are the accounts for charges for your station settled?	The accounts for my station are settled by the private enterprise · · · · .	
Have you any thing for me?	I have nothing for you.	
Are you ready?	I am ready.	
When will you call me again?	I will call you again at · · · · hours [on · · · · kHz].	
What is the charge to be collected to · · · · including your internal charge?	The charge to be collected to · · · · including my internal charge is · · · · frans · · · · .	
Can you acknowledge receipt?	I can acknowledge receipt.	
Will you listen to · · · · [call sign] on · · · · kHz?	I am listening to · · · · [call sign] on · · · · kHz.	
Shall I cancel message number · · · · ?	Cancel message number · · · ·	
How many messages have you to send?	I have · · · · message for you.	
What are the hours your station is open?	My station is open from · · · · to · · · · hours.	
Definition		
Signal used to interrupt a transmission progress.		
Confirm		
"From · · · · "		
Invitation to transmit.		
I have nothing to send to you.		
Now		
Please		
Received		
Reference to · · · · .		
Prefix indicating a service telegram.		
	What is the name your station? By what private enterprise are the accounts for charges for your station settled? Have you any thing for me? Are you ready? When will you call me again? What is the charge to be collected to · · · · including your internal charge? Can you acknowledge receipt? Will you listen to · · · · [call sign] on · · · · kHz? Shall I cancel message number · · · · ? How many messages have you to send? What are the hours your station is open? Definition Signal used to interrupt a transmission Confirm "From · · · · " Invitation to transmit. I have nothing to send to you. Now Please Received Reference to · · · · .	

Command and abbreviation


Command	Function	
TGM+	To indicate that the following message is a radiotelegram.	
MSG+	To indicate that the ship station needs to be connected immediately any message held.	
OPR+	Call operator.	
URG+	Safety, urgency and distress message.	
MED+	Request medical advice.	
TEST+	Request coast station to send a test message for checking the ship station.	
BRK+	To clear the connection with the coast station.	
Abbreviation		
GA+	I am ready. Transmit your command.	
MOM	Wait a moment.	
MSG+	Request pending messages from the shore.	
KKKK or NNNN	Terminate a message.	

11.6 Timer Operation

A built-in timer permits automatic transmission and reception of telex messages.

11.6.1 Enabling timer operation

- 1. Press the function key [F3] to display the Operate menu.
- 2. Press the [7] key to display the Timer Operation List.
- 3. Choose the operation (name) you wish to execute. Press the [Enter] key. An asterisk appears beside the operation selected and "T. Op" appears in reverse video on the communication status display. If a file stored on a floppy disk is to be sent, be sure the floppy disk containing the file is inserted in the drive.

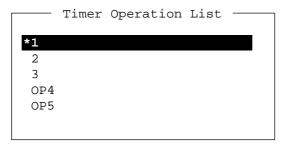

Timer operation list

- 4. Choose another operation (name) if desired.
- 5. Press the [Esc] key.

When the predetermined time comes, the NBDP Terminal Unit automatically sends or receives the message. The results of timer operation are displayed as either OK or NG (No Good) on the Timer Operation List.

	Timer	Operation List	
*1		OK	
2			
*3		OK	
*OP4		OK	
*OP5		NG	

Timer operation list

11.6.2 Stopping timer operation


- 1. Press the function key [F3].
- 2. Press the [7] key.
- 3. Choose the operation (name) which has an asterisk attached to it and then press the [Enter] key. Remove all asterisks to cancel all timer programs.

11.7 Scanning

The radio equipment scans a group of operator-selected frequencies (channels), and stops scanning when an signal is received. For registering scan group, see paragraph 9.5.

1. Press the function key [F3] and then the [5] key to show the Scanning Group List on your screen.

You can confirm the scan channel by pressing the $[\uparrow]$ or $[\downarrow]$ key while pressing the [Shift] key.

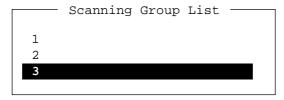

Scanning group list

- 2. Choose a scan group and press the [Enter] key.
- 3. The scanning starts and the indication "Scan" appears in reverse video. Further, the name of the scan group appears in the Station Name field.

Communication status display

4. To stop scanning, press the function key [F3] and then the [5] key. "Scan" appears in normal video on the communication status display.

11.8 Communication Buffer

The communication buffer is a temporary memory which stores transmit and receive messages. To display the contents of the communication buffer, do the following:

- 1. Escape from the message creation screen.
- 2. Press the [PgDn] or [PgUp] key. The contents of the communication buffer are displayed.

To print them, press the [Ctrl] and [P] keys simultaneously. To erase the contents from the screen, press the [PgDn] key while pressing the [Fn] key.

To erase the contents of the buffer, press the [F1] and [9] keys.


11.9 Preparing Macrofiles for Automatic Telex

11.9.1 Automatic telex overview

This section shows you how to communication with a coast station which handles automatic telex transmission, using macrofiles. You will also need to register communication channels and stations, and prepare macrofiles.

Coast stations using automatic telex are MCI Marine Services (North America), Sydney Radio (Australia), Lyngby Radio (Denmark), and others. The procedure is mostly common to all coast stations, however refer to the coast station's traffic manual for details.

INTERNATIONAL TELEX NETWORK

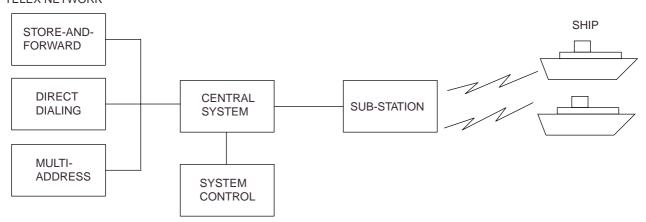

Sample automatic telex network

The service available in automatic telex are

- Message transfer between ship and coast station (store-and-forward)
- Connection with landline telex (direct dialing)
- Multi address.

11.9.2 Preparations

To use automatic telex, you will need to register three items:

- Answerback code
- Scan groups
- Station names

Registering answerback code

The coast station assigns a Telex number. This number functions as an answerback code. An answerback code contains the following:

00000 SHIP X

OOOOO: Coast station-assigned five-digit telex code

SHIP: Ship name

X: For shipboard station, normally X is entered.

The procedure for registering the answerback code is the same as which appears on page 9-1. If an answerback code was registered before the commissioning of the coast station, a new answerback code must be entered. To enter a new answerback code, contact FURUNO or an authorized FURUNO agent or dealer.

Registering scan groups

The central system emits a free-signal to indicate a coast station radio channel is in idle condition and available for ship-to-shore calls. The free-signal is detected and recognized by the shipboard equipment as a permission to start the transmission. Then, the shipboard operator initiates a call.

You can scan search for the free-signal automatically by registering coast station radio channels in scan group(s). The procedure for registering scan groups for coast station use is the same as that which appears on page 9-7.

Registering stations

The next step is to enter station name. The procedure is the same as that shown on page 9-3.

11.9.3 Commands

The tables which follows describe the commands for macro operation

Command	Parameter	Content	
(Prefixed with @)			
CALL	S: Station Name	Calling station name and ID on assigned parameter	
FREE (support command for CALL)	Two digits, 0-99 min.	Free-signal searching time according to assigned parameter (default setting: 10 min)	
	\$RRR\$ signal	Detect free signal of dot pattern	
RETRY (support command for CALL)	Two digits, 0-99 min.	Calling according to assigned parameter (default setting: 10 min)	
CASE	Text	For receiving a message (designated by parameter) transmitted by coast station	
TIMEOUT (support command for CALL)	Two digits, 0-99 min.	Time allotted for reception of message by CASE command	
SEND	Text	Text transmitted according to assigned parameters	
	B file name (IB-581) A:\file name (IB-583)	Send a file from floppy disk	
WRU HR OVER BREAK	None	Function keys F7 – F10	
DISPLAY	Text	Text of message appears	
INPUT	None	Waiting for keyboard input Transmit keyboard input message	

Commands processed by Danish coast station Lyngby

Command	Function
BRK+	Disconnection communications line
DIRTLX+	Direct dialing telex (receive only)
KKKK	Terminate message
LTR+	For telex letters mailed from Operations Station to destinations worldwide
MED+	Request medical advice
OPR+	Requesting operating assistance
POS+	Send position data
STA+	Status requested on a store-and-forward message
TLX+	Store-and-forward method

For details, consult the coast station's traffic manual.

11.9.4 Store-and-forward method

The following is the sequence of events in transmission of a file by the store-and-forward method.

- 1. Shipboard station sends message to coast station.
- 2. Coast station stores message in memory buffer.
- 3. Shipboard station and coast station clear the radio circuit.
- 4. Coast station sends message to subscriber designated.

Actual procedure for store-and-forward telex

<u>No.</u>	<u>Procedure</u>	<u>Display</u>	<u>Remarks</u>
1	Call a coast station.	CONNECT appears in reverse video (and bell sounds).	Free-signal found; radio circuit ready.
2	Transmit WRU signal.	00190 TLG DK 26 X X X SHIP X GA+?	Initial identity exchange between coast station and shipboard station
3	Key in subscriber's Telex number. Example: (Hong Kong) 12345		_
	TLX80212345+	MSG+?	Request to start message transmission
4	Transmit file.		Message transmission
5	When transmission is completed, type KKKK.	26 X X X SHIP X 00190 TLG DK GA+?	Transmit your answerback code. Receive other party's answerback code.
6	Transmit BREAK command to clear radio circuit.		J

Procedure for preparing a macrofile for store-and-forward method

You will need a macrofile to enable automatic message transmission by store-and-forward method. After preparing it, save it to a floppy disk for future use.


- 1. Press function key [F1] to display the File menu.
- 2. Press the [1] key.
- 3. Prepare macrofile. Below is simple example.



- 1 Search dot pattern free signal until it is found
- ② Station name (Example: LYNGBY RADIO)
 Who are you?
 Station identity exchange
- ③ Subscriber's Telex number (in example, 802 is country code of Hong Kong) for store-and-forward method
- 4 Location and name of file message B: ABC (IB-581), A:\ABC (IB-583)
- ⑤ Request for termination of message

Sample macrofile for store-and-forward method

- 4. Press function key [F1] to display the File menu.
- 5. Press the [3] key. The Close Text appears on the display.

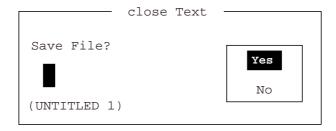

Close text prompt

6. Press the [Enter] key and enter a file name as follows:

OOOOOOOO.MCR


↑ ↑

File Name Extension Name
(max. 8 characters)

7. Press the [Enter] key.

DIRTLX macrofile

Sample DIRTLX macrofile

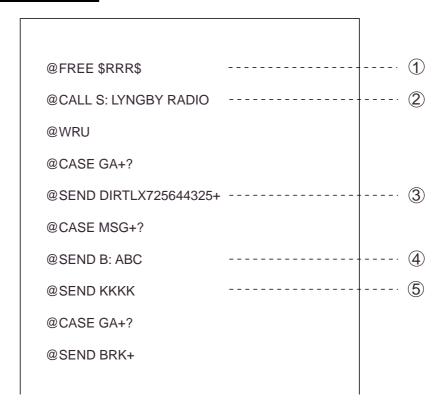

- ① Search dot pattern free signal until it is found
- ② Station name (Example: LYNGBY RADIO) Who are you? Station identity exchange
- ③ Subscriber's Telex number (in example, 72 is country code of JAPAN) for direct dialing mode
- ④ Location and name of file message B: ABC (IB-581), A:\ABC (IB-583)
- ⑤ Request for termination of message

Sample DIRLTX macrofile

Procedure for DIRTLX

<u>No.</u>	<u>Procedure</u>	<u>Display</u>	<u>Remarks</u>
1	Call a coast station.	CONNECT appears in reverse video (and bell sounds).	Free-signal found; radio circuit ready.
2	Transmit WRU signal.	00190 TLG DK 26 X X X SHIP X GA+?	Initial identity exchange between coast station and shipboard station
3	Key in subscriber's Telex number. Example: (Japan) 5644325		
	DIRTLX725644325+	12:20 MOM 5644325 FURUNO J MSG+	Request to start message transmission
4	Transmit file.		Message transmission
5	When transmission is completed, type KKKK.	26 X X X SHIP X 5644325 FURUNO J 00190 TLG DK DURATION TIME GA+?	Transmit your answerback code. Receive other party's answerback code.
6	Transmit BREAK command to clear radio circuit.		I

11.10 Automatic Telex using Macrofile


This section describes how to transmit a telex message using a macrofile.

Basic procedure

- 1. Register answerback code (Telex number assigned by coast station).
- 2. Register coast station frequency and channel to scan group.
- 3. Register station name including scan group name.
- 4. Retrieve appropriate macrofile. Include station name and message file name. Type message and save file to memory.
- Open macro operation menu and select a macrofile. (See next page for details.) Your message will be transmitted automatically. Below is the sequence of automatic message transmission to a coast station.
 - a) Search for free-signal
 - b) Call coast station on one of its radio channels
 - c) After connection is established, identity exchange
 - d) Transmission of service category and subscriber's address
 - e) Transmission of message
 - f) Transmission of termination of message signal
 - g) Identity exchange
 - h) Clearing of radio circuit


Actual procedure

1. Press function key [F3] to display the Operate menu.

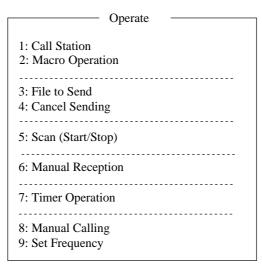


Operate menu

2. Press the [2] key to display the Call Macro screen.

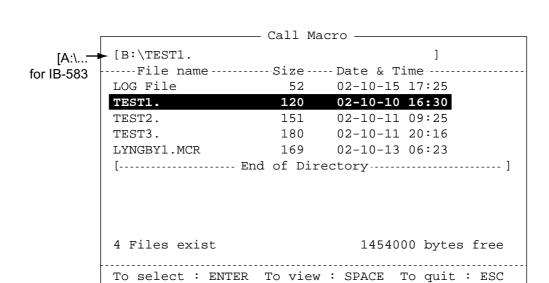


Call macro screen

- 3. Press the [↓] key to choose a macrofile.
- 4. Press the [Enter] key.

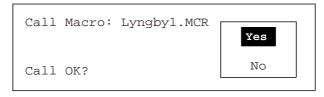

5. Press the [Enter] key to confirm the macrofile selected. The Wait for Free Signal indication appears. Your message will be transmitted automatically.


12 MAINTENANCE & TROUBLESHOOTING

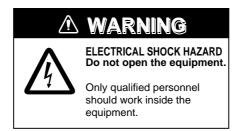


12.1 Daily Test

Authorities require that the DSC/watch receiver be checked daily for proper operation to ensure that it will function properly in the event of distress. Execute the daily test as below.

- 1. At the DSC standby screen, press the [3/TEST] key to start the test.
- 2. After several seconds the test results, OK, for normal operation, NG for No Good. For NG (No Good) contact your dealer for advice.

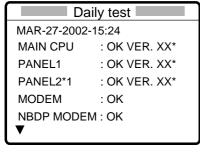

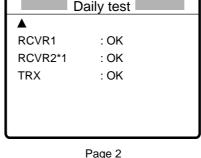

*: XX = Version No.

*1: Shown if equipped with No. 2 control unit.

Page 1

Test results

- 3. After the test results for the items on page 2 appear, the audio alarm sounds, the ALARM lamp flashes several times and then page 1 of the daily test is displayed.
- 4. If auto printing is active, the test
- DAILY TEST

 MAR-27-2002-15:24:00

 MMSI: 123456789

 MAIN CPU: OK VER.**

 PANEL1 CPU: OK VER.**

 PANEL2 CPU:* OK VER.**

 NBDP MODEM: OK VER.**

 RCVR1: OK

 RCVR2:* OK

 TRX: OK
- * = PANEL2 CPU, RCVR2 printed if equipped with no. 2 control unit.
- ** = Version No.


- results are printed. To manually print the test results, press the [8/PRINT] key. Above is a sample test results printout.
- 5. Press the [CANCEL] key to quit the test and return to the DSC standby screen.

Note: TEST on the DSC Setup menu is for used by service technicians.

12.2 Radiotelephone Test

Do the following to check the radiotelephone for proper operation:

 At the radiotelephone screen, press the [3/TEST] key to start the test. OK or NG (No Good) appears as the test result for each item checked. For NG, contact your dealer for advice.

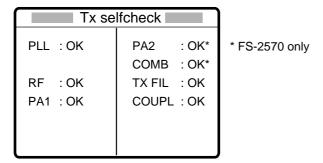

2. Press the [CANCEL] key to quit the test and return to the previously used screen.

12.3 Antenna Coupler Test

The CPU and the relays which choose capacitors and coils for tuning can be checked. For qualified technicians only.




- 1. Open the antenna coupler cover.
- 2. Open the shield cover inside the coupler.
- 3. Turn on the #2 switch of DIP switch S2.
- 4. Press the TUNE switch in the antenna coupler.
- 5. 24 LEDs (CR1 to CR24) light one by one every second. Relays trip on with corresponding LEDs as below.

CR1 ON – K1 ON CR2 ON – K2 ON

CR22 ON – K22 ON (CR23 not provided) CR24 ON – K24, K25 ON

- 6. Turn off the #2 switch of DIP switch S2.
- 7. Close the cover.

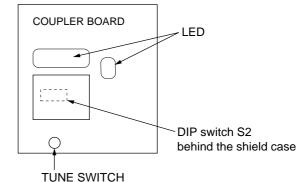

If CPU error is detected, CR1 lights for ROM error, CR2 for RAM error, CR3 for A/D converter error. (ROM/RAM/ A/D converter is incorporated in the CPU.)

12.4 Maintenance

Regular maintenance is vital for maintaining performance. Following the procedures below will help keep the equipment in top operating condition.

Maintenance check points

ltem	Check Point	Remedy/Remarks
Antenna	Check for physical damage and corrosion.	Replace damaged parts.
Wire antenna	Check that the antenna is properly spanned and separated sufficiently from metallic structures.	If necessary, re-span antenna.
Insulators for antenna	Check for salt water deposits on insulators. Check that connection at the lead-in insulator is tight and rust-free.	Replace damage insulators. Remove salt water deposits. Clean with fresh water, then dry. Remove rust, then tighten bolts and lock nuts. Cover metallic surface with sealing compound.
Antenna coupler	 Check condition of antenna terminal, ground, coaxial cable and control cable. Check that coupler lid and cable glands are firmly secure. Check for physical damage, corrosion and salt water deposits. 	 Tighten loosened connections. Fasten lid firmly and evenly to prevent water leakage. Replace if damaged.
Control unit	 Check ground connection, control cable, and external equipment. Confirm that there are no objects on the top of the control unit. Remove dust from control unit with soft cloth. Note: Do not use chemical cleaners to clean the display unit; they can remove paint or markings or deform the equipment. 	 Tighten loosened connections; remove foreign material from connectors. Remove any objects. Wipe the LCD carefully to prevent scratching, using tissue paper and an LCD cleaner. To remove dirt or salt deposits, use an LCD cleaner, wiping slowly with tissue paper so as to dissolve the dirt or salt. Change paper frequently so the salt or dirt will not scratch the LCD.
Transceiver unit	 Check connection at signal cable, coaxial cable, control cable, power cable, and navigator. Confirm that there are no objects on the 	Tighten loosened connections; remove foreign material from connectors. Remove any objects.
Power supply	 top of the cabinet. Check that the supply voltage at transmission is within the rated range (21.6 to 31.2 VDC at the power connector). 	If not within the range, call for service. Low voltage may cause erratic operation.

12.5 Replacement of Fuses


To protect the FS-1570 from overcurrent and equipment fault, two fuses are provided in the PR-300 Power Supply Unit. If a fuse blows, find the cause before replacing it. If it blows again after replacement, request service.

A CAUTION

Use the proper fuse.

Use of the wrong fuse can cause serious damage to the equipment and void the warranty.


Unit	Fuse	
Power Supply Unit PR-300	10 A (100 VAC) or 5A (200 VAC)	
	and 20 A (24 VDC)	

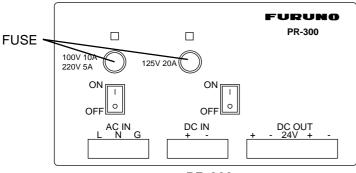

PR-300

Note: The Power Supply Unit PR-850A, used with the FS-2570, does not have a fuse but a circuit breaker. If the breaker has tripped, find the reason before resetting the breaker (upward position).

BREAKER

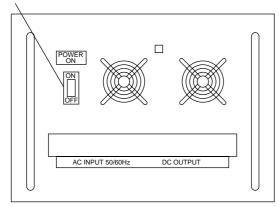

PR-850A

12.6 Simple Troubleshooting

The table below provides common problems and the means with which to restore normal operation. If normal operation cannot be restored, do not attempt to check inside the equipment. Any servicing should be referred to a qualified technician.

Problem	Probable cause	Remedy
Power cannot be turned on.	Mains switchboard may be off.	Turn on the mains switchboard.
	 (DC) voltage is too high. Battery may have discharged, or poor contact at terminals. 	 Check supply voltage. Recharge battery and tighten battery terminals.
Display indications do not appear but key lamps are lit.	Contrast is too low.	Operate the [9/ key to adjust contrast.
Power is on but no sound from loudspeaker.	Loudspeaker is off.	Operate the [7/□] key to turn on the loudspeaker.
Poor articulation	 Wrong class of emission may be in use. 	Class of emission should match that of incoming signal.
Output power reduced to LOW	Power is automatically reduced to protect against overheating due to continuous transmission.	Wait until the unit returns to normal condition.
Antenna coupler cannot tune antenna	Antenna may be disconnected or shorted to ground.	Check antenna connection.
	 Antenna is out of tunable length. 	Recommended length is 7 to 30 meters.
	Poor grounding of antenna coupler.	Check coupler ground.
	Breaker in coupler has tripped.	Checks mains voltage and polarity. If normal, reset breaker.
	Connection cable loosened or disconnected.	Check cable.

12.7 Error Messages

The table below shows error messages and their meanings.

Error messages


Error message	Meaning	Remedy
Busy: RT	Radiotelephone is in operation.	Wait until the radiotelephone is free.
Channel Busy	You attempted to transmit on a channel which is currently busy. (This occurs with	The message is automatically erased when the channel becomes clear.

	Routine and Business	
	priorities only.)	
EPFS error	No position data from	Press the [CANCEL] key to silence the
	navigator for one minute.	alarm. Check the navigator. If it is
		malfunctioning, manually enter position.
Incoming	Incoming DSC call	Message is automatically cleared when
		DSC signal has gone.
No position data	You attempted to enter	Check the navigator.
	position automatically when	
	there is no position data.	
No response: RT	Radiotelephone not powered	Check radiotelephone.
·	or has been disconnected.	·
Oven cold. Tx not	Oven too cold; cannot	Wait until the oven becomes sufficiently
ready; wait	transmit.	warm.
Printer not ready	Automatic printed has been	Check printer.
	selected; however, printer is	
	not powered or has been	
	disconnected.	
Trouble: Oven not	Oven not ready; cannot	Wait until the oven is ready.
ready	transmit.	
TRX PLL UNLOCK	TRX PLL unlock.	Check if the reference oscillator is
	Transmission is stopped.	working and the coaxial cable is tightly connected.
TUNE error	Tuning failed for DSC or	Try to tune again.
	NBDP. Transmission (except	
	distress) is stopped.	
Warning: Update	Position data is older by the	Press the [CANCEL] key to silence
position	amount of time preset on the	alarm. Reenter position on the Position
	Alarm menu.	menu.
Watchdog error.	Internal error (such as CPU	Turn the power off and on to erase the
Please Power OFF	trouble) detected.	message. Have a qualified technician
	Accompanied with alarm,	check the set.
	same type as for distress.	
WR1 PLL UNLOCK	WR1, WR2 PLL unlock.	Check if the reference oscillator is
WR2 PLL UNLOCK	Transmission is stopped.	working and the coaxial cable is tightly connected.


12.8 Test Call

This function sends a test signal to a coast station, over one of six distress and safety frequencies. For that reason, it should not be executed unnecessarily. You can prepare a test call beforehand (see Chapter 6) or at the moment you intend to send a test call. To send a prepared test call, see page 6-9 for the procedure.


1. Press the [2/DSC] key at the DSC standby screen and then push the [ENTER] knob to open the CALL TYPE menu.

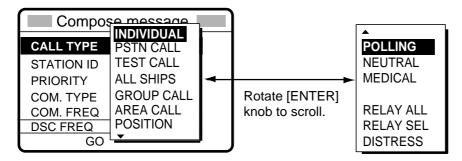


- 2. Rotate the [ENTER] knob to choose TEST CALL and then push the [ENTER] knob.
- 3. Push the [ENTER] knob to open the COAST ID menu.

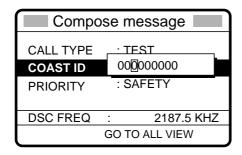


- 4. Using the numeric keys, key in the ID of the coast station ID (seven digits) where to send the call and then push the [ENTER] knob.
- 5. Push the [ENTER] knob to open the DSC FREQ menu. (Note that PRIORITY is automatically selected to SAFETY.)

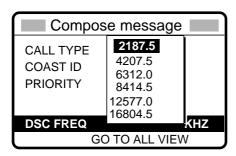


6. Rotate the [ENTER] knob to choose an appropriate frequency and then push the [ENTER] knob. The display changes as below.

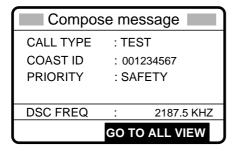


7. Press the [CALL] key to send the test call (transmission time: about seven seconds). The display shows "Test call in progress!" while the test call is being transmitted.

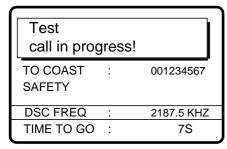


8. After the test call has been sent, the following message appears.

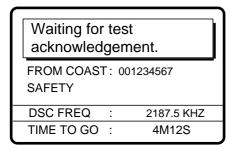

9. One of the following displays appears. ("No response! Try calling again?" appears when the timer counts down to zero, meaning no response from coast station.)

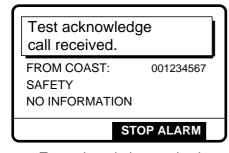



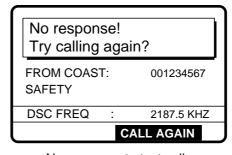


No response to test call

10. Do one of the following depending on the message shown in step 9.

Test acknowledge call received

The audio alarm sounds; press the [CANCEL] key to silence the alarm. The display changes as below.

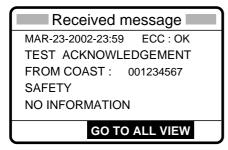

No response! Try calling again?

Re-send call: Push the [ENTER] knob and then press the [CALL] key. **Cancel call:** Press the [CANCEL] key to return to the DSC standby screen.

12.9 NBDP Terminal Unit Maintenance

Regular maintenance is important for good performance. A regular maintenance program should be established and should at least include the items mentioned below.

12.9.1 Cleaning the equipment

Wipe of accumulated dust from the terminal unit with a soft cloth. Wipe the LCD carefully to prevent scratching, using tissue paper and an LCD cleaner. To remove dirt or salt deposits, use an LCD cleaner, wiping slowly with tissue paper so as to dissolve the dirt or salt. Change paper frequently so the salt or dirt will not scratch the LCD. Do not use solvents such as thinner, acetone or benzene for cleaning; they can remove paint and marks or deform the equipment.

12.9.2 Connectors and earth connection

Periodically check the connectors for proper seating and the earth connection for rust. Remove rust to maintain a good ground system.

12.9.3 Floppy disk drive

Foreign material on the floppy disk drive head can scratch the magnetic material in the floppy, resulting in loss of data. Clean the floppy disk drive head regularly with a floppy disk drive cleaning disk to prevent erasure of information stored on disks.

12.9.4 Diagnostics

General diagnostics


1. Press the function key [F6] to display the System menu.

Setup	System Lock Change Default
Slave Delay	8 msec (0- 50 msec)
TX/RX MSG Save Edit Before sending	ΩFE O N ΩFE O N
Time System Time & Date Display Mode* Self Test	OFF <u>UTC</u> SMT JST 2002/10/16 10:00:00 <u>Normal</u> Reverse

^{* =} Window Color shown on IB-583.

System menu

- 2. Choose Change from Setup.
- 3. Choose Self Test (at the bottom of the screen).
- 4. Press the [Enter] key. The results of the self test are displayed a short time later.

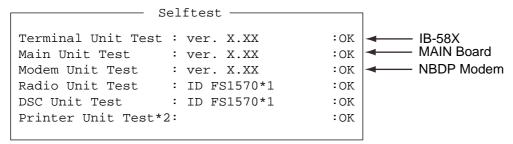

X.XX = Version No.

- *1: Or FS2570
- *2: "NG" and "Printer not ready" when printer is off or is abnormal.

Self test results

The test results are shown as OK or NG (No Good). For any NG, try the self test again. If it appears again, call for service. When the test is completed, the message "Selftest Completed. Press any key to escape." appears.

Tone test

- 1. Choose Self Test from the System Menu as shown in paragraph 12.8.4.
- 2. While pressing and holding down the [Shift] key, press the $[\downarrow]$ key to show the Tone Test menu.

```
Tone Test

1: Tone Test 1 (All Char)

2: Tone Test 2 (Fox)

3: Tone Test 3 (Beta)

4: Tone Test 4 (Mark)

5: Tone Test 5 (Space)

6: Tone Test 6 (BY)
```

Tone test menu

3. Choose a test and press the [Enter] key. You may stop a tone test at anytime by pressing the [Enter] key.

Tone test 1 (All characters)

This test checks for proper transmission of all figures, letters and codes. To conduct the test, call a station in the ARQ or FEC mode. Execute the test, confirming that all characters are transmitted correctly. "Now testing Tone Test 1" appears during the testing. Since the test is conducted continuously, you may press the [Esc] key twice followed by the [F10] key to stop the test and return to the tone test menu.

```
1:File 2:Edit 3:Operate 4:Window 5:Station 6:System 7:WRU 8:HR 9:Over 10:Break

System

Station Name : Setup Lock Change Default

Frequency (T/R): /
Comm Status : Connect Sen
```

```
Now Testing Tone Test 1 (All Char).
```

ABCDEFGHIJKLMNOPQRSTUVWXYZ1234567890-?:().,'=/+abcdefghijklmnopqrstuvwxyz

ABCDEFGHIJKLMNOPQRSTUVWXYZ1234567890-?:().,'=/+abcdefghijklmnopqrstuvwxyz

ABCDEFGHIJKLMNOPQRSTUVWXYZ

Tone test

Tone test 2 (Fox)

This test (continuously) checks for proper transmission of the test message THE QUICK BROWN FOX JUMPS OVER THE LAZY DOG 0123456789. To conduct the test, call a station by using the ARQ or FEC mode.

Tone test 3 (Beta)

You may check for proper transmission of the idle signal β . Call up a station using the ARQ mode.

Tone test 4 (Mark)

This test outputs the mark signal through the LINE OUT terminal, where a frequency counter may be connected, to confirm its frequency (1615 Hz).

Tone test 5 (Space)

Tone test 5 verifies the space signal frequency (1785 Hz).


Tone test 6 (BY)

This test verifies the frequency of the space B (1785 Hz) and the mark Y (1615 Hz), using a spectrum analyzer.


APPENDIX

Menu Tree

DSC/watch receiver

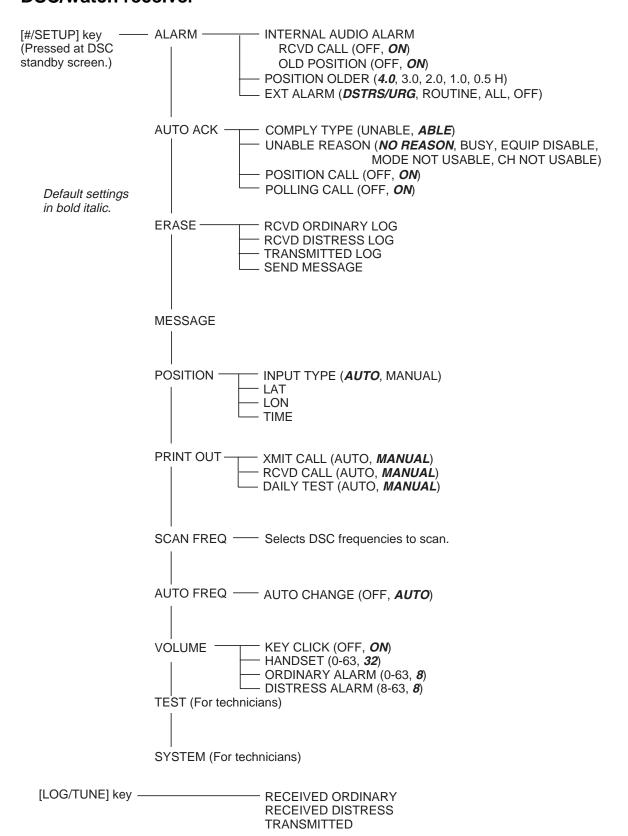


Radiotelephone

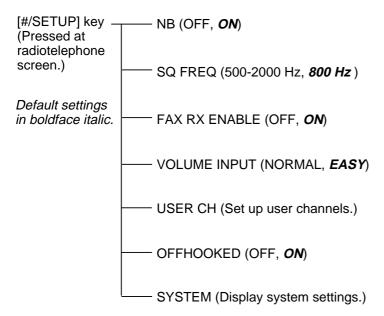

NBDP terminal unit (telex)

Default settings in boldface italic.

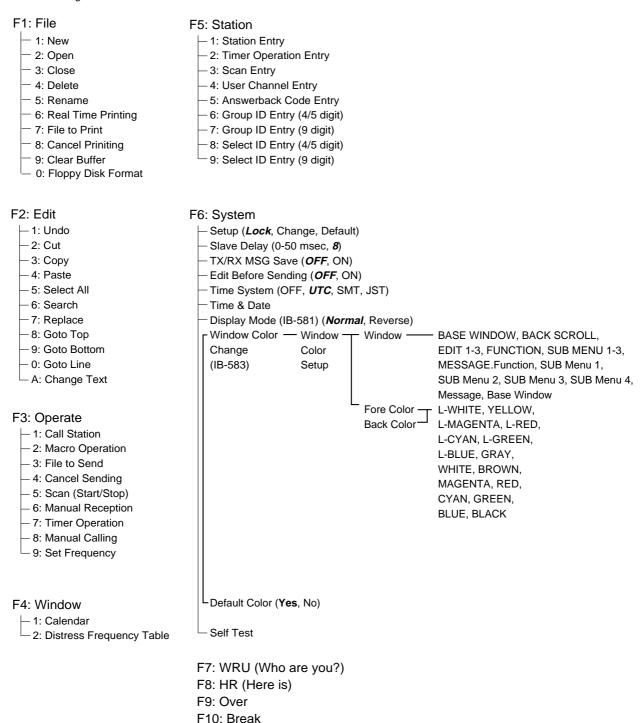

Frequency Tables

DSC frequency table

TX (kHz)	RX (kHz)	Remarks	File Name
2187.5	2187.5		
4207.5	4207.5		
6312.0	6312.0	Distress and	
8414.5	8414.5	Safety Frequencies	
12577.0	12577.0		
16804.5	16804.5		
458.5	455.5		INTL-0.4M
2189.5(2177.0*)	2177.0		INTL-2M
4208.0	4219.5		INTL-4M
6312.5	6331.0		INTL-6M
8415.0	8436.5	International	INTL-8M
12577.5	12657.0	Frequencies	INTL-12M
16805.0	16903.0		INTL-16M
18898.5	19703.5		INTL-18M
22374.5	22444.0		INTL-22M
25208.5	26121.0		INTL-25M
4208.5	4220.0		LOCAL1-4M
6313.0	6331.5		LOCAL1-6M
8415.5	8437.0		LOCAL1-8M
12578.0	12657.5	Local-1	LOCAL1-12M
16805.5	16903.5	Frequencies	LOCAL1-16M
18899.0	19704.0		LOCAL1-18M
22375.0	22444.5		LOCAL1-22M
25209.0	26121.5		LOCAL1-25M
4209.0	4220.5		LOCAL2-4M
6313.5	6332.0		LOCAL2-6M
8416.0	8437.5		LOCAL2-8M
12578.5	12658.0	Local-2	LOCAL2-12M
16806.0	16904.0	Frequencies	LOCAL2-16M
18899.5	19704.5		LOCAL2-18M
22375.5	22445.0		LOCAL2-22M
25209.5	26122.0		LOCAL2-25M

^{* =} Ship-to-ship

Custom channels (to be programmed by FURUNO dealers)

CH NO	Ship Receive (kHz)	Ship Transmit (kHz)	Remarks

MF band working carrier frequencies (ref. US CFR 47 Part 80.371)

	Ship Transmit	Ship Receive
Region	•	_
	(kHz)	(kHz)
East Coast	2031.5	2490.0
	2118.0	2514.0
	2126.0	2522.0
	2142.0	2538.0
	2166.0	2558.0
	2198.0	2590.0
	2366.0	2450.0
	2382.0	2482.0
	2390.0	2566.0
	2400.0	2400.0
	2406.0	2506.0
West Coast	2003.0	2450.0
	2009.0	2442.0
	2009.0	2566.0
	2031.5	2566.0
	2126.0	2522.0
	2206.0	2598.0
	2382.0	2466.0
	2430.0	2482.0

Region	Ship Transmit	Ship Receive
Kegion	(kHz)	(kHz)
Gulf Coast	2009.0	2466.0
	2134.0	2530.0
	2142.0	2538.0
	2158.0^{1}	2550.0
	2166.0	2558.0
	2206.0	2598.0
	2366.0	2450.0
	2382.0	2482.0
	2430.0	2572.0
	2458.0	2506.0
Great Lakes ²	2118.0	2514.0
	2158.0	2550.0
	2206.0	2582.0
Alaska	2131.0	2309.0
	2134.0	2312.0
	2240.0	2400.0
Hawaii	2134.0	2530.0
Caribbean	2009.0	2506.0
	2086.0 ³	2585.0
	2134.0	2530.0
Guam	2009.0	2506.0

Above frequencies are not programmed. Contact a FURUNO representative.

^{1 =} Unlimited use December 15 to April 1

^{2 = 2206} kHz for distress only

^{3 =} Limited to pep of 150 W.

MF band SSB working carrier frequencies

CH NO	Ship Receive	Ship Transmit
CH NO	(kHz)	(kHz)
241	1635	2060
242	1638	2063
243	1641	2066
244	1644	2069
245	1647	2072
246	1650	2075
247	1653	2078
248	1656	2081
249	1659	2084
250	1662	2087
251	1665	2090
252	1668	2093
253	1671	2096
254	1674	2099
255	1677	2102
256	1680	2105
257	1683	2108
258	1686	2111
259	1689	2114
260	1692	2117
261	1695	2120
262	1698	2123
263	1701	2126
264	1704	2129
265	1707	2132
266	1710	2135
267	1713	2138
268	1716	2060
269	1719	2063
270	1722	2066

CH NO	Ship Receive	Ship Transmit
CH NO	(kHz)	(kHz)
271	1725	2069
272	1728	2072
273	1731	2075
274	1734	2078
275	1737	2081
276	1740	2084
277	1743	2087
278	1746	2090
279	1749	2093
280	1752	2096
281	1755	2099
282	1758	2102
283	1761	2105
284	1764	2108
285	1767	2111
286	1770	2114
287	1773	2117
288	1776	2120
289	1779	2123
290	1782	2126
291	1785	2129
292	1788	2132
293	1791	2135
294	1794	2138
295	1797	2060

4/6 MHz ITU SSB carrier frequencies (ITU RR Appendix 16)

	4 MHz SSB (J3E)	
ITU CH NO	Ship RX	Ship TX
401		
_	4357	4065
402	4360	4068
403	4363	4071
404	4366	4074
405	4369	4077
406	4372	4080
407	4375	4083
408	4378	4086
409	4381	4089
410	4384	4092
411	4387	4095
412	4390	4098
413	4393	4101
414	4396	4104
415	4399	4107
416	4402	4110
417	4405	4113
418	4408	4116
419	4411	4119
420	4414	4122
421	4417	4125
422	4420	4128
423	4423	4131
424	4426	4134
425	4429	4137
426	4432	4140
427	4435	4143
428	4351	4351
429	4354	4354
430	4146	4146
431	4149	4149
432 (01)	4000	4000
433 (02)	4003	4003
434 (03)	4006	4006
435 (04)	4009	4009
436 (05)	4012	4012
437 (06)	4015	4015
438 (07)	4018	4018
439 (08)	4021	4021
440 (09)	4024	4024
441 (10)	4027	4027
442 (11)	4030	4030
443 (12)	4033	4033
444 (13)	4036	4036
445 (14)	4039	4039
446 (15)	4042	4042
447 (16)	4045	4045
448 (17)	4048	4048
449 (18)	4051	4051
450 (19)	4054	4054
451 (20)	4057	4057
452 (21)	4060	4060

	6 MHz SSB (J3E)	
ITU CH NO	Ship RX	Ship TX
601	6501	6200
602	6504	6203
603	6507	6206
604	6510	6209
605	6513	6212
606	6516	6215
607	6519	6218
608	6522	6221
609	6224	6224
610	6227	6227
611	6230	6230

These frequencies are factory programmed.

CH NOs in () are ITU NOs (RR Section C-1).

8 MHz ITU SSB carrier frequencies (ITU RR Appendix 16)

8 M	Hz SSB (J3E) - Du	plex
ITU CH NO	Ship RX	Ship TX
801	8719	8195
802	8722	8198
803	8725	8201
804	8728	8204
805	8731	8207
806	8734	8210
807	8737	8213
808	8740	8216
809	8743	8219
810	8746	8222
811	8749	8225
812	8752	8228
813	8755	8231
814	8758	8234
815	8761	8237
816	8764	8240
817	8767	8243
818	8770	8246
819	8773	8249
820	8776	8252
821	8779	8255
822	8782	8258
823	8785	8261
824	8788	8264
825	8791	8267
826	8794	8270
827	8797	8273
828	8800	8276
829	8803	8279
830	8806	8282
831	8809	8285
832	8812	8288
833	8291	8291
834	8707	8707
835	8710	8710
836	8713	8713
837	8716	8716
	2221	
838	8294	8294
839	8297	8297

	z SSB (J3E) - Sir	
(ITU CH NO)	Ship RX	Ship TX
840 (01)	8101	8101
841 (02)	8104	8104
842 (03)	8107	8107
843 (04)	8110	8110
844 (05)	8113	8113
845 (06)	8116	8116
846 (07)	8119	8119
847 (08)	8122	8122
848 (09)	8125	8125
849 (10)	8128	8128
850 (11)	8131	8131
851 (12)	8134	8134
852 (13)	8137	8137
853 (14)	8140	8140
854 (15)	8143	8143
855 (16)	8146	8146
856 (17)	8149	8149
857 (18)	8152	8152
858 (19)	8155	8155
859 (20)	8158	8158
860 (21)	8161	8161
861 (22)	8164	8164
862 (23)	8167	8167
863 (24)	8170	8170
864 (25)	8173	8173
865 (26)	8176	8176
866 (27)	8179	8179
867 (28)	8182	8182
868 (29)	8185	8185
869 (30)	8188	8188
870 (31)	8191	8191
CH NOs in () are I	TU NOs (RR Sec	tion C-1).

12/16 ITU SSB carrier frequencies (ITU RR Appendix 16)

12	MHz SSB (J	3E)	16	MHz SSB (J	3E)]	16	MHz SSB (J	3E)
CH NO.	SHIP RX	SHIP TX	CH NO.	SHIP RX	SHIP TX	1	CH NO.	SHIP RX	SHIP TX
1201	13077	12230	1601	H	1651	17392	16510		
1202	13080	12233	1602	17242 17245	16360 16363	Ш	1652	17395	16513
1203	13083	12236	1603	17248	16366	Ш	1653	17398	16516
1204	13086	12239	1604	17251	16369	Ш	1654	17401	16519
1205	13089	12242	1605	17254	16372	Ш	1655	17404	16522
1206	13092	12245	1606	17257	16375	1 1	1656	17407	16525
1207	13095	12248	1607	17260	16378	Ш	1657	16528	16528
1208	13098	12251	1608	17263	16381	Ш	1658	16531	16531
1209	13101	12254	1609	17266	16384	Ш	1659	16534	16534
1210	13104	12257	1610	17269	16387	Ш	1660	16537	16537
1211	13107	12260	1611	17272	16390	П	1661	16540	16540
1212	13110	12263	1612	17275	16393	Ш	1662	16543	16543
1213	13113	12266	1613	17278	16396	Ш	1663	16546	16546
1214	13116	12269	1614	17281	16399	Ш			
1215	13119	12272	1615	17284	16402	Ш			
1216	13122	12275	1616	17287	16405	1			
1217	13125	12278	1617	17290	16408	Ш			
1218	13128	12281	1618	17293	16411	Ш			
1219	13131	12284	1619	17296	16414	Ш			
1220	13134	12287	1620	17299	16417	Ш			
1221	13137	12290	1621	17302	16420				
1222	13140	12293	1622	17305	16423	Ш			
1223	13143	12296	1623	17308	16426	Ш			
1224	13146	12299	1624	17311	16429	Ш			
1225	13149	12302	1625	17314	16432				
1226	13152	12305	1626	17317	16435	П			
1227	13155	12308	1627	17320	16438	Ш			
1228	13158	12311	1628	17323	16441	Ш			
1229	13161	12314	1629	17326	16444	Ш			
1230	13164	12317	1630	17329	16447	$ \ $			
1231	13167	12320	1631	17332	16450	Ш			
1232	13170	12323	1632	17335	16453	Ш			
1233	13173	12326	1633	17338	16456	Ш			
1234	13176	12329	1634	17341	16459	Ш			
1235	13179	12332	1635	17344	16462	ļ l			
1236	13182	12335	1636	17347	16465				
1237	13185	12338	1637	17350	16468				
1238	13188	12341	1638	17353	16471				
1239	13191	12344	1639	17356	16474				
1240	13194	12347	1640	17359	16477				
1241	13197	12350	1641	17362	16480				
1242	12353	12353	1642	17365	16483				
1243	12356	12356	1643	17368	16486				
1244	12359	12359	1644	17371	16489				
1245	12362	12362	1645	17374	16492	ł			
1246	12365	12365	1646	17377	16495				
			1647	17380	16498				
			1648	17383	16501 16504				
			1649	17386	16504 16507				
			1650	17389	16507				

Above is factory programmed.

18/19, 22, 25/26 ITU SSB carrier frequencies (ITU RR Appendix 16)

18/1	9 MHz SSB ((J3E)
CH NO.	SHIP RX	SHIP TX
1801	19755	18780
1802	19758	18783
1803	19761	18786
1804	19764	18789
1805	19767	18792
1806	19770	18795
1807	19773	18798
1808	19776	18801
1809	19779	18804
1810	19782	18807
1811	19785	18810
1812	19788	18813
1813	19791	18816
1814	19794	18819
1815	19797	18822
1816	18825	18825
1817	18828	18828
1818	18831	18831
1819	18834	18834
1820	18837	18837
1821	18840	18840
1822	18843	18843

22	MHz SSB (J	3E)
CH NO.	SHIP RX	SHIP TX
2201	22696	22000
2202	22699	22003
2203	22702	22006
2204	22705	22009
2205	22708	22012
2206	22711	22015
2207	22714	22018
2208	22717	22021
2209	22720	22024
2210	22723	22027
2211	22726	22030
2212	22729	22033
2213	22732	22036
2214	22735	22039
2215	22738	22042
2216	22741	22045
2217	22744	22048

22	22 MHz SSB (J3E)										
CH NO.	SHIP RX	SHIP TX									
2251	22846	22150									
2252	22849	22153									
2253	22852	22156									
2254	22159	22159									
2255	22162	22162									
2256	22165	22165									
2257	22168	22168									
2258	22171	22171									
2259	22174	22174									
2260	22177	22177									

2218	22747	22051	
2219	22750	22054	
2220	22753	22057	
2221	22756	22060	
2222	22759	22063	
2223	22762	22066	Ш
2224	22765	22069	Ш
2225	22768	22072	H
2226	22771	22075	1
2227	22774	22078	Ш
2228	22777	22081	
2229	22780	22084	
2230	22783	22087	
2231	22786	22090	
2232	22789	22093	Ш
2233	22792	22096	
2234	22795	22099	$ \ $
2235	22798	22102	
2236	22801	22105	
2237	22804	22108	
2238	22807	22111	
2239	22810	22114	
2240	22813	22117	
2241	22816	22120	
2242	22819	22123	$ \ $
2243	22822	22126	$ \ $
2244	22825	22129	
2245	22828	22132	
2246	22831	22135	
2247	22834	22138	
2248	22837	22141	
2249	22840	22144	
2250	22843	22147	

	6 MHz SSB (
CH NO	Ship RX	Ship TX
2501	26145	25070
2502	26148	25073
2503	26151	25076
2504	26154	25079
2505	26157	25082
2506	26160	25085
2507	26163	25088
2508	26166	25091
2509	26169	25094
2510	26172	25097
2511	25100	25100
2512	25103	25103
2513	25106	25106
2514	25109	25109
2515	25112	25112
2516	25115	25115
2517	25118	25118

MF band telex frequency table

CH NO.	Ship Transmit (NBDP, DSC)	Ship Receive (NBDP, DSC)	
201	2142.0	1607.0	
202	2142.5	1607.5	
203	2143.0	1608.0	
204	2143.5	1608.5	
205	2144.0	1609.0	
206	2144.5	1609.5	
207	2145.0	1610.0	
208	2145.5	1610.5	
209	2146.0	1611.0	
210	2146.5	1611.5	
211	2147.0	1612.0	
212	2147.5	1612.5	
213	2148.0	1613.0	
214	2148.5	1613.5	
215	2149.0	1614.0	NBDP/DSC
216	2149.5	1614.5	
217	2150.0	1615.0	
218	2150.5	1615.5	
219	2151.0	1616.0	
220	2151.5	1616.5	
221	2152.0	1617.0	
222	2152.5	1617.5	
223	2153.0	1618.0	
224	2153.5	1618.5	
225	2154.0	1619.0	
226	2154.5	1619.5	
227	2155.0	1620.0	
228	2155.5	1620.5	
229	2156.0	1621.0	
230	2156.5	1621.5	
231	2157.0	1622.0	
232	2157.5	1622.5	DSC
233	2158.0	1623.0	שטכע
234	2158.5	1623.5	
235	2159.0	1624.0	
236	2159.5	1624.5	

ITU Telex frequency table (1/4)

	_	_				,									,																																									_
	9	RX Season	26101.5	26102.0	26102.5	26103.0	26103.5	26104.5	26105.0	26105.5	26106.0	26106.5	26107.0	26108.0	26108.5	26109.0	26109.5	26110.0	26110.5	26111.0	26111.02	26112.0	26113.0	26113.5	26114.0	26114.5	26115.0	26115.5	26116.0	26117.0	26117.5	26118.0	26118.5	26119.0	26119.3	26120.5	25193.0	25193.5	25194.0	25195.0	25195.5	25196.0	25196.5	25197.5	25198.0	25198.5	25199.0	25200.0	25200.5	25201.0	25201.5	25202.5	25203.0	25203.5	25204.5	25205.0
	25/26 MHz BAND	TX 05.472.0	25173.0	25174.0	25174.5	25175.0	25176.0	25176.5	25177.0	25177.5	25178.0	25178.5	25179.0	25179.5	25180.5	25181.0	25181.5	25182.0	25182.5	25183.0	25183.5	25164.0	25185.0	25185.5	28186.0	25186.5	25187.0	25187.5	25100.0	25189.0	25189.5	25190.0	25190.5	25191.0	25192.0	25192.5	25193.0	25193.5	25194.0	25195.0	25195.5	25196.0	25196.5	25197.0	25198.0	25198.5	25199.0	25200.0	25200.5	25201.0	25201.5	25202.5	25203.0	25203.5	25204.5	25205.0
	25/;	No.	25002	25003	25004	25005	25007	25008	25009	25010	25011	25012	25013	25014	25016	25017	25018	25019	25020	25021	77007	25023	25025	25026	25027	25028	25029	25030	25032	25033	25034	25035	25036	25037	25039	25040	25041	25042	25043	25045	25046	25047	25048	25050	25051	25052	25053	25055	25056	25057	25058	25060	25061	25062	25064	25065
İ		RX	22377.0	22377.5	22378.0	22378.5	22379.0	22380.0	22380.5	22381.0	22381.5	22382.0	22302.3	22303.0	22384.0	22384.5	22385.0	22385.5	22386.0	22386.5	72387.0	22307.3	22388.5	22389.0	22389.5	22390.0	22390.5	22391.0	0.18622	22392.5	22393.0	22393.5	22394.0	22394.5	22395.0	22396.0	22396.5	22397.0	22397.5	22398.5	22399.0	22399.5	22400.0	22401.0	22401.5	22402.0	22402.5	22403.5	22404.0	22404.5	22405.0	22406.0	22406.5	22407.0	22408.0	22408.5
	22 MHz BAND	+	22285.0	22285.5	22286.0				22288.5	- 1			22290.5	2291.0	22292.0	22292.5	22293.0	22293.5	22294.0	2294.5	0.02222	2228222	2296.5	22297.0		22298.0	22298.5	22299.0	223000			22301.5	22302.0	22302.5	22303.0	2304.0	22304.5	2305.0	22305.5	22306.5	22307.0	22307.5		22309.0	22309.5	22310.0	22310.5	22311.5	<u> </u>	22312.5	22313.0	22314.0	-			
	г	4	22002			4	22007			_		22012							4		77077			-	.,				22031			_		22037			_		22043		_		22048				22053		_		22058 2		_	22062 2		22065 2
	†		19681.0		7	19683.0 2	10			-	19686.0 2		_		÷				~	_	20000	4 0		7	7	-		9695.5	•	• • •		19698.0 2	010	19699.0	• • •		-	_	19/02.0 2	_	7		18894.0 2		2		18890.5	• • •	7	_	19704.0		2.0	7 6	1 91	2
	18/19 MHz BAND	_	18871.0 19			4	8873.5 19	`	`	7	18875.5 19				0		_	`	18880.0 19	Ε,	٠,				•	_	_	8885.0 19		18886.5 19	_		_	8888.5 19			18890.5 19		18891.5 19		`	18893.5 18	• •		Ξ		18896.5 18	_	0	2	18899.0 19	0	_			-
	18/19 M	4				Ϊ,				1										_		_ ,		ľ	_	_	_	Ϊ,				Ì	` '				_				-				ľ				Ĺ							_
(1/4)	4	_	7.5 18002		_	9.0 18005			_	ì	2.0 18011				-	`			` ; ;	_	7.5 18022		`	_	`	`	_		1.5 18031	`	•	_		4.5 18037		`	_	•	7.5 18043		Ξ	_	18048			_ '	2.5 18053	_	-	_	5.0 18058		5.5	0.7	9.0	3.5
ITU TELEX FREQUENCY TABLE (1/4)	AND	_	0 16807.5		•	16809.0				0 16811.5			_		÷		_		` '		16617.5	_		0 16919.0		`	`	0 16821.0		`			•	16824.5	•		5 16826.5	_	16827.5	_			0 16830.0		<u> </u>	` '	16832.5	_	₩.		0 16835.0			0 16837. 5 16837.		5 16838.
, Y 7,	16 MHz BAND	TX Y	16684.0	16684.	16685.0	16685.	16686	16687.0	16687.5	16688	16688.5	16689	16600	16690	16691.0	16691.5	16692.0	16692.5	16693.0	16693.	16694.0	16695.0	16695.	16696.0	16696.5	16697.0	16697.	16698.0	16000	16999	16700.0	16700	16701.0	16/01.	16702.5	16703.	16703.5	16704.	16/04.5	16705.	16706.0	16706.5	16/0/.	16708.	16708.5	16709.	167100	16710.	16711.0	16711.5	16712.0	16713.	16713.5	16714.0	16715.0	16715.
JENC	_	_	16002		_	16005		,	_	`;	16011		•	_ `	-	•	_	_	Ξ,		16022		_	_	_	_	_		16037	_	,	_		16037	_	_	`	•	16043		_	- '	16048	,	Ϊ.	_ '	16054	_	:-	_	16058			16062		16065
REGI	9	HX 42570 F	12580.0	12580.5	12581.0	12581.5	12582.5	12583.0	12583.5	12584.0	12584.5	12585.0	12586.0	12586.5	12587.0	12587.5	12588.0	12588.5	12589.0	12589.5	12590.0	12501.0	12591.5	12592.0	12592.5	12593.0	12593.5	12594.0	12504.0	12595.5	12596.0	12596.5	12597.0	12597.5	12598.5	12599.0	12599.5	12600.0	12600.5	12601.5	12602.0	12602.5	12603.0	12604.0	12604.5	12605.0	12606.0	12606.5	12607.0	12607.5	12608.0	12609.0	12609.5	12610.0	12611.0	12611.5
EX F	12 MHz BAND	TX	12477.5	12478.0	12478.5	12479.0	12479.5	12480.5	12481.0	12481.5	12482.0	12482.5	12463.0	12484.0	12484.5	12485.0	12485.5	12486.0	12486.5	12487.0	12487.5	12488.5	12489.0	12489.5	12490.0	12490.5	12491.0	12491.5	12492.0	12493.0	12493.5	12494.0	12494.5	12495.0	12496.0	12496.5	12497.0	12497.5	12498.0	12499.0	12499.5	12500.0	12500.5	12501.5	12502.0	12502.5	12503.0	12504.0	12504.5	12505.0	12505.5	12506.5	12507.0	12507.5	12508.5	12509.0
) TEL	Г	No.	12002	12003	12004	12005	12007	12008	12009	12010	12011	12012	12013	12015	12016	12017	12018	12019	12020	12021	12022	12023	12025	12026	12027	12028	12029	12030	12031	12033	12034	12035	12036	12037	12039	12040	12041	12042	12043	12045	12046	12047	12048	12050	12051	12052	12053	12055	12056	12057	12058	12060	12061	12062	12064	12065
E		RX	8376.5	8417.5	8418.0	8418.5	8419.0	8420.0	8420.5	8421.0	8421.5	8422.0	8423.0	8423.0	8424.0	8424.5	8425.0	8425.5	8426.0	8426.5	0.1275	0.1240	8428.5	8429.0	8429.5	8430.0	8430.5	8431.0	0.1040	8432.5	8433.0	8433.5	8434.0	8434.5	8435.5	8436.0	8396.5	8397.0	8397.5	8398.5	8399.0	8399.5	8400.0	8401.0	8401.5	8402.0	8402.5	8403.5	8404.0	8404.5	8405.0	8406.0	8406.5	8407.0	8408.0	8408.5
	8 MHz BAND	TX CC	8377.0	8377.5	8378.0	8378.5	8379.5	8380.0	8380.5	8381.0	8381.5	8382.0	0202.0	8383.5	8384.0	8384.5	8385.0	8385.5	8386.0	8386.5	0.7867.0	0.7000	8388.5	8389.0	8389.5	8390.0	8390.5	8391.0	0.292.0	8392.5	8393.0	8393.5	8394.0	8394.5	8395.5	8396.0	8396.5	8397.0	8397.5	8398.5	8399.0	8399.5	8400.0	8401.0	8401.5	8402.0	8402.5	8403.5	8404.0	8404.5	8405.0	8406.0	8406.5	8407.0	8408.0	8408.5
	∑	No.	8002	_	8004	1	8007			-			8013		8016				-		8022			L	8027			8030			8034		8036					8042						8050			8053				8058				8064	_
		RX	6315.0	315.5	316.0										6321.5				6323.5				6326.0	<u> </u>				328.5					6301.0				_		6304.5		_	6306.5			6308.5		6310.0					6331.5	332.0			-
	BAND		6263.5 6			- !				- 1	6268.0				6270.5				6272.5					_								_					_							6308.0								6313.0				_
	ı	4				+				_					1				-					_				+				_					_				_				_				_				_	_		_
	4	_	4211.0 6002				3.5 6007		4.5 6009		7.5 6011				4217.5 6016				4202.5 6020		4203.5 6022		4205.0 603	<u>!</u>	4206.0 6027	4206.5 60;		4207.5 6030				9	9036	9 6	8 6	9	9	6042	9 6	6045	6046	6047	6048	6049	6051	6052	9 6	6055	09	09	6058	0909	9	_		-
	- 1														1				_					<u> </u>				_																												-
	4 MHz BAND	_	4172.5			-				-					4180.0				1				4205.0					4207.5																									_			
		<u>ه</u>	4001	4003	4004	4005	4006	4008	4009	4010	4011	4012	2 6 6	4014	4016	4017	4018	4019	4020	4021	4022	4023	4025	4026	4027	4028	4029	4030	403	4033	2																									

ITU Telex frequency table (2/4)

Mail	X	İ	6 MHz BAND		S VHZ BAND					16	16 MHz BAND		18/19	18/19 MHz BAND		22 MHz BAND	9	25/	25/26 MHz BAND	9
Column C				_	×		No	X	RX		ĭ		Ι.	X BX	Š	¥	1		ř	X
March Marc				9908	8409.0	8409.0	+	_	+	╀	_	_	-		22066	_	+	25066	25205.5	25205.5
March Marc				8067	8409.5	8409.5						16839.5			22067			25067	25206.0	25206.0
March Marc				8008	8410.0	8410.0						16840.0			22068			25068	25206.5	25206.5
March Marc				8069	8410.5	8410.5						16840.5			22069			25069	25207.0	25207.0
March Marc				8070	8411.0	8411.0	_		÷	16070	;	16841.0			22070	_		25070	25207.5	25207.5
March Marc				8071	8411.5	8411.5				16071		16841.5			22071				25208.0	25208.0
March Marc				8072	8412.0	8412.0				16072		16842.0			22072				25208.5	26121.0
6410 6410				8073	8412.5	8412.5				16073		16842.5			22073		22412.5		25209.0	26121.5
841.56 180.15 120.16 120.16 160.15 180.15 200.16 220.20 120.20<				8074	8413.0	8413.0				16074		16843.0			22074		_		25209.5	26122.0
8444 6 1707				8075	8413.5	8413.5	_	_	_	16075	_	16843.5			22075	_	_			
8414.5 1970. 2252.5 6844.5 677.0 672.2 6844.5 277.0 2252.0 677.0 672.2 6844.5 277.0 277.0 278.0				8076	8414.0	8414.0		_	_	16076	_	16844.0			22076	_	_			
8415.5 6497.5 220.9 <				8077	8414.5	8414.5	_			16077		16844.5			22077		_			
8416.6 4437.5 2009 1226.6.0 126.8.6.0 126.8.6.0 16900 1672.2.0 1644.6.0 2009 220.2.0 2				8078	8415.0	8436.5				16078		16845.0			22078		22415.0			
6416 6467 2000 1252 16946 66946 6720 66840 2000 2224				8070	84155	8437.0				16079		16845 5			22079		_			
1208 1257-10 12617-0 12617-0 12617-0 12617-0 12617-0 12617-0 12617-0 12617-0 12617-0 12617-0 12618-0 1				0000	0.446	0.101.0				16000		16046.0			22013		_			
125110 16820 16840 22008 22225 125180 16821 16841 22008 22225 22225 125180 16821 16841 16840 22008 22225 22225 125180 16821 16884 16840 16840 22004 22004 22226 12580 16815 16821 16880 16720 16840 22004 22004 22004 12520 16821 16861 22004 22004 22004 22004 22004 12520 16821 16851 16851 22004				0000	0.00	0.75	1	÷	2000	0000		0.0400	-		22000	1	÷			
1251 D. 1262 D. 1602 D. 1603 D. <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>19091</td><td></td><td>10840.5</td><td></td><td></td><td>22081</td><td></td><td>_</td><td></td><td></td><td></td></t<>										19091		10840.5			22081		_			
12518.0 12621.0 16084 1672.5 16841.5 1684.										16082		16847.0			22082					
125115. 126215. 16884. 1620. 22006. 22006. 22006. 22006. 22006. 22006. 22006. 22006. 22006. 22006. 22006. 22006. 22006. 22006. 22007. 22006. 22006. 22006. 22006. 22007.										16083		16847.5			22083					
125190 126215 16086 167265 16848.5 22006 22227.0 125190 12620.0 16080 16772.0 16840.0 2008 22006 22227.0 12520.1 12620.1 16080 16772.0 16850.0 2009 22090 22227.0 1252.0 12620.1 16220.0 16772.0 16850.0 22090 22209 1252.0 1262.0 16090 16772.0 16850.0 22090 22209 1252.0 1262.0 16090 1672.0 1685.0 22090 22209 1252.0 1262.0 16090 1672.0 1685.0 22090 22209 1252.0 1262.0 16090 1672.0 1685.0 22090 22209 1252.0 1262.0 16090 1672.0 1685.0 22090 22209 1252.0 1262.0 16090 1673.0 1685.0 22090 22209 1252.0 1262.0 16090 1673.0 1686.0 <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>16084</td><td></td><td>16848.0</td><td></td><td></td><td>22084</td><td></td><td></td><td></td><td></td><td></td></td<>										16084		16848.0			22084					
15510 5 198220 16086 167260 16084 10 16080 167260 16084 16726 16084 16726 16084 16726 16084 16727 16080 16728 16081 16720 16080 16728 16081 16720 16080 16728 16081 16720 16080 16728 16081 16720 16082 16082 16720 16720										16085		16848.5			22085					
125200 125200 16080 167265 16849.5 16860.0 22080 22088 22088 22088 22088 22088 22088 22088 22088 22088 22089 22089 22080 22089							1	:_	÷	16086	<u>:</u>	16849.0			22086	_	-			
1252.0.5 1622.0.5										16087		16840 5			22087					
1222.10 1262.20 1220.00 2220.00 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>10001</td><td></td><td>0.049.0</td><td></td><td></td><td>22007</td><td></td><td></td><td></td><td></td><td></td></t<>										10001		0.049.0			22007					
12821.6 12823.0 16089 16772.5 16860.5 22089 222080 22208								_		16088		16850.0			22088		22420.0			
125215 126231 16090 16728.0 16881.0 22090										16089		16850.5			22089					
125220 16640 16091 16728.5 6881.5 2001 22330 22331 22330 22331										16090		16851.0			22090					
1252.5 1262.6 1609.2 1672.9 1682.0 2233.0<							L	_	_	16091	_	16851.5			22091	L	_			
12223.0 1625.0 16093 16729.5 1682.5 1682.5 16909 22009 22009 22009 22009 22009 22009 22009 22009 22031 16223.0 1622.0 16000 1673.0 1683.0 22009 22009 22031 22031 22031 22031 22032 22031 22032										16092		16852.0			22092					
1262.5. 166.5. 169.5.							_			16093		16852.5			22032		22422.0			
12224.5 12626.0 6096.4 6730.6 16884.0 22094 2234.0 12224.5 12625.0 16096 16730.6 16884.5 22096 22036 22332.0 12224.6 12625.1 16097 16731.0 16884.5 22096 22039 22332.0 12226.0 12620.1 16099 16732.0 16885.6 22009 22333.5 12226.5 12620.5 16009 16732.5 16885.6 22009 22333.5 12227.6 12620.6 16700 16733.5 16886.0 22100 22009 1222.6 1600.7 1673.6 16885.0 22100 22333.5 1222.6 1600.7 1674.0 16886.0 2210 22333.5 1222.8 1600.7 1674.0 16886.0 2210 2210 22335.6 1222.8 1600.7 1674.1 16880.0 2210 2210 22335.6 1222.9 1600.7 1674.1 16880.0 2210 2210 22										56001		0.2000			22033		0.22422			
12524.0. 17666.5. 16095.6. 16335.5. 16883.5. 22009. 22332.0. 22009. 22332.0. <th< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td>_</td><td></td><td></td><td>16094</td><td></td><td>16853.0</td><td></td><td></td><td>22094</td><td></td><td>22423.0</td><td></td><td></td><td></td></th<>							_			16094		16853.0			22094		22423.0			
12224.5 12626.5 16096 16731.0 16884.0 22096 22096 22332.0 12225.0 12627.0 16098 16732.0 16855.0 22097 22333.0 12626.5 12628.6 16009 16732.0 16855.0 22099 22333.0 12626.5 12628.5 16009 16733.0 16856.0 22100 22099 22333.0 12627.6 16609.0 16733.5 16865.0 22100 22099 22333.0 12627.6 16609.0 16733.5 16865.0 22100 22100 22334.0 12627.6 1600.0 1673.5 16865.0 22100 22100 22334.0 12628.6 1610.0 1673.5 1688.0 2210 22334.0 2234.0 12628.6 1610.0 1674.0 1688.0 2210 2234.0 2234.0 12628.6 1610.0 1674.1 1688.0 2210 2234.0 2234.0 12628.7 1660.0 1674.1 1688.0									-	16095	_	16853.5			22095		22423.5			
1225.50 12627.0 16097 16731.5 1685.0 22039 22039 22333.0 1225.60 12626.5 16098 16732.5 1685.0 22099 22039 22333.0 1225.60 16262.0 16100 16732.5 1685.0 22099 22334.0 1225.61 16602.0 1673.0 1685.0 2210 22334.0 1227.62 16602.0 1673.0 1685.0 2210 22334.0 1227.62 16602.0 1673.0 16885.0 2210 22334.0 1227.62 16602.0 1673.0 16885.0 2210 22334.0 1227.6 16602.0 1673.0 16885.0 2210 22334.0 1227.6 1660.0 1674.0 16885.0 2210 22334.0 1222.9 1660.0 1674.0 16885.0 2210 22334.0 1222.9 1660.0 1674.0 16885.0 2210 2234.0 1223.0 1660.0 1674.0 16885.0 221							_			16096		16854.0			22096		22424.0			
1225.5. 1827.5. 1885.7. 1885.7. 22099 22333.5. 1225.6. 1862.5. 1685.5. 1685.5. 22009 22333.5. 1226.6. 1662.0. 1673.3. 1685.5. 22100 22009 22334.0. 1227.6. 1682.5. 1682.5. 1685.5. 22100 22009 22334.0. 1227.6. 1682.5. 1682.5. 1685.6. 22100 22009 22334.0. 1222.8. 1680.5. 1673.5. 1688.6. 22100 2200 2234.0. 1222.8. 1680.5. 1673.5. 1688.6. 2210 2210 22338.0. 1222.8. 1660.5. 1674.0. 1688.0. 2210 2210 22338.0. 1222.8. 1660.5. 1674.0. 1688.0. 2210 2210 2234.0. 1222.8. 1660.5. 1674.0. 1688.0. 2210 2234.0. 2210 2234.0. 1222.9. 1674.0. 1688.0. 1674.0. 1688.0. 2210 <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td>_</td><td></td><td></td><td>16007</td><td></td><td>16854 5</td><td></td><td></td><td>22007</td><td></td><td>22727 5</td><td></td><td></td><td></td></td<>							_			16007		16854 5			22007		22727 5			
1225.6. 1626.7. 1626.7. 1626.9. 1673.5. 1686.5. 22098 2233.3. 1225.6. 1662.0. 1673.2. 1686.5. 2209 2233.0. 2233.0. 1225.6. 1662.0. 1673.9. 1686.5. 2200 2233.0. 1225.6. 1660.0. 1673.9. 1686.5. 2210 2233.0. 1227.6. 1262.0. 1673.0. 1688.5. 2210 2233.0. 1227.8. 1263.0. 1673.0. 1688.5. 2210 2233.0. 1222.0. 1263.0. 1673.0. 1688.6. 2210 2233.0. 1222.0. 1663.0. 1674.0. 1688.0. 2210 2233.0. 1222.0. 1663.0. 1674.0. 1688.0. 2210 2233.0. 1223.0. 1663.0. 1674.0. 1688.0. 2210 2233.0. 1223.0. 1674.0. 1686.0. 2210 2234.0. 2210 2234.0. 1223.0. 1674.0. 1686.0. 1674.0. <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>10097</td><td></td><td>0.4.00</td><td></td><td></td><td>25097</td><td></td><td>22424.3</td><td></td><td></td><td></td></td<>										10097		0.4.00			25097		22424.3			
12226.6 16099 1673.3 1686.5 22009 2233.3 12226.5 12620.0 1673.3 1686.5 22100 2230.9 2233.3 1227.6 12620.0 1673.3 1686.0 1673.0 1686.0 22100 2234.0 1227.6 12620.0 1673.9 1686.0 1687.0 22100 2233.5 1222.8 1260.0 1670.0 1673.9 1686.0 22100 2233.0 1222.8 1260.0 1670.0 1688.0 1688.0 22104 22336.0 1222.9 1263.0 1674.0 1688.0 2210 2210 22336.0 1222.0 1263.0 1674.0 1688.0 2210 2210 2234.0 1223.0 1263.0 1674.0 1688.0 2210 2210 2234.0 1223.0 1263.0 1674.0 1688.0 2210 2210 2233.0 1223.0 1263.0 1674.0 1688.0 2210 2210 2234.0 <tr< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>26091</td><td></td><td>0.66891</td><td></td><td></td><td>22098</td><td></td><td></td><td></td><td></td><td></td></tr<>										26091		0.66891			22098					
1222.65 16826.5 16830.0 16835.0 227100 22334.0 1252.76 12623.0 1603.0 1610.0 1673.3 16866.5 2210. 2234.0 1252.76 1663.0 1610.0 1673.0 1685.5 2210. 22335.5 1252.8 1600.0 1610.0 16740.0 1688.6 2210.0 22335.5 1252.9 1600.0 16740.0 1688.6 2210.0 22335.5 1252.9 1663.1 1610.6 1674.0 1688.6 2210.0 22335.6 1252.9 1623.0 1610.6 1674.0 1688.6 2210.0 22336.5 1253.0 1262.0 1610.6 1674.0 1688.6 2210.0 22337.0 1253.0 1263.0 1611.0 1674.2 1680.0 2210.0 22337.0 1253.0 1263.0 1611.0 1674.3 1680.0 2210.0 2233.0 1253.1 1623.0 1611.0 1674.5 1680.0 2210.0 2233.0 <										16099		16855.5			55088					
12227.0 12629.0 16733.5 16866.5 22101 22334.5 12227.5 12629.0 16103 16739.0 1688.0 22103 22335.0 12228.0 16630.0 16739.0 1688.0 22104 22336.0 12229.0 16630.0 16740.0 1688.0 22104 22336.0 12230.0 16631.0 16740.0 1688.0 22106 22336.0 12230.0 16631.0 1674.1 1688.0 22106 22336.0 12230.0 16622.0 1674.2 1686.0 22106 22336.0 12331.0 1663.0 1663.0 22108 22337.0 22336.0 12331.0 1663.0 1663.0 1686.0 22109 22337.0 12332.1 1663.0 1664.0 1686.0 2210 22337.0 12332.2 1663.0 1664.0 1686.0 2210 2234.0 12332.2 1663.0 1686.0 2210 2234.0 2234.0 12332.2 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td>12100</td><td>_</td><td>_</td><td>16100</td><td>_</td><td>16856.0</td><td></td><td></td><td>22100</td><td></td><td></td><td></td><td></td><td></td></t<>							12100	_	_	16100	_	16856.0			22100					
12527.5 16620.5 1610.2 1673.9 16887.0 2210.2 22335.5 12528.0 1600.0 16740.0 16887.5 1687.5 2210.4 22336.5 12528.0 1600.0 16740.0 16888.5 2210.6 22336.5 12529.0 1660.0 16741.5 16885.6 2210.6 22336.5 12530.0 16821.5 1610.6 16741.5 16885.6 2210.6 22337.0 12530.1 16821.6 16742.0 16860.0 2210.6 22338.0 22337.0 12531.5 1660.0 16742.5 16860.0 2210.0 22338.0 22338.0 12531.6 1663.0 1674.5 1686.0 2210.0 22338.0 22338.0 12532.1 1663.0 1674.5 1686.1 2210.0 22338.0 22340.0 12533.5 1663.0 1674.5 1686.1 2211.1 22338.0 22340.0 12533.6 1674.5 1686.1 1686.0 2211.1 22338.0 22341.0									_	16101	_	16856.5			22101	_				
12528.0 1660.0 1673.5 16887.5 22103 22335.5 12528.6 1660.0 16740.5 16885.0 22103 22336.2 12529.0 1660.1 16740.5 16888.0 22104 22336.2 12529.0 1661.0 1674.0 16889.0 22106 2237.0 12530.0 1662.0 1674.0 16889.0 22106 2237.0 12530.1 1662.0 1674.0 16889.0 2210 22337.5 12530.1 1662.0 1674.0 16881.0 2210 22337.5 12530.1 1662.0 1674.0 16881.0 2210 22337.5 1253.1 1663.1 1674.0 16881.0 2210 22338.5 1253.2 1660.2 1674.0 16882.0 2210 22338.5 1253.2 1660.2 1674.0 16882.0 2210 2234.0 1253.2 1660.2 1674.0 16882.0 2211 2234.0 1253.2 1674.0 16886.0<										16102		16857.0			22102		22427.0			
12228.5 12630.5 16740.0 16888.0 22104 22366.0 12229.0 1603.5 16740.0 1688.6 22106 22306 12230.0 1262.5 1610.0 16741.0 16889.0 22107 2237.0 12330.0 1262.5 1610.0 16742.5 16860.0 22107 22337.0 12330.1 12633.5 1610.0 16742.5 16860.5 22107 22337.0 12331.5 12633.5 1611.0 16744.0 16861.0 22107 22338.0 12331.5 12634.0 1611.1 16744.0 16862.5 2211 22340.0 12331.6 1611.4 1674.6 16861.0 2211 22340.0 22340.0 12331.6 1611.8 1674.6 1686.3 2211 22340.0 22340.0 12332.6 1611.8 1674.6 1686.0 2211 22340.0 22340.0 12334.6 1611.8 1674.6 1686.0 22340.0 22311 22341.0										16103		16857.5			22103					
12829.0 1650.0 670.0 670.0 670.0 2210.0 2238.0 12829.0 12621.0 1660.0 1674.0 16889.0 2210.0 2237.0 12830.0 12622.0 1610.0 1674.0 16889.0 2210.0 22337.0 12830.0 12622.0 1610.0 1672.0 16880.0 2210.0 22338.0 12831.0 12633.0 1661.0 1674.2 16861.0 2210.0 22338.0 12832.0 12634.0 1611.1 1674.5 16881.0 2211.0 22339.0 12833.0 1266.0 1611.1 1674.5 16882.0 2211.1 22340.0 12833.0 1266.0 1611.1 1674.5 16883.0 2211.1 22340.0 12834.0 1266.0 1611.1 1674.5 16883.0 2211.1 22341.5 12834.0 1660.0 1611.2 1674.0 1686.0 22341.5 22341.5 12834.0 1660.0 1611.2 1674.0 1686.0 221										16104		16858.0			22104					
125230. 100.00 0.01.40 <th< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>10.00</td><td></td><td>0.0000</td><td></td><td></td><td>22704</td><td></td><td>_</td><td></td><td></td><td></td></th<>										10.00		0.0000			22704		_			
12529.5 16561.6 16741.5 16889.0 22108 2230.0 2233.0 12530.6 12622.5 16108 16742.0 16860.5 22108 22338.0 2233.0 12530.6 12632.5 16108 16742.0 16860.5 22108 22338.0 12531.5 12633.5 16810 16743.0 16861.0 22110 22338.0 12532.5 12643.5 16810 1682.0 22111 22338.5 12532.5 12643.5 1681.0 1682.0 22111 22338.0 12533.5 1265.5 1611.3 16745.0 1688.3 22112 22341.0 12534.6 12630.6 1671.4 1674.5 1688.3 22114 22341.0 12534.6 1674.6 1688.3 1674.6 1688.6 22114 22341.5 12534.6 1674.6 1688.6 1688.6 22114 22341.0 12534.6 1674.6 1688.6 22114 22341.0 22114 12534.6							1		÷	colo		0828.5	-		CO177	4	÷			
12530.0 1674.5 1689.5 1230.0 22109 2230.5 1233.1 1253.0<										16106		16859.0			22106		_			
12530.5 16825.6 1690.0 22108 22308 12531.6 1683.6 1610.0 1674.2 16860.0 22108 2238.0 12531.6 1663.6 1610.0 1674.3 1680.5 2210 2238.5 12532.5 12634.0 1611.1 1674.5 16861.5 2211 2233.5 12533.5 12634.0 1611.1 1674.5 16862.0 2211 2234.0 12533.6 12635.0 1611.4 1674.5 16882.5 2211.3 2234.0 12534.0 1266.0 1611.4 1674.5 16883.5 2211.6 2234.0 12534.0 1266.0 1611.4 1674.6 16883.5 2211.6 2234.0 12534.1 1268.5 1668.4 2211.6 2234.0 2234.5 12535.5 1667.5 1674.6 1686.5 2211.6 2234.5 12536.5 1668.5 1674.6 1686.5 2211.0 2234.5 12536.5 1668.5 1674.0 1										16107		16859.5			22107		22429.5			
12831.6 16733.0 16742.5 16860.5 22110 22210 22210 22238.5 12832.6 1611.0 16743.5 16861.0 16861.0 16233.0 16211 222110 222110 22239.0 12832.0 12634.0 1611.1 16744.0 16862.0 22112 22330.0 22311 22330.0 12833.0 12635.0 1611.4 16745.0 16882.0 22112 22340.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 22341.0 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>16108</td> <td></td> <td>16860.0</td> <td></td> <td></td> <td>22108</td> <td></td> <td>_</td> <td></td> <td></td> <td></td>										16108		16860.0			22108		_			
1253.15 1663.5 16110 1674.3 16861.0 22110 22339.0 1253.20 12694.0 16111 1674.3 16861.5 22111 22339.5 1253.30 12695.0 16111 1674.6 16882.5 22113 22340.5 1253.40 1265.5 16113 1674.6 16883.0 22114 22340.5 1253.40 1268.6 16116 1674.6 16883.0 22114 22341.6 1253.40 1268.6 16116 1674.6 16884.5 22116 22341.6 1253.6 1268.7 16118 1674.0 1686.5 22116 2234.0 1253.6 1268.0 16118 1674.0 1686.5 22116 2234.0 1253.0 1269.0 16121 16748.5 1686.5 22118 2234.0 1253.0 1269.0 16121 16748.5 1686.6 2212 2234.0 1253.0 1269.0 16121 16748.5 1686.6 2212 2234.0 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>16109</td> <td></td> <td>16860.5</td> <td></td> <td></td> <td>22109</td> <td></td> <td>_</td> <td></td> <td></td> <td></td>										16109		16860.5			22109		_			
12532.0 12694.0 1671.1 16743.5 16861.5 2211.1 2233.5 2211.1 2233.6 2233.0 2233.0 2233.0 2234.0 223										16110		16861.0			22110					
1253.5. 1763.6. 164.4.0 1682.0. 22112 2234.0 1253.3.0 1674.5 1682.5 22113 2234.0 1253.4.5 1655.0 16114 1674.5 1682.5 22114 2234.0 1253.4.5 1666.5 16116 1674.6 1686.3 22114 2234.0 1253.5. 1687.5 16116 1674.6 1686.0 22116 2234.1 1253.5. 1687.5 16116 1674.6 1686.0 22116 2234.1 1253.5. 1267.5 16118 1674.0 1686.0 22116 2234.2 1253.6. 1267.5 16118 1674.0 1686.0 22116 2234.2 1253.6. 1269.0 1674.8 1686.0 22116 2234.3 1253.6. 1629.0 1674.8 1686.0 2212 2234.5 1253.6. 1629.0 1674.8 1686.0 2212 2234.5 1253.7. 1668.0 1686.0 2212 2234.5 <							Ļ	į.	÷	16111	<u>:</u>	16861 5			22111		22/31 5			
1253.50 166.50 161.14 1674.45 1686.25 22113 2234.0 1253.30 1265.55 16114 1674.50 16883.0 22114 22341.0 1253.40 1266.65 16116 1674.60 16886.35 22116 22341.0 1253.40 1266.65 16116 1674.60 16884.0 22116 22341.0 1253.50 12637.0 1611 1674.6 16884.0 22117 22342.5 1253.60 12637.0 16119 1674.5 16886.0 22117 22342.5 1253.60 12639.0 16119 1674.5 16886.0 22110 22342.5 1253.60 1663.0 1674.0 16886.0 2212 22343.0 1253.60 1612.0 1674.8 16886.0 2212 22345.0 1253.80 1612.0 1674.9 16886.0 2212 22344.0 1253.80 1612.0 1674.9 16886.0 2212 22345.5 1253.80 1612.0										18112		0.10001			2277		22422			
1253.3. 1653.5. 161.13 1674.5. 1686.5. 221.13 2234.0. 1253.4. 1268.6. 161.15 1674.6. 16863.5. 221.13 2234.1. 2234.1. 1253.4. 1268.6. 161.16 1674.6. 16864.0. 221.16 2234.1. 2234.1. 1253.5. 1268.7. 161.16 1674.6. 16865.0. 221.16 2234.1. 2234.1. 1253.6. 1263.7. 161.18 1674.7. 16865.0. 221.18 2234.2. 1253.6. 1263.0. 1674.1. 16865.0. 221.18 2234.2. 1253.7. 1263.0. 1674.1. 16865.0. 221.12 2234.0. 1253.7. 1263.0. 1674.1. 1686.0. 221.2 2234.0. 1253.7. 1263.0. 1674.2. 1686.0. 221.2 2234.0. 1253.8. 1264.0. 1612.2. 1686.0. 221.2 2234.0. 1253.9. 1264.0. 1612.2. 1686.0. 221.2 2234.0.										1 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2		7.000			22.42		20.400.0			
125345 16456.5 16485.0 1683.0 22114 22341.0 125340 12680.0 16114 16745.5 16883.0 22116 22341.0 12534.0 12680.1 16746.0 16864.0 16864.0 22116 22342.0 12535.5 12687.5 1611 16747.5 16865.0 22117 22342.0 12536.6 12683.5 16280 16747.5 16865.5 22110 22343.0 12536.6 16283.5 16747.5 16865.6 22110 22343.0 12537.6 1668.7 16748.0 16866.0 22121 22343.0 12537.6 1660.0 16749.0 16867.0 22121 22344.0 12538.0 1660.0 16886.0 22121 22345.0 22345.0 12538.0 1661.2 16749.0 16886.0 22122 22345.0 12539.1 16741.0 16888.0 2212.0 22345.0 22345.0 12539.5 16841.0 16750.0 16888.0 <th< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>2 :</td><td></td><td>6.2000</td><td></td><td></td><td>22113</td><td></td><td></td><td></td><td></td><td></td></th<>										2 :		6.2000			22113					
12534.0. 16115. 16745.5. 16864.0. 22116. 22216. 222415. 22343.1. 12534.5. 17659.6. 16117. 16746.0. 16864.0. 22116. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22342.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22343.3. 22344.0.										16114		16863.0			22114					
1253.45 1656.5 16116 1674.6 1684.0 22116 22342.0 1253.5 12637.0 16118 1674.7 1686.5 22117 22342.0 12536.0 12637.0 16118 1674.7 1686.5 22118 22343.0 12536.0 12639.0 16129 1674.8 1686.5 22119 22343.0 12537.0 12639.0 16121 16748.5 16866.5 2212 22344.0 12537.0 12639.0 16121 16748.5 16866.5 2212 22344.0 12537.0 12630.0 1612 16749.5 16867.0 2212 22344.0 12538.0 13640.5 1612 16749.5 1688.6 2212 22345.0 12539.0 1640.1 16749.5 1688.6 2212 22346.0 2212 12539.0 1640.1 16750.0 16886.0 2212 22346.0 2212 12540.0 1682.1 16751.0 16886.0 2212 22347.5 2								_	-	16115	_	16863.5			22115		22433.5			
12535.0 12637.0 16117 16746.5 1684.5 1684.5 22117 22343.5 12536.5 12637.5 16118 16747.6 1686.5 22118 22148 22343.0 12536.0 12638.6 16120 16748.0 1686.6 22120 22343.0 12537.0 12639.0 1612 16749.0 1686.5 22120 22344.0 12538.0 12640.0 1612 16749.0 1686.5 22122 22344.0 12538.0 12640.0 1612 16749.0 1686.7 22122 22345.5 12539.0 12641.0 16125 16750.0 16886.0 22123 22345.5 12539.5 12641.5 16750.1 16888.0 22123 22346.5 12539.5 12641.5 16751.0 16888.0 22123 22346.5 12540.0 1612 16750.1 16899.0 22128 22347.5 12540.0 1612 16751.0 16899.5 22128 22347.5										16116		16864.0			22116		22434.0			
1253.5. 1263.5. 16118 1674.7.0 1686.6. 2243.0 12536.0. 1628.0. 1674.8. 1686.5. 22118 22343.5. 12536.1. 1628.0. 1674.8. 1686.5. 22170 2234.0. 12537.0. 1269.0. 1674.8. 1686.5. 22172 2234.0. 12537.0. 1269.0. 1674.8. 1686.5. 22122 2234.5. 12538.0. 1264.0. 1672.1. 1686.7. 22122 2234.5. 12538.0. 1264.0. 1612.2. 1674.0. 1688.0. 22122 2234.6. 12539.0. 1264.1. 1675.0. 16888.0. 22122 2234.6. 12539.0. 1264.1. 1675.1. 16888.0. 22122 2234.6. 12540.0. 1612.7. 1675.1. 16889.0. 2212.7. 2234.6. 12640.0. 1612.7. 1675.1. 16889.0. 2212.7. 2234.7. 12640.0. 1612.7. 1675.2. 1688.0. 2212.7. 2234.7.										16117		16864.5			22117		22434.5			
12536.0 12638.0 16119 16747.5 1686.5 22119 22343.5 12536.5 16630.0 16120 1648.0 1686.0 22340.0 22344.0 12537.0 12630.0 16121 16480.0 16887.0 22121 22344.0 12537.0 12640.5 1612 16749.0 16887.0 22122 22122 22344.0 12538.0 12640.5 1612 16749.0 16887.0 22122 22123 22345.5 12538.1 12640.5 1612 16750.5 16868.5 22122 22123 22346.5 12539.5 12641.5 1612 16750.5 16868.5 22126 22136 22347.5 12540.0 1612 16750.5 16868.5 22126 22126 22347.5 12540.0 1612 16750.5 16869.0 22128 22127 22247.5 12540.0 1612 16750.5 16899.5 22128 22127 22247.5 12640.0 1612 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>16118</td><td></td><td>16865.0</td><td></td><td></td><td>22118</td><td></td><td>22435.0</td><td></td><td></td><td></td></t<>										16118		16865.0			22118		22435.0			
12536.5 1620.6 6748.0 1686.0 2224.0 2224.0 12537.0 12639.0 16121 16748.5 16866.5 22121 22244.5 12537.5 12639.6 16122 16749.5 16867.0 22122 22245.0 12538.0 12640.0 16124 16730.6 16880.0 22123 22245.0 12538.0 12641.0 16124 16750.0 16880.0 22124 22246.0 12539.0 12641.0 16126 16750.1 16880.0 22124 22246.0 12539.6 12641.0 16126 16751.0 16880.0 22126 22246.0 12540.0 16127 16751.0 16880.0 22126 22346.0 12540.0 16222 16752.1 16880.0 22177 22347.5 12540.6 16222 16752.5 16800.0 22177 22347.5 12540.0 16127 16752.5 16800.0 22177 22348.0 12540.0 16129 16752.5 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>16110</td> <td></td> <td>16865 5</td> <td></td> <td></td> <td>22110</td> <td></td> <td>22/35 E</td> <td></td> <td></td> <td></td>										16110		16865 5			22110		22/35 E			
12537.5 12639.6 16121 16748.5 16866.5 22121 22344.5 12537.6 12639.5 16122 16749.0 16867.0 22122 22345.5 12538.0 12640.0 16124 16750 16887.5 22122 22345.5 12539.0 12640.0 16126 16750.1 16888.5 22124 22346.5 12539.0 12641.5 16126 16750.1 16888.5 22126 22346.5 12539.6 12641.5 16126 16751.5 16889.6 22126 22346.5 12539.6 12642.0 16751.6 16899.6 22127 22347.0 12540.5 16128 16751.6 16899.6 22128 22347.0 12540.5 16128 16752.6 16899.6 22128 22128 12540.6 16782.6 16899.6 22128 22128 22347.5 12540.1 16782.5 16800.6 22128 22128 22348.5										16120		16866.0			22130		22433.3			
1253/0 16034.0 16121 16748.0 1686.5 22122 22345.3 1253/2 12699.6 16123 16749.0 16867.0 22122 22345.0 12538.0 12640.0 16123 16749.6 16867.0 22123 22345.0 12538.0 12641.0 16125 16750.6 16885.0 22123 22346.0 12539.5 12641.0 16126 16750.1 16888.0 22125 22126 12539.5 12641.1 16750.1 16889.0 22126 22146 22246.0 12540.0 12642.5 1612 16751.0 16889.6 22172 22146 12540.0 12642.5 1612 16751.0 16889.6 22172 22178 12540.0 12642.5 1612 16752.1 16890.0 22128 22247.5 12540.0 12642.5 1612 16752.5 1680.0 22128 22347.5							1		÷	2 2	-	0.00	-		22,22	1	÷			
1253.73 160.25.73 161.24 1674.90 16867.0 221.22 222345.3 1253.86 12640.5 1661.2 1674.90 1688.0 221.23 222345.3 1253.86 12640.5 1661.2 16750.0 16888.0 221.24 22246.0 1253.90 12641.0 1612.5 16750.0 16888.0 221.25 22246.5 1253.90 12641.0 1612.7 16751.0 16888.0 221.25 22246.5 12540.0 12642.0 1612.7 16751.0 16889.5 221.27 22347.5 12540.0 12642.5 1612.7 16751.5 16899.5 221.27 22347.5 12541.0 12642.5 1612.9 16752.5 16870.0 22128 22348.0										15121		16866.5			22121					
12538.0 12640.0 16749.5 16867.5 22123 22245.5 12538.0 12640.0 16123 16740.6 1688.0 22124 22246.0 12539.0 12641.5 16126 16750.6 16889.0 22176 22346.0 12539.5 12641.5 1612 16751.0 16889.6 22126 22247.0 12540.0 12642.0 1612 16751.6 16899.6 22127 22347.5 12540.5 1622 1672 16750.0 16899.0 22128 22347.5 12540.6 1622 1675 1675 1680.0 22128 22347.5 12540.0 1642 1675 1675 16870.0 22128 22348.5										72.191		0.79891			22122					
12538.5 12640.5 1612 16750.6 16888.0 22124 22246.0 12539.0 12641.0 1612 16750.6 16888.0 22126 22246.5 12539.5 12641.6 1612 16751.0 16889.0 22176 22347.5 12540.0 12642.0 1612 16751.5 16889.5 22177 2247.5 12640.6 12642.5 1612 16752.5 16870.0 22128 22248.0 12641.0 16429.1 16752.5 16870.5 22128 22348.0										16123		16867.5			22123		22437.5			
12539.0 12641.0 16126 16750.5 16888.5 22346.5 12539.5 12641.5 166126 16751.0 168890.0 22175 22347.0 12540.0 12642.0 1617.5 16869.5 22177 22347.0 12540.5 1680.0 1680.0 22127 22347.0 12540.1 16242.0 1672.0 1680.0 22128 22348.0 12541.0 12643.0 16129 16752.1 16870.0 22138 22348.0										16124		16868.0			22124		22438.0			
12539.5 12641.5 16126 16751.0 16869.0 22347.0 12540.0 12642.0 1671.5 1689.5 22127 22347.5 12540.5 12642.5 1675.0 1680.5 22128 22347.5 12540.1 12642.5 1675.0 1675.0 1680.0 22128 22348.0 12541.0 12643.0 16752.0 16870.5 22128 22348.0							_			16125		16868.5			22125					
12540.0 12642.0 16127 16751.5 16869.5 22127 22347.5 12540.5 12642.5 16128 16752.0 16870.0 22128 22348.0 12541.0 12643.0 16129 16752.5 16870.5 22128 22348.0								_	-	16126	_	16869.0			22126	_	-			
12840.5 12642.5 16128 16752.0 16870.0 22128 22348.0 12541.0 12643.0 16129 16752.5 16870.5							_		_	16127		16869.5			22127					
12541.0 12643.0 16129 16752.5 16870.5 22348.5										16128		16870.0			20100					
12541.0 12643.0 16129 16/52.5 168/0.5 22348.5									_			0.07001			22120					
									_			16870.5			22129					

ITU Telex frequency table (3/4)

No. No.	100 77 100 70 70 70 70 7	Java - In	<u> </u>		CIAA CIAMA			114 G - 1114 G	`	֡֞֞֜֞֜֞֜֞֜֞֜֜֞֜֜֞֜֜֜֜֞֓֓֓֜֜֜֟֜֜֜֜֜֜֟֜֜֜֜֓֓֓֓֡֜֜֜֜֜֡֡֡֡֡֡֡֡֜֝֓֜֜֜֜֡֓֡֡֡֜֜֜֜֡֡֡֡֡֡֡֡	1 Y	1 2 2	֓֞֓֞֓֓֞֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֡֡֓֓֓֓֓֡֓֡֓֡֓֡֓֡֡֓֡֓	110 IELEX FREQUENCY IABLE (3/4)	اري اح	_	CIVAC		40 -1111	9	ourse	4	
10 10 10 10 10 10 10 10	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1,	Y DANK			O MITZ DAIN		Г	òΙ	٨		TY TY	٨		TX DAIND			TY DAILD	Ť				TV T	ρV
125-50 126-64 616.32 167-44 6867.50 22133 2255.0 125-50 126-66 6133 167-45 687.50 22135 2258.1 125-40 126-66 6134 167-56 687.1 22135 2258.1 125-40 126-66 6139 167-56 687.1 22135 22135 2258.1 125-40 126-66 6139 167-56 6887.5 22135 22135 2258.5 125-66 126-67 6100 667.7 6887.5 22140 2228.6 125-67 126-68 6100 6877.5 6887.5 22140 2228.6 125-69 126-69 6100 6100 6887.5 6887.5 22140 2228.6 125-61 126-69 6100 6100 6887.5 6887.5 2214 2228.6 125-61 126-60 6100 6100 6887.5 6887.5 2214 2228.8 125-61 126-60 6100 610	125-51 126-64 616-12 167-45 6187.0 2213.2 2256.0 125-52 126-64 616.3 167-45 6167.3 167-45 617.3 167-45 617.3 167-45 617.3 167.3 225.3 225.5 167.3		ž	į	<u> </u>	2	ò	<u><</u>	t	4	_	_	16131			9		t	+	_	-		ź
125-43.0 126-45.0 161-25 162-45.0 161-25 162-20 1	125-15.0 126-6.0 161-73.0 1677-5.0 168-7.0 221-13 2255-10 125-5.4.0 126-6.0 161-73 1677-5.0 1687-2 123-13 221-13 225-13 <												16132		16872.0			22132					
125-4.0 126-4.0 <t< td=""><td>125-430 126-440 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>16133</td><td></td><td>16872.5</td><td></td><td></td><td>22133</td><td></td><td></td><td></td><td></td><td></td></t<></td></t<>	125-430 126-440 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>16133</td><td></td><td>16872.5</td><td></td><td></td><td>22133</td><td></td><td></td><td></td><td></td><td></td></t<>												16133		16872.5			22133					
1554.0. 156.0.	125-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-64.0 126-65.0 126-65.0 126-65.0 126-65.0 126-65.0 126-66.0 126-65.0												16134		16873.0			22134					
125-64.5 126-65.0	12646.5 1266.6									12135			16135		6873.5			22135					
1256-15 1256-15 <t< td=""><td>254.50 125.46.0 10.00</td><td></td><td>-</td><td></td><td></td><td></td><td></td><td></td><td>-</td><td>12126</td><td>÷</td><td>÷</td><td>100</td><td></td><td>0.077</td><td></td><td></td><td>20120</td><td>1</td><td>÷</td><td></td><td>-</td><td></td></t<>	254.50 125.46.0 10.00		-						-	12126	÷	÷	100		0.077			20120	1	÷		-	
12546.5 12647.5 1618.8 1677.0 16875.0 2218 22258.3 12546.5 12640.0 12640.0 1619.8 1677.0 16875.0 2214.0 22288.0 12546.6 12640.0 1614.4 1678.9 16875.5 2214.0 22285.0 12544.0 12690.0 1614.4 1678.9 16875.5 2214.0 22285.0 12544.0 12690.0 1614.4 1678.0 16875.0 2214.0 22285.0 12544.0 12690.0 1614.4 1678.0 1687.0 2214.0 22285.0 12544.0 12680.0 12680.0 16880.0 16880.0 2214.0 22285.0 12546.0 12680.0 16880.0 16880.0 16880.0 2214.0 22286.0 12566.0 12680.0 16880.0 16880.0 16880.0 2214.0 22286.0 12566.0 12680.0 16880.0 16880.0 16880.0 2214.0 22286.0 12568.0 12680.0 16880.0 16880.0<	1256.5 1867.5 1879.6 1877.0 1887.5 1879.0 1877.0<									12137			16137		6874.5			22137		_			
125460 152460 16140 167725 16875 22.19 22.2585 125461 152461 16140 167726 168770 22.14 22.2585 125462 16140 167726 168770 22.14 22.2585 125463 12660 16140 167720 168770 22.14 22.2585 125463 12660 16144 16770 16870 22.14 22.2585 125463 12661 16144 16770 16870 22.14 22.2586 12566 12662 16145 16770 16870 22.14 22.2586 12666 12662 16146 16770 16880 22.14 22.2586 12666 12662 16146 16770 16880 22.14 22.2586 12666 16147 16770 16880 22.14 22.2586 12686 16147 16770 16880 22.16 22.14 22.2886 12686 16147 16770<	1256-60 1256-60 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>12130</td><td></td><td></td><td>16130</td><td></td><td>0.478.0</td><td></td><td></td><td>22120</td><td></td><td>22352.3</td><td></td><td></td><td></td></t<>									12130			16130		0.478.0			22120		22352.3			
12640. 15640. 1678.0 1697.0 2274.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2225.0 2224.0 2225.0 2224.0 2224.0 2225.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0 2224.0<	1.25450. 1.25450. 1.62450. 1.62450. 1.62450. 1.62450. 1.62450. 1.62450. 1.62450. 1.62450. 1.62440. 1.62450. 1.62440. 1.66440. 1.67450. 1.68440. 1.62440. 1.66440. 1.67450. 1.68440. 1.62440. 1.66440. 1.67450. 1.68440. 1.66440. 1.67450. 1.68440. 1.66440.												20130		0.072			22130					
125415 176405 16141 167363 168710 22141 222544 125417 126405 16141 167360 168710 22142 222545 125417 126405 16143 16730 168710 22144 222556 125416 12650 16144 16780 168710 22144 222556 125416 12650 16144 16780 16870 22144 222556 12560 16146 16780 16870 16870 22144 222556 12560 16140 16776 16880 22144 222556 12560 16140 16776 16880 22144 22256 12560 16140 16776 16880 22144 22256 12560 16140 16772 16880 22144 22256 12560 16140 16772 16880 22144 22264 12560 16140 16772 16880 22144 22264	12545.5. 16464.5. 61441 6778.6. 687.0. 22.14 22254.4. 22254.4. 22254.4. 22254.4. 22254.4. 22254.6. 1254.7. 2224.4. 22254.6. 1254.7. 22254.6. 1254.7. 22254.6. 1254.7. 22254.6. 2224.4. 22255.6. 1254.7. 22255.6. 2214.2. 22255.6. 1254.7. 22255.6. 1254.6. 1254.7. 22255.6. 1254.6. 1255.6. 1254.6. 1254.6. 1255.6. 1254.6. 1255.6. 1254.6. 1255.6. 1255.6. 1254.6. 1255.6. <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>16139</td> <td></td> <td>16875.5</td> <td></td> <td></td> <td>2273</td> <td></td> <td></td> <td></td> <td></td> <td></td>												16139		16875.5			2273					
125470 126400 6141 6778.5 1887.5 22141 22255.4 12548 12640 6141 6778.5 1887.5 22142 22255.5 12548 12660 6144 6778.5 6887.5 2214 22255.5 12540 12661 6144 6770.5 6887.5 2214 22255.5 12565 12661 6144 6770.5 6887.5 2214 22265.5 12565 12661 6144 6770.5 6887.5 2214 22265.5 12565 12662 1644 6770.5 6880.5 2214 22265.5 12663 1667 1678.5 16881.5 2214 22265.5 12664 1678.5 16881.5 2214 22265.5 12675 1678.5 16881.5 2216 2216 22265.5 12681 1678.5 16881.5 16882.5 2216 2216 22265.5 12681 1678.5 16881.5 16882.5 2216<	128470 16440 167848 16875 22444 222554 128480 16441 16786 16877 22444 222554 128480 16450 16775 16875 22444 222556 12840 26560 1644 16785 16875 2244 222556 12840 26561 1644 16780 16875 2214 222556 12865 12862 1644 16780 16870 2214 22256 12866 12862 1644 16782 16800 2214 22256 12867 1667 16800 16800 2214 22256 12867 16780 16800 2214 22256 12867 16780 16800 2214 22266 12867 16782 16800 2214 22256 12867 16782 16800 2214 22266 12867 16782 16800 2214 22266 12867									12140	4		16140	- i	16876.0			22140	-	÷			
12845 16840 67590 18870 22142 222556 12846 1644 16780 18876 22144 222556 12846 1660 1644 16780 18876 22144 222556 12846 1660 1674 16870 16870 22144 222566 12846 16820 1644 16760 16870 2214 222566 12850 16820 1680 2214 22266 2214 22256 12860 16820 1680 1680 2214 22266 12860 16820 1680 2214 22266 12860 16820 16881 2214 22266 12860 16820 16882 16820 2214 22266 12860 16820 16882 16884 2216 2214 22266 12860 16820 16880 16880 2214 22266 2216 12860 16820 16880	128415 168495 168710 168710 22142 222656 128415 168495 168710 168710 22144 222656 128415 16860 16144 16780 168710 22144 222656 128416 16860 16782 168716 168716 22144 222656 128610 16144 16780 168716 168716 22144 222656 128610 16144 167820 16890 22144 222660 128610 16144 167820 16890 22144 222660 128610 16144 167820 16890 22144 222660 128610 16144 167820 16890 22144 222660 128610 16144 167820 16881 22144 222660 128610 16144 167820 16881 22144 222660 128610 16144 167820 168820 22144 222660 128610 161									12141			16141		16876.5			22141					
126460 126560 167845 167865 167865 167865 167865 167865 167865 167865 167865 167866 168776 168776 167866 168776 168776 167866 167760 168776 167867 167760 168776 167867 167760 168776 167760 168776 167760 168776 167760 168776 167760 168776 167760 168776 167760 168776 167760 168776 167760 168776 167760 168776 167760 168776 167760 168776 16880 167760 168776 16880 167760 16880 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 16881 167760 1	12848 12860 16144 167805 168715 22144 222660 12840 12861 16144 167805 168715 22144 222660 12840 12861 16144 167805 168716 2214 222660 12840 12861 1614 16780 16870 2214 222660 12865 12621 1614 16772 16800 2214 222660 12866 12623 1614 16772 16801 2214 222660 12867 1623 1681 16782 16801 2214 222660 12867 1623 1681 16782 16801 2214 222660 12867 1682 1682 1682 1682 2214 222660 12867 1682 1683 16884 2216 2214 222660 12867 1686 1686 16884 2216 2216 2216 2216 1686 1686									12142			16142		0.77891			22142		22355.0			
12548 5 1265 10 6144 1 1670 10 168	126405 16460 16740 16780 22144 222665 126405 126610 16740 167810 16870 22146 222665 126405 176610 167810 16870 16870 22446 222665 12650 176820 1644 16770 16800 2214 222665 12660 16620 1644 16772 16800 2214 22266 12660 16620 1680 1680 2216 22260 2216 22266 12660 16620 1680 1680 2216 22260 2216 22266 12680 1664 16772 1680 2216 2216 22266 2216 12680 1664 16772 1680 2216									12143			16143		16877.5			22143		22355.5			
12640 126410 16446 1676.0 16876.5 16870.6 22146 22267.0 12646.5 1265.5 1682.0 1687.0 1687.0 1687.0 22146 22267.0 1265.6 1268.5 1614.0 1672.5 1688.0 2214.0 22268.0 1266.6 1268.5 1614.0 1672.5 16881.0 2214.0 22268.0 1267.1 1673.5 16881.0 2214.0 22268.0 2214.0 22268.0 1267.1 1673.5 16881.0 16881.0 2214.0 22268.0 2214.0 22268.0 1268.0 1615.0 1676.0 16882.5 2214.0 22268.0 2214.0 22268.0 1268.0 1616.0 1676.0 16882.5 2214.0 22268.0 2214.0 22268.0 1268.0 1616.0 1676.0 16882.5 2214.0 2214.0 22268.0 1268.0 1616.0 1676.0 16882.0 2214.0 2214.0 22268.0 1268.0	12549 126510 16445 1676.0 1687.0 1687.0 2244.0 2254.6 22146 22267.0 2256.0 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>12144</td> <td>12548.5</td> <td></td> <td>16144</td> <td></td> <td>16878.0</td> <td></td> <td></td> <td>22144</td> <td></td> <td>22356.0</td> <td></td> <td></td> <td></td>									12144	12548.5		16144		16878.0			22144		22356.0			
125650 126515 (Fit46) (Fif47) (Fif477) (Fif488) (Fif4889) (Fif4889) (Fif4889) (Fif4889) (Fif4	125616. 12651.5 (6146) (6761.0) (6879.0) 22146 22257.0 12555.0 1682.0 (6761.0) (6879.5) (6781.0) (6879.5) 22144 22256.0 12556.0 1682.0 (678.2) (681.0) 2214.0 22256.0 2215.0 22256.0 1256.0 1682.0 (678.2) (681.0) 2216.0 2216.0 2225.0 1256.0 1682.0 (678.2) (6881.0) 2216.0 2216.0 2226.0 1256.0 1682.0 (678.2) (6881.0) 2216.0 2216.0 2226.0 1256.0 1665.0 (678.2) (6881.0) 2216.0 2216.0 2216.0 1256.0 1665.0 (678.0) (688.0) 2216.0 2216.0 2216.0 1256.0 1666.0 (678.0) (688.0) 2216.0 2216.0 2216.0 1256.0 1666.0 (678.0) (688.0) 2216.0 2216.0 2216.0 1256.0 1678.0 (688.0)												16145		6878 5			22145					
125556 12625.0 <th< td=""><td>12565.0 12625.0 16147 16761.5 16891.0 22144 22551.0 12565.0 12655.5 16140 1678.0 16891.0 22148 22258.0 1256.0 12650.5 16150 1673.0 16881.0 22149 22258.0 1256.0 12650.0 16150 1673.5 16881.0 22141 22258.0 1256.0 1656.0 16150 1673.5 16881.0 22141 22258.0 1256.0 1656.0 16150 1676.2 16881.0 22141 22258.0 1256.0 1656.0 16150 1676.0 16881.0 22143 22268.0 1256.0 1656.0 16150 1676.0 16884.0 22143 22161 22161 1256.0 1656.0 16150 1676.0 16884.0 22143 22161 22161 1256.0 1616.0 1677.0 16884.0 22160 22161 22161 1256.0 1616.0 1616.0 16884.0 22160</td></th<> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>Ļ</td> <td>-</td> <td>÷</td> <td>16146</td> <td>:</td> <td>6879.0</td> <td></td> <td></td> <td>22146</td> <td>1</td> <td>÷</td> <td></td> <td></td> <td></td>	12565.0 12625.0 16147 16761.5 16891.0 22144 22551.0 12565.0 12655.5 16140 1678.0 16891.0 22148 22258.0 1256.0 12650.5 16150 1673.0 16881.0 22149 22258.0 1256.0 12650.0 16150 1673.5 16881.0 22141 22258.0 1256.0 1656.0 16150 1673.5 16881.0 22141 22258.0 1256.0 1656.0 16150 1676.2 16881.0 22141 22258.0 1256.0 1656.0 16150 1676.0 16881.0 22143 22268.0 1256.0 1656.0 16150 1676.0 16884.0 22143 22161 22161 1256.0 1656.0 16150 1676.0 16884.0 22143 22161 22161 1256.0 1616.0 1677.0 16884.0 22160 22161 22161 1256.0 1616.0 1616.0 16884.0 22160									Ļ	-	÷	16146	:	6879.0			22146	1	÷			
12565.0 1660.0 1672.0 1680.0 2271.4 2228.0 12565.0 1662.0 1678.5 1681.0 2271.4 2228.0 12566.0 1663.0 1678.5 1681.0 2271.0 2271.0 2271.0 1256.0 1663.5 161.0 1678.5 1681.0 2271.0 2271.0 2271.0 1256.0 1768.5 1678.5 1681.0 2271.0 2271.0 2271.0 1256.0 1768.0 1683.0 1683.0 2271.0 2271.0 2271.0 1256.0 1768.0 1683.0 1683.0 2271.0 2271.0 2271.0 1256.0 1768.0 1688.0 2271.0 2271.0 2271.0 2271.0 1256.0 1768.0 1688.0 1688.0 2271.0 2271.0 2271.0 2271.0 1256.0 1768.0 1688.0 1688.0 2271.0 2271.0 2271.0 2271.0 2271.0 2271.0 2271.0 2271.0 2271.0 2271.0 22	12555.0 17555.0 1755.												16447		00000			1 0					
125650 126650 168630 167830 168810 22148 222481 125650 168630 167830 168810 22140 222650 125650 16863 167830 168815 22150 222650 125650 16864 1673 167840 16882 22150 22360 12560 16864 16784 16883 22160 22360 22161 22360 12580 16865 16765 16884 22162 22360 22163 22360 12580 16760 16786 16884 22164 22361 22163 22361 12580 16780 16786 16884 22163 22361 22163 22361 12580 16780 16884 16780 16884 22163 22361 22164 22361 16780 16884 16770 16884 22164 22164 22361 22164 22361 16780 16884 16770	12565 1 (256.2) 1266.10 (1256.0)												10147		0.000			22147					
12566.0 1268.0 178.0 178.0 178.0 12566.0 1268.5 161.0 1678.2 1680.5 2215.0 2235.0 1256.5 1668.0 1677.5 16881.0 2215.0 2235.0 1258.5 1686.0 1677.0 16881.0 2215.0 2235.0 1258.0 1675.0 16881.0 2215.0 2235.0 1258.0 1675.0 16883.0 2215.0 2236.1 1258.0 1676.0 16884.0 2216.0 2236.1 1258.0 1676.0 16884.0 2216.0 2236.1 1258.0 1676.0 16884.0 2216.0 2236.0 1258.1 1676.0 16884.0 2216.0 2216.0 2236.0 1258.1 1676.0 16884.0 2216.0 2216.0 2236.0 1258.1 1676.0 16884.0 1688.0 2216.0 2216.0 2226.0 1258.1 1676.0 1688.0 1688.0 2216.0 2216.0 22216.0 <td>12566.0 1268.0 1678.2 1680.0 2235.0 12566.0 1268.5 1680.0 1677.3 1680.0 2215.0 2235.0 1256.0 1664.0 1615.1 1670.0 1688.1 2215.2 2215.2 2235.0 1257.0 1266.0 1615.3 1670.0 1688.1 2215.2 2215.2 2236.0 1258.0 1266.0 1615.3 1676.0 1688.3 1688.5 2215.2 2215.2 2236.1 1258.0 1626.0 1615.3 1676.0 1688.5 2216.2 2216.2 2236.1 1258.0 1626.0 1616.3 1678.0 1688.5 2216.2 2216.2 2236.2 1258.0 1626.0 1616.3 1678.0 1688.5 2216.2 2216.2 2236.2 1258.0 1616.0 1678.0 1688.5 1688.5 2216.2 2216.2 2236.2 1258.1 1616.0 1678.0 1688.5 1688.5 2216.2 2216.2 2216.2 22</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>12148</td> <td></td> <td></td> <td>16148</td> <td></td> <td>0.08891</td> <td></td> <td></td> <td>22148</td> <td></td> <td>22358.0</td> <td></td> <td></td> <td></td>	12566.0 1268.0 1678.2 1680.0 2235.0 12566.0 1268.5 1680.0 1677.3 1680.0 2215.0 2235.0 1256.0 1664.0 1615.1 1670.0 1688.1 2215.2 2215.2 2235.0 1257.0 1266.0 1615.3 1670.0 1688.1 2215.2 2215.2 2236.0 1258.0 1266.0 1615.3 1676.0 1688.3 1688.5 2215.2 2215.2 2236.1 1258.0 1626.0 1615.3 1676.0 1688.5 2216.2 2216.2 2236.1 1258.0 1626.0 1616.3 1678.0 1688.5 2216.2 2216.2 2236.2 1258.0 1626.0 1616.3 1678.0 1688.5 2216.2 2216.2 2236.2 1258.0 1616.0 1678.0 1688.5 1688.5 2216.2 2216.2 2236.2 1258.1 1616.0 1678.0 1688.5 1688.5 2216.2 2216.2 2216.2 22									12148			16148		0.08891			22148		22358.0			
12565.5 12655.5 16550.5 16150.0 16783.0 16881.0 2215.0 2215.0 2235.0 12557.0 12654.0 1615.3 16784.0 16882.5 2215.2 2215.2 2235.0 12568.0 12655.0 1615.3 1678.5 16883.5 2215.2 2215.3 22360.5 12569.0 12660.0 1615.5 1678.6 16884.0 2216.2 22360.5 12569.0 12660.0 1615.6 1678.6 16885.0 2216.2 22360.5 12560.1 12660.1 1616.0 1678.6 16885.0 2216.0 2236.0 12560.2 12660.1 1616.0 1678.0 16885.0 2216.0 2216.0 2236.0 12560.1 1616.0 1678.0 16886.0 16887.0 16886.0 2216.0 2216.0 2226.0 12561.2 1616.0 1678.0 16886.0 16887.0 16886.0 2216.0 2216.0 2226.0 12561.2 12561.0 1616.0 1678.0	12566.5 12656.5 16550.5 1678.30 16881.0 22150 22150 22350.0 12557.0 12557.0 1264.0 1615.2 1674.0 1682.5 1682.5 2215.2 2215.2 22360.5 12558.0 1265.0 1665.4 1675.5 16883.5 2215.2 2215.2 22360.5 1256.0 1266.0 1615.6 1676.5 16883.5 2215.2 2215.2 22360.5 1256.0 1256.0 1615.6 1676.5 16884.0 2216.2 22360.5 2266.5 2216.2 22360.5 1256.0 1256.0 1615.6 1676.5 16885.0 2216.2 2236.5 2216.2 2236.5 1256.0 1256.0 1616.6 1677.5 16885.0 1688.0 2216.2 2236.5 1256.1 1256.2 1616.6 1677.0 16887.5 1688.5 2216.2 2216.2 2236.5 1256.1 1626.2 1616.6 1677.0 1688.6 2216.2 2216.2 22216									12149			16149		16880.5			22146					
12557.0 10564.0 1615.1 1678.3.5 16881.5 2215.2 2236.0 12558.5 1266.0 1615.2 1678.0 16882.0 2215.2 2236.0 1256.0 1266.0 1616.4 1676.0 16883.0 2215.2 22361.2 1256.0 1266.0 1616.4 1676.0 16884.5 2216.2 22361.2 1256.0 1266.0 1616.9 1676.0 16884.5 2216.2 22361.2 1256.0 1266.0 1566.0 1616.9 1678.7 16885.5 2216.9 22363.2 1256.1 1266.1 1616.9 1678.7 16886.0 2216.0 22361.2 1266.1 1266.1 1616.9 1678.7 16886.0 2216.0 2216.0 22361.2 1266.2 1266.1 1616.4 1678.0 1688.0 2216.0 2216.0 22361.0 1266.1 1266.1 1616.4 1670.0 1688.0 2216.0 2216.0 2226.0 1266.2 1266.1	12557.0 10564.0 16151 1670.35 16881.5 16881.0 22151 22350.0 12558.5 12664.5 16152 16784.0 16882.0 22163 22360.0 1258.0 1656.6 16154 1676.0 16884.5 22163 22361.0 1258.0 1266.0 1616.4 1676.0 16884.5 2216.0 22164 22361.0 1258.0 1266.0 1616.0 1678.5 16884.5 2216.0 2216.0 22361.0 1260.0 1616.0 1678.5 16886.5 2216.0 2216.0 22361.0 1260.0 1616.0 1678.5 16886.5 2216.0 2216.0 22361.0 1260.0 1616.0 1678.5 16886.5 2216.0 2216.0 2226.0 1260.1 1616.0 1678.0 16886.0 2216.0 2216.0 2226.0 1260.1 1616.0 1678.0 16886.0 2216.0 2216.0 2226.0 1260.1 1616.0 1616.0									12150			16150		16881.0			22150					
1255.7.5 1265.4.5 1615.2 1676.4.0 1682.5 2236.0 2215.2 22360.5 1255.6.5 12656.5 1615.5 1676.5 1683.5 2216.5 22361.5 22361.5 1255.6.0 12656.0 1615.5 1676.5 1688.5 2216.5 22361.5 22361.5 1256.0.0 12660.0 1615.6 1676.6 1688.5 2216.5 22362.5 22361.5 22362.5 1256.0.1 12660.0 1615.6 1676.6 1688.5 2216.5 22362.5 22361.5 22362.5 <td>125545 108645 16152 16794.0 16882.0 22152 22360.0 125840 12685.1 1668.2 1676.5 16883.5 2215.2 22361.5 125840 12686.0 1615.6 1676.5 16883.5 2215.2 22361.5 125840 12560.0 1615.6 1676.6 16884.0 2215.2 22361.5 12560.1 12560.0 1617.6 16884.0 2216.2 22361.5 12561.2 12561.0 1617.0 16886.0 2216.2 22361.5 12561.2 12561.0 1617.0 16886.0 16887.0 2216.2 22361.0 12561.1 1617.0 16188.6 16887.0 16886.0 2216.2 22361.0 12562.1 1617.0 16188.6 16887.0 16886.0 2216.2 22361.0 12562.1 1617.0 16888.5 1688.6 2216.0 2216.2 22361.0 12564.0 1617.1 1677.0 16888.5 2216.0 2216.0 2216.0 <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>12151</td><td>:_</td><td><u>:</u></td><td>16151</td><td><u>:</u></td><td>16881.5</td><td></td><td></td><td>22151</td><td>1</td><td>-</td><td></td><td></td><td></td></td>	125545 108645 16152 16794.0 16882.0 22152 22360.0 125840 12685.1 1668.2 1676.5 16883.5 2215.2 22361.5 125840 12686.0 1615.6 1676.5 16883.5 2215.2 22361.5 125840 12560.0 1615.6 1676.6 16884.0 2215.2 22361.5 12560.1 12560.0 1617.6 16884.0 2216.2 22361.5 12561.2 12561.0 1617.0 16886.0 2216.2 22361.5 12561.2 12561.0 1617.0 16886.0 16887.0 2216.2 22361.0 12561.1 1617.0 16188.6 16887.0 16886.0 2216.2 22361.0 12562.1 1617.0 16188.6 16887.0 16886.0 2216.2 22361.0 12562.1 1617.0 16888.5 1688.6 2216.0 2216.2 22361.0 12564.0 1617.1 1677.0 16888.5 2216.0 2216.0 2216.0 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>12151</td> <td>:_</td> <td><u>:</u></td> <td>16151</td> <td><u>:</u></td> <td>16881.5</td> <td></td> <td></td> <td>22151</td> <td>1</td> <td>-</td> <td></td> <td></td> <td></td>									12151	:_	<u>:</u>	16151	<u>:</u>	16881.5			22151	1	-			
12558.0 12656.0 16153 16764.5 1688.3.0 22165 22361.0 12558.0 12656.5 16154 16776.5 16883.0 22165 22165 22361.0 1256.0 12656.0 16155 16766.0 16883.0 22165 22361.0 22361.0 1256.0 12560.0 16159 16766.0 16883.0 22160 22167 22362.0 1256.1 16159 1676.0 1688.0 22160 22160 22361.0 1256.1 16160 1678.0 16886.0 22160 22160 22361.0 1256.2 1256.1 16160 1678.0 16886.0 22160 22161 22361.0 1256.2 1256.2 16160 1678.0 16886.0 1688.0 22160 22160 22266.0 1256.2 16160 1677.0 16880.0 16887.0 22160 22160 22260 22260 22260 22260 22260 22260 22260 22260 22260 2226	12558.0 12656.0 16153 16764.5 1688.5 1614 16765.0 16883.0 22165 22361.0 22361.									12152			16152		16882 0			22152					
12558.5 1265.5 1615.5 1678.5 1683.5 22.15 22.26	12558.5 1265.5 1615.5 1675.5 1683.5 1683.5 1683.5 1675.5 1683.5 22.15 22.26 22.15 22.26 15.5 16.6 16.76 16.883.5 22.15 22.15 22.26									10161			16.15.2		2000			20100		22360.5			
(258.5) (167.6) (1688.3) (1689.3) (275.4) (275.5) (258.5) (1256.5) (167.6) (1688.3) (1689.3) (275.5) <th< td=""><td>(1258) (1268) (1676) (1688) (1683) (1676) (1688) (1683)<</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>20101</td><td></td><td>0.2000</td><td></td><td></td><td>22132</td><td></td><td></td><td></td><td></td><td></td></th<>	(1258) (1268) (1676) (1688) (1683) (1676) (1688) (1683)<												20101		0.2000			22132					
125590 12656.0 16155 1676.0 16883.5 22156 22362.0 12559.3 12560.5 16156 1676.0 16884.0 2215 2215 22362.0 12560.5 16260.5 16156 1676.0 16885.0 2216 2216 22363.0 12560.1 12561.5 1616.0 16780.0 16886.5 2216 2216 22364.0 12561.2 12561.5 1616.0 16780.0 16886.5 2216 2216 22364.0 12562.0 12562.0 1616.6 16770.5 16886.5 2216 2216 22364.5 12562.0 1616.6 16770.5 16886.5 2216 2216 22364.5 12562.0 1616.6 16770.5 16880.5 2216 2216 22364.5 12562.0 1676.0 16770.5 16880.5 2216 2216 22366.5 12564.0 16770.6 16880.5 2216 2216 22366.5 12566.0 16770.6 16880	125550 (12566) (16155) (16765) (16894) 22155 22362.0 125550 (12560) (15560) (16760) (16884) 22156 22362.0 12560.0 (1560) (16760) (16885) 22160 22362.0 12560.1 (1560) (16770) (16885) 22160 22363.0 12561.5 (1561) (16780) (16887.0) 22160 22364.0 12561.5 (1562) (16780) (16887.0) 22160 22364.0 12562.1 (1562) (16780) (16880.0) 22162 22364.0 12562.1 (1662) (16780) (16880.0) 22162 22364.0 12562.1 (1662) (16770) (16880.0) 22162 22364.0 12562.1 (1562) (16770) (16880.0) 22162 22366.0 12562.5 (1662) (16770) (16880.0) 22162 22366.0 12562.5 (1662) (16770) (16880.0) 2216 22366.0											_	16154		16883.0			22154					
12559.3 12666.5 16156 16766.0 16884.0 22156 22157 22362.5 12660.0 12560.0 16157 16765.5 16885.0 22169 22187 22382.5 12661.0 12561.0 16169 16768.5 16885.0 22169 22363.5 12661.0 12561.0 16160 16768.5 16885.0 22169 22363.5 12662.0 12562.0 14616.0 16768.5 16887.5 22160 22365.5 12662.1 12562.0 16162.0 16788.5 16887.5 22162 22365.5 12662.2 12562.5 16162 16770.0 16888.5 22162 22365.5 12664.0 16764.0 16788.5 16888.5 22162 22365.5 12664.0 16764.0 16770.0 16889.0 22162 22162 12664.0 16766.0 16772.0 16890.0 22166 22216 12665.0 16166.0 16772.0 16890.0 22171 22371	12559.5 12569.5 16156 16766.0 16884.0 22156 22156 22362.0 12560.0 15560.0 16157 1678.6 1684.5 2216 2216 22362.0 12560.0 12560.0 16157 1676.0 16885.0 2216 22363.5 12560.1 12561.0 1616.0 1676.0 16887.0 22160 22364.0 12562.0 12562.0 12562.0 1616.0 1676.0 16887.0 22162 22364.0 12562.0 12562.0 1616.0 1676.0 16880.0 2216.0 2216.0 22364.0 12563.0 12564.0 1616.0 1670.0 16880.0 2216.0 2216.0 22365.0 12564.0 1616.0 1677.0 16880.0 2216.0 2216.0 22366.0 12564.0 1617.0 16880.0 2216.0 2216.0 22366.0 12566.0 1626.1 1677.0 16880.0 2216.0 2216.0 22366.0 12566.0 1677.0<												16155		16883.5			22155					
12660.0 12560.0 1650.0 1675.0 16885.0 2215.0 2215.0 22363.0 12660.1 12560.1 1616.0 1677.5 16886.0 22160 22160 22364.0 12561.0 12560.1 1616.0 1677.5 16886.5 22160 22160 22364.0 12562.0 12561.5 1616.0 1677.6 16886.5 22162 22161 22364.0 12562.0 12562.0 1616.0 1677.6 16888.0 22162 22365.2 12562.0 12563.0 1616.5 1677.0 16888.0 22162 22365.2 12563.0 12564.0 1616.5 16887.0 16888.0 22162 22366.0 12564.0 1677.0 16888.0 22162 22366.0 22163 22366.0 12664.0 1677.0 16889.0 22160 22366.0 22366.0 22366.0 12664.0 1677.0 16889.0 22160 22368.0 22160 22368.0 12664.0 1677	12660.0 12560.0 1650.0 1675.0 1678.6 16885.0 2215.0 2215.0 22363.0 12660.1 12560.1 1616.0 1678.6 16885.0 22160 22363.0 12561.2 12561.2 12561.2 1616.0 1678.6 16885.0 22160 22364.0 12562.1 12562.1 1616.1 1678.6 16885.0 22162 22162 22364.0 12562.2 12562.0 1616.2 1678.6 16887.0 22162 22162 22364.5 12563.0 1616.2 1677.0 16888.0 22162 22162 22366.5 12564.0 12564.0 1616.8 1677.0 16888.0 2216 2216 22366.5 12664.0 1677.0 16888.0 2216 2216 22366.5 2216 22366.5 12664.0 1677.0 16889.0 2216 2216 22366.5 2216 22366.5 2216 22366.5 2216 22366.5 2216 22366.5 2216									L	:	÷	16156	:-	0 78891			22156	L	÷			
12560.0 15750.0 1676.0 16885.0 22159 22363.5 12560.1 12561.0 16150 16767.0 16885.0 22169 22363.5 12561.0 12561.0 16160 16768.5 16885.0 22160 22363.5 12562.0 12562.0 12562.0 16160 16768.5 16887.0 22160 22366.5 12562.0 12562.0 16162 16770.0 16887.0 22162 22365.5 12563.0 12564.0 16165 16770.0 16888.5 22162 22366.5 12564.0 16166 16770.0 16888.5 22162 22366.5 12564.0 16166 16770.0 16888.5 2216 22366.5 12564.0 16166 1677.1 16889.0 2216 22266.5 12566.0 16166 1677.2 16889.0 2216 22266.5 12566.0 16167 1677.2 16889.0 2217 22376.5 12566.0 1617 1677.5	12560.0 1556.0 1615.7 1676.0 16885.0 2218 2218 22283.1 12560.1 12560.0 16150 1676.7 16885.0 2218 2218 22383.5 12561.0 12561.0 16160 1678.5 16887.5 22160 22384.0 12562.0 12562.0 14616 1678.6 16887.5 22160 22384.0 12563.0 12563.0 16162 16770.0 16880.0 22162 22366.0 12563.0 12564.5 16166 16770.0 16880.0 22162 22366.5 12564.5 16167 16770.0 16880.0 22160 22167 22366.5 12564.5 16167 1677.1 16889.0 22167 22167 22366.5 12564.5 1617 1677.5 16889.0 22176 22366.5 22366.5 12566.5 1677.6 16880.0 22176 22386.5 22177 22386.5 12566.5 1677.1 16891.0 16891.0												1 2		0.000			2 2 2 2					
12560.5 16580.5 16158 1678.5 1678.5 1638.6 22158 22158 22258.2 12561.6 12561.5 16160 1678.6 1688.5 22160 22160 22384.5 12562.1 12562.0 16161 1678.0 1688.5 22162 22161 22384.5 12562.2 12562.0 16162 16770.5 1688.5 22162 22163 22386.5 12563.0 12563.0 16165 16770.5 16888.5 22162 22365.5 12564.5 1676.5 16788.6 16770.5 16888.5 22162 22365.5 12564.5 1677.0 16889.0 22162 22365.5 22465.5 12564.5 1676.6 1677.0 16889.5 2216 22386.5 12564.5 1676.6 1677.0 16889.5 2216 22386.5 12566.5 1676.6 1677.6 16889.5 2217 22386.5 12566.6 1677.7 16889.5 2216 2237.7	12560.5 12560.5 16158 1678.5 1688.5 22158 22158 22258.5 12561.6 12561.5 16159 16778.0 16886.5 22160 22260 22263.5 12561.6 12562.0 16161 1678.6 1688.5 22162 22161 22364.5 12562.0 12562.0 16161 1678.6 1688.5 22162 22162 22364.5 12563.0 12563.0 16164 1677.0 16888.0 22162 22163 22366.5 12564.3 12564.0 12560.0 16168 1677.0 16888.0 22166 22366.5 12564.0 12564.0 12560.0 16168 1677.0 16888.0 22167 22366.5 12564.0 12566.0 1616 1677.0 16889.0 2216 22367.5 12566.0 1616 1677.2 16890.0 2217 2217 2237.1 12567.0 12566.0 1617 1677.4 16892.5 2217 2217 22									1215/			1615/		16884.5			22157		22362.5			
12661.0 12561.0 1615.0 1678.5 1688.5 2216.0 2216.0 2226.0 12662.0 12562.0 12562.0 1616.0 1678.6 16887.0 2216.0 2226.0 12662.0 12562.0 12562.0 1616.0 1678.6 16887.0 2216.0 2236.0 12662.0 12562.0 1616.0 1678.0 16887.0 2216.0 2236.0 12663.0 12564.0 1616.0 1677.0 1688.0 2216.0 2236.0 12664.0 12564.0 1616.0 1677.0 1688.0 2216.0 2236.0 12664.0 12564.0 1616.0 1677.0 1688.0 2216.0 2236.0 12664.0 12564.0 1616.0 1677.0 1688.0 2216.0 2226.0 12665.0 1616.0 1677.0 1688.0 2216.0 2226.0 2226.0 12667.0 1256.0 1617.0 1688.0 2216.0 22216.0 2226.0 12667.0 1256.0 1617.0 </td <td>12561.0 12561.0 1615.9 1678.5 1688.5 22169 222169 222169 222169 222169 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22266.0</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>12158</td> <td></td> <td></td> <td>16158</td> <td></td> <td>16885.0</td> <td></td> <td></td> <td>22158</td> <td></td> <td>22363.0</td> <td></td> <td></td> <td></td>	12561.0 12561.0 1615.9 1678.5 1688.5 22169 222169 222169 222169 222169 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22264.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22265.0 22266.0									12158			16158		16885.0			22158		22363.0			
12561.5 12561.6 1678.6 1678.6 16886.0 22160 22364.5 12562.0 12562.0 16161 1678.6 16886.5 22162 22162 22364.5 12563.0 12563.0 16163 1678.6 16887.0 22163 22366.5 12563.0 12563.0 16163 1678.6 1688.0 22163 22365.0 12564.5 12564.5 16165 1677.0 16889.0 22164 22366.0 12564.5 12564.5 16166 1677.1 16889.0 22166 22367.0 12564.5 16166 1677.1 16889.0 22166 22367.0 12564.5 16166 1677.1 16889.0 2216 22367.0 12564.5 1676.6 1677.1 16889.0 2216 22367.0 12566.5 1677.5 16890.0 2217 2237.0 2216 1256.6 1677.5 16890.5 2217 2237.0 2216 1256.7 1677.5 16890.	12561.5 12561.6 12561.6 1678.6 1688.0 1688.0 2236									12159			16150		16885 F			22150		22363 5			
1266.20 1258.10 10768.5 1688.0 2276 22364.0 1266.20 1256.25 1416.2 1476.85 16887.5 2216 2216 22366.5 1266.20 1256.2 1416.2 1470.0 16888.5 2216 22366.5 1266.3 1256.4 1416.6 1477.0 16888.5 2216 22366.5 1266.4 1256.4 1416.6 1477.0 16888.5 2216 22366.5 1266.5 1256.5 1416.6 1477.1 16889.0 2216 22366.5 1266.5 1256.5 1416.6 1677.1 16889.0 2216 22366.5 1266.5 1256.6 1677.1 16890.5 2216 22366.5 1266.0 1256.0 1677.2 16890.5 2217 2237.7 1266.5 1256.6 1677.4 16891.5 2217 2237.7 1266.7 1677.5 16892.5 2217 2237.5 1267.7 1677.5 16893.5 2217	1266.20 1256.20 1678.3 1678.6 1688.0 2216 22364.0 1266.20 1256.20 1616.2 1676.8 16887.5 2216 22365.0 1266.20 1256.20 1616.2 1670.0 16887.5 2216.2 22365.5 1266.30 1256.3 1616.6 1677.0 1688.0 2216.2 22365.5 1266.40 1256.10 1616.6 1677.0 1688.0 2216.2 22365.5 1266.50 1256.0 1616.6 1677.1 16889.0 2216.2 22366.5 1266.50 1616.6 1677.2 16890.0 2216.2 22366.5 1256.6 1617.0 1677.3 16891.0 2216.2 22366.5 1256.6 1617.0 1677.2 16891.0 2217.0 2238.0 1256.8 1677.0 16891.0 2217.0 2237.0 2237.0 1256.9 1677.0 16891.0 2217.0 2238.0 2217.0 2237.0 1256.0 1677.0									60171			60.00		0000.0			22.00					
12562.0 12562.0 16161 16768.5 16886.5 22162 22364.5 12562.1 12562.0 16161 16769.0 1688.0 22162 22366.0 12563.0 12563.0 16163 1679.0 1688.0 22162 22366.0 12564.0 12564.0 16164 1677.0 16888.0 22162 22366.0 12564.0 12564.0 16166 1677.1 16889.0 22162 22366.0 12564.0 1256.0 16166 1677.1 16889.0 22166 22366.0 12564.0 1256.0 16167 1677.0 16889.0 2216 22366.0 12566.0 16168 1677.0 16890.0 2216 22366.0 12566.1 12560.0 1617.0 1677.3 16890.0 2217 2237 12566.2 12560.0 1617.0 1677.0 16890.0 2217 2237 12560.0 12560.0 1617.0 1677.0 16890.0 2217 2277	12562.0 12562.5 16161 16768.5 16886.5 22162 22364.5 12562.5 12562.6 16161 1678.5 16887.0 22162 22365.0 12563.0 12563.0 16163 1678.5 16887.5 22162 22366.0 12563.0 12563.0 16164 1677.0 16889.0 22166 22366.0 12564.0 12564.0 12564.0 16168 1677.1 16889.0 22166 22366.0 12564.0 12566.0 16168 1677.1 16889.0 22166 22366.0 12564.0 12566.0 16168 1677.2 16889.0 22166 22366.0 12566.0 12566.0 16169 1677.2 16890.0 2217 22367.0 12567.5 1617 1677.3 16891.5 2217 22370.0 22370.0 12567.5 1617 1677.5 16892.0 2217 22370.0 22370.0 12567.5 1617 1677.5 16892.0 2217							-	-	12160	-	-;	16160	- i	16886.0			22160	-	-			
1266.2 (1962.5 16162 1670.0 16887.0 1286.2 (1962.5 16162 1670.0 16887.0 1286.2 (1963.0 16163 1670.0 16887.0 1286.3 (1963.0 16163 1670.0 16888.0 1216.3 (1963.0 16163 1670.0 16888.0 1216.3 (1963.0 16163 1670.0 16888.0 1216.3 (1963.0 16163 1670.0 16888.0 1216.3 (1963.0 16163 1670.0 16888.0 1216.3 (1963.0 16163 1670.0 16888.0 1216.3 (1963.0 16163 1670.0 1688.0 16163 1670.0 1689.0 1216.3 (1963.0 16163 1670.0 1689.0 16170 1699.0 16170 1699.0 1216.3 (1963.0 16170 1677.0 1689.0 1699.0 16170 1677.0 1689.0 16170 1677.0 1689.0 16170 1677.0 1689.0 16170 1677.0 1689.0 16170 1677.0 1689.0 16170 1677.0 1689.0 16170 1677.0 1689.0 16170 1677.0 1689.0 16170 1677.0 1689.0 16170 1677.0 1689.0 1677.0 1677.0 1689.0 1677.0 1677.0 1699.0 1677.0 1677.0 1699.0 1677.0 1677.0 1699.0 1677.0 1677.0 1699.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0 1677.0	1266.2 1266.2 1616.2 1670.0 16887.0 1266.2 1266.2 1266.2 1266.2 1266.2 1616.4 1617.5 16889.5 1616.4 1617.5 16889.5 1616.4 1617.5 16889.5 1617.5 16889.5 1617.5 16889.5 1617.5 1618.4 1617.5 16889.5 1617.5 1618.4 1617.5 1618.5 1618.4 1617.5 1618.5 1618.4 1617.5 1618.5												16161		16886.5			22161					
2663.0 12663.0 1678.0 1678.5 16887.5 22165 22165 22365.2 12664.0 12664.0 16764.0 1678.0 1688.0 22166 22366.2 12664.0 12564.0 1666.4 1677.0 16889.0 22166 22366.2 12664.0 12564.0 1616.6 1677.1 16889.0 22166 22366.2 12665.0 1616.6 1677.1 16889.0 2216 22366.2 12665.0 1616.6 1677.2 16890.0 2216 22367.0 12667.0 1256.0 1617.0 1677.3 16891.0 2217 22369.0 12667.1 12667.2 1677.3 16891.0 2217 22370.0 2217 12667.2 12567.0 1677.2 16892.0 2217 22370.0 2217 12667.2 12567.0 1677.2 16892.0 2217 2237 2237.0 12667.2 12667.2 1677.2 16892.0 2217 2217 2237	12663.0 12563.0 12563.0 1663.0 1670.5 16887.5 22163 22164 22366.0 12664.0 12564.0 16164 1677.0 16888.0 22166 22366.2 12664.0 12564.0 16164 1677.0 16888.0 22166 22366.2 12664.0 12564.0 16166 1677.1 16889.0 22166 22366.2 1266.0 12566.0 16168 1677.1 16889.0 22167 22167 12566.0 12566.0 16169 1677.2 16890.5 22177 22366.5 12566.7 12567.0 1617.2 1677.4 16892.5 22177 22370.5 12567.0 12567.0 1677.4 16892.5 22177 22370.5 22177 12567.5 1617.2 1677.4 16892.5 22176 22371.5 22371.5 12567.5 1617.6 1677.6 16894.0 22176 22371.5 22371.5 12569.0 1677.6 16894.0 22176												16162		16887 0			22163					
1266.3 1256.3 1670.0 1688.5 2216. 2236.0 1266.4 1256.4 1670.0 1688.5 2216. 2236.5 1266.4 1256.6 1677.5 1688.5 2216. 2236.5 1266.5 1256.5 166.6 1677.5 1688.5 2216. 2236.5 1266.5 1256.5 1616.6 1677.5 1689.0 2216. 2236.5 1266.5 1256.5 1616.6 1677.5 1689.0 2216. 2236.5 1266.0 1256.0 1677.3 1689.0 2216. 2236.5 1266.0 1256.0 1677.3 1689.1 2217. 2237.0 1266.0 1256.0 1677.4 1689.5 2217. 2237.0 1266.0 1256.0 1677.4 1689.5 2217. 2237.0 1266.0 1256.0 1677.6 1689.5 2217. 2237.5 1267.0 1677.6 1689.5 2217. 2237.5 2237.5 1268.0 </td <td>1266.3 1256.3 1670.0 1688.5 2216.5 22366.5 1266.4 1256.4 1616.5 1677.0 1688.5 2216.5 2216.5 22366.5 1266.4 1676.6 1677.0 1688.5 2216.5 2236.5 2236.5 1266.5 1656.5 1616.6 1677.5 1688.5 2216.5 2236.5 2236.5 1266.0 1256.0 1616.0 1677.5 1689.0 2216.5 2216.5 2236.5 1256.0 1256.0 1617.0 1689.0 2216.5 2217.0 2236.5 1256.0 1256.0 1617.1 1677.2 1689.0 2217.2 2236.5 1256.0 1677.0 1680.0 2217.2 2236.5 2217.7 2236.5 1256.0 1677.0 1680.0 1680.0 2217.2 2237.0 2237.0 1256.0 1677.0 1680.0 1680.0 2217.2 2236.5 2217.2 2236.5 1256.0 1677.0 1680.0 1680.0<</td> <td></td> <td>20102</td> <td></td> <td>0000</td> <td></td> <td></td> <td>22.02</td> <td></td> <td></td> <td></td> <td></td> <td></td>	1266.3 1256.3 1670.0 1688.5 2216.5 22366.5 1266.4 1256.4 1616.5 1677.0 1688.5 2216.5 2216.5 22366.5 1266.4 1676.6 1677.0 1688.5 2216.5 2236.5 2236.5 1266.5 1656.5 1616.6 1677.5 1688.5 2216.5 2236.5 2236.5 1266.0 1256.0 1616.0 1677.5 1689.0 2216.5 2216.5 2236.5 1256.0 1256.0 1617.0 1689.0 2216.5 2217.0 2236.5 1256.0 1256.0 1617.1 1677.2 1689.0 2217.2 2236.5 1256.0 1677.0 1680.0 2217.2 2236.5 2217.7 2236.5 1256.0 1677.0 1680.0 1680.0 2217.2 2237.0 2237.0 1256.0 1677.0 1680.0 1680.0 2217.2 2236.5 2217.2 2236.5 1256.0 1677.0 1680.0 1680.0<												20102		0000			22.02					
1266.36 1256.40 16770.5 16888.0 22164 22366.5 1266.40 12564.0 1616.4 16770.5 16888.0 22166 22366.5 1266.40 12564.0 1616.6 1677.1 16889.5 22166 22167 22366.5 1266.5 1266.0 1617.2 16889.0 2216 22367.5 22367.5 1266.5 1266.0 1617.2 16890.0 2216 22368.5 22368.5 1266.5 1266.0 1617.3 16891.0 2231.0 22368.5 22368.5 1266.7 1266.7 1266.7 1617.3 16892.5 2237.7 2237.0 2237.0 1266.7 1266.7 1617.3 16892.5 2217.2 2237.0 2237.0 1266.7 1266.7 1617.2 1677.5 16892.5 2217.2 2237.0 1267.8 1677.9 1689.5 2217.2 2237.0 2217.2 2237.0 1267.9 1677.9 1689.5 2217.2 2237.0	1266.36 1256.40 1677.05 16888 0 22166 22366 5 1266.40 1256.40 16166 1677.05 16888 0 22166 22366 5 1266.40 1256.40 16166 1677.10 16888 0 22166 22366 5 1266.50 1256.60 16167 1677.25 16889 0 22167 22167 22367 5 1256.60 1256.60 16169 1677.25 16890 0 22169 22368 5 1256.70 1256.70 1677.30 16891 0 22170 22388 5 1256.70 1256.70 1677.30 16892 0 22177 22370 5 1256.70 1256.70 1677.40 16892 0 22177 22370 5 1256.70 1677.60 16892 0 22176 22371 5 22371 5 1256.70 1677.60 16894 0 22176 22373 5 22176 22374 5 1256.90 1677.60 16894 0 22178 22374 5 22374 5 1257.00 1257.00 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>50101</td><td></td><td>C. /0001</td><td></td><td></td><td>72.10.</td><td></td><td>27303.3</td><td></td><td></td><td></td></t<>												50101		C. /0001			72.10.		27303.3			
126640 126640 1666 16770 168885 22365 22365 22367 22367 22367 22367 22367 22367 22367 22367 22367 22367 22367 22367 22367 22367 22367 22367 22368 22376 22368 22376 22368 22376 22368 22376 22368 22376 22368 <	12564.0 12564.0 16165. 1677.0 16888.5 22365. 22365. 22365. 22365. 22365. 22365. 22365. 22367. 22367. 22367. 22367. 22367. 22367. 22367. 22367. 22367. 22367. 22367. 22368. 22377. 22368. 22377. 22368. 22377. 22368. 22377. 22368. 22377. 22368. 22377. 22368. 22377. 22368. 22377. 22368. 22377. 22377. 22377. 22377. 22377. 22377. 22377. 22377. 22377. 22377. 2237									12164			16164		16888.0			22164					
12664.5 12564.6 16166 1977.1.0 16889.0 22166 22367.0 12665.5 12566.0 16167 1677.0 16889.0 22167 22367.0 12665.5 12566.0 16167 1677.0 16890.5 22169 22368.5 12566.6 12566.0 1617.2 1672.0 16891.0 22170 22389.0 12566.1 12566.0 1617.3 16892.0 22170 22389.0 12667.2 12567.5 1617.2 1677.4 16892.0 22172 22370.0 12667.2 12567.6 1617.7 1678.0 16893.0 22173 22370.0 12668.0 12568.0 1617.7 16776.0 16893.0 22174 22370.0 12679.1 1677.6 16893.0 22174 22370.0 22174 22370.0 12670.1 1677.6 16894.5 22174 22370.0 22174 22373.0 12670.1 1677.6 16894.5 22174 22374.0 22174 2237	12664.5 12564.5 16166 16771.0 16889.0 22166 22367.0 12665.5 12565.0 16167 16772.0 16890.0 22167 22367.5 12665.0 12566.0 16168 16772.0 16890.0 22167 22368.5 12665.0 12566.0 16168 16772.0 16891.0 22167 22368.5 12667.0 12567.0 12677.0 16892.0 2217 22368.5 12667.0 12567.0 1677.1 1673.4 16892.5 2217 22370.0 12667.0 12567.0 1677.4 16892.6 2217 22370.0 2277.1 12667.0 12569.0 1617.4 1677.6 16893.0 2217 22370.5 12669.0 12569.0 1617.6 1678.6 16894.0 2217 22371.5 12669.0 12569.0 1617.6 1678.6 16894.0 2217 22377.5 12670.0 12570.0 1617.8 1677.6 16894.5 2217 22377.5									12165			16165		16888.5			2216E					
1266.5. 1256.5. 166.6. 1677.1.5. 16890.5. 2216. 2216. 2236.5. 1266.5. 12566.0. 1616.8. 1677.2. 16890.5. 2216.8. 2216.8. 22368.5. 12566.0. 12566.0. 1617.0. 1677.3. 16891.5. 2216. 22368.5. 12567.0. 12567.0. 1617.1. 1677.3. 16891.5. 2217.0. 22368.5. 12667.2. 12567.0. 1617.1. 1677.4. 16891.5. 2217.7. 22368.5. 12667.2. 12567.0. 1617.8. 16891.5. 2217.7. 22368.5. 1268.9. 1256.0. 1617.8. 16892.5. 2217.7. 22368.5. 1268.9. 1256.0. 1617.8. 1678.5. 16894.5. 2217.7. 2237.5. 1268.9. 1257.0. 1617.8. 1678.5. 16894.5. 2217.8. 2217.7. 2237.5. 1267.0. 1617.8. 1678.6. 16894.5. 2217.8. 2217.8. 2237.5. 2217.7. 2237.5. 2217.8.	12665.0 12565.0 1660.0 1677.1 1689.0 2216 2236.5 12665.5 16166 1677.2 16890.0 2216 22368.0 12566.6 12566.5 16170 1677.2 16891.0 2216 22368.0 12566.6 12566.5 16170 1677.5 16891.0 22170 22368.0 12567.0 12567.0 1617.1 1677.4 16891.5 22171 22368.5 12568.0 1617.2 1687.4 16882.5 22173 22368.5 12569.0 12569.0 1617.5 16893.5 22173 22370.5 12569.1 1617.6 1677.6 16894.5 22173 22370.5 12569.2 1617.6 1677.6 16894.5 22173 22371.5 12570.0 1677.7 16895.5 22176 22373.5 12571.1 1677.6 16894.5 22179 22373.5 1257.1 1257.1 1677.8 16896.5 22179 22373.5 <td< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>12166</td><td>÷</td><td>÷</td><td>16166</td><td>i.</td><td>0 0888</td><td>_</td><td></td><td>22166</td><td>-</td><td>÷</td><td></td><td></td><td></td></td<>									12166	÷	÷	16166	i.	0 0888	_		22166	-	÷			
12665.0 12565.0 1617.0 16889.5 2216 2236.5 12665.1 12565.0 1616.0 1677.2 16880.5 2216 2216 22368.5 1266.0 12566.0 1616.0 1677.2 16890.5 2216 22369.0 1266.0 1256.0 1617.0 1677.3 16891.0 2217 22369.0 1266.1 1256.0 1256.0 1617.2 1677.3 16892.0 2217 22370.0 1266.2 1256.0 1677.2 16892.0 2217 22370.0 2277 22370.0 1266.3 1256.0 1617.2 1677.6 16893.0 2217 22370.0 2277 22370.0 2277 22370.0 2277 22370.0 2277 22370.0 2277 2277 2277 22370.0 2277 2277 2277 2277 2277 2277 2277 2277 2277 2277 2277 2277 2277 2277 2277 2278 2277 2278 2277	12665.0 12565.0 16167 161893.5 16265.0 16167 1617.0 16883.5 22169 22368.5 12665.1 12566.0 16160 1677.2 16890.5 22169 22368.5 12666.0 12566.0 1617.0 16773.5 16890.5 22170 22368.5 12667.0 12567.0 12677.0 16892.0 22172 22370.0 12667.0 12567.0 1617.4 1677.4 16892.5 22172 22370.0 12667.0 12568.0 1617.4 1677.6 16892.6 22172 22370.5 12669.0 12569.0 1617.6 16894.5 22173 22371.5 12669.0 12569.0 1617.6 16894.5 22176 22371.5 12670.0 12570.1 1617.8 1677.6 16894.5 22178 22371.5 12670.1 12671.0 16189.6 16896.5 22183 22374.5 12671.1 12671.0 16898.0 22183 22374.5 12									00121			0000		0.000			22100		0.70022			
1266.5. 1256.5. 16168 1677.2. 16890.0 22168 22368.0 1256.6. 1256.0. 1616.0 1677.5. 16891.0 2216.0 22368.0 1256.6. 1677.0. 16891.0 6891.0 2210.0 22368.0 1256.0. 12567.0 1677.1 16891.5 2217.0 22369.0 1256.0. 1677.1 1677.4 16891.5 2217.0 22369.0 1256.0. 1677.1 1677.5 16892.0 2217.1 22370.0 1256.0. 1678.0 16894.0 2217.2 22371.0 2217.7 22371.0 1256.0. 1677.0 16894.0 2217.0 2217.7 22371.5 1257.0. 1677.0 16894.0 2217.0 2217.7 22372.5 1257.1. 1677.0 16894.0 2217.0 2217.7 22372.5 1257.1. 1677.0 16894.0 2217.0 2217.0 22372.5 1257.1. 1677.0 16894.0 2217.0 2217.0 <t< td=""><td>12566.5 15565.5 16168 1677.2 16890 22168 22368 12566.6 12566.5 16170 1677.3 16891.0 22169 22169 22388.0 12566.6 12566.5 16170 1677.3 16891.5 22170 22389.0 12567.0 12567.0 1617.1 1677.4 16892.0 22173 22370 12568.0 1617.2 1677.4 16892.0 22373 22173 22380.5 12569.0 12569.0 1677.6 16894.5 22173 22370.5 22173 22370.5 12569.1 1677.0 16884.5 22176 22370.5 22173 22372.0 12570.0 12570.0 1617.8 16776.1 16884.5 22179 22372.0 12571.0 1677.0 16885.0 22179 22179 22372.0 1257.1 1677.1 16886.5 22179 22373.5 22179 1257.2 1677.1 16886.5 22179 22373.5 22179</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>/017</td><td></td><td></td><td>/0101</td><td></td><td>0.6000</td><td></td><td></td><td>70177</td><td></td><td>6.10622</td><td></td><td></td><td></td></t<>	12566.5 15565.5 16168 1677.2 16890 22168 22368 12566.6 12566.5 16170 1677.3 16891.0 22169 22169 22388.0 12566.6 12566.5 16170 1677.3 16891.5 22170 22389.0 12567.0 12567.0 1617.1 1677.4 16892.0 22173 22370 12568.0 1617.2 1677.4 16892.0 22373 22173 22380.5 12569.0 12569.0 1677.6 16894.5 22173 22370.5 22173 22370.5 12569.1 1677.0 16884.5 22176 22370.5 22173 22372.0 12570.0 12570.0 1617.8 16776.1 16884.5 22179 22372.0 12571.0 1677.0 16885.0 22179 22179 22372.0 1257.1 1677.1 16886.5 22179 22373.5 22179 1257.2 1677.1 16886.5 22179 22373.5 22179									/017			/0101		0.6000			70177		6.10622			
1.2566.6. 1.2566.0. 1670.5. 16890.5. 22169. 222169. 22388.5. 1.2566.5. 1.2566.5. 16170. 16773.5. 16891.0. 22170. 22398.0. 1.2567.5. 1.2567.5. 16177. 16773.5. 16892.0. 22172. 22370.0. 1.2568.0. 1.2568.0. 1617.2. 16775.0. 16892.0. 22172. 22370.0. 1.2568.0. 1.2568.0. 1617.2. 16775.0. 16893.0. 22173. 22370.0. 1.2569.0. 1.2570.0. 1617.7. 16776.5. 16894.0. 22174. 22371.2. 1.2570.0. 1617.7. 16776.5. 16894.0. 22177. 22375.0. 1.2571.0. 12570.0. 1617.7. 16776.5. 16896.0. 22177. 22373.0. 1.2571.2. 16180. 16777.6. 16896.0. 22180. 22180. 22374.0. 1.2571.2. 16180. 16778.0. 16896.0. 22180. 22180. 22374.0. 1.2571.2. 16181. 16779.0. <td>12566.5 16766.0 1677.5 16890.5 22169 22368.5 12566.5 1677.0 1677.3 16891.0 22170 22399.0 12566.5 1677.1 1677.3 1673.5 16892.0 22172 22370.0 12567.0 12567.0 1677.4 16892.0 22172 22370.0 12568.0 1677.4 16892.0 22173 22370.0 12568.0 1677.6 16893.0 22174 22370.0 12569.0 1677.6 16893.0 22174 22371.5 12569.1 1677.6 16895.0 22174 22371.5 12570.2 1677.6 16895.0 22176 22371.5 12571.0 1677.0 16895.0 22178 22373.0 1257.1 1677.0 16896.5 2218 22374.5 1257.1 1678.1 16896.5 2218 22374.5 1257.2 1678.1 16896.5 2218 22374.5 1257.2 1678.1 16896.5 2</td> <td></td> <td>16168</td> <td></td> <td>0.06891</td> <td></td> <td></td> <td>22168</td> <td></td> <td>22368.0</td> <td></td> <td></td> <td></td>	12566.5 16766.0 1677.5 16890.5 22169 22368.5 12566.5 1677.0 1677.3 16891.0 22170 22399.0 12566.5 1677.1 1677.3 1673.5 16892.0 22172 22370.0 12567.0 12567.0 1677.4 16892.0 22172 22370.0 12568.0 1677.4 16892.0 22173 22370.0 12568.0 1677.6 16893.0 22174 22370.0 12569.0 1677.6 16893.0 22174 22371.5 12569.1 1677.6 16895.0 22174 22371.5 12570.2 1677.6 16895.0 22176 22371.5 12571.0 1677.0 16895.0 22178 22373.0 1257.1 1677.0 16896.5 2218 22374.5 1257.1 1678.1 16896.5 2218 22374.5 1257.2 1678.1 16896.5 2218 22374.5 1257.2 1678.1 16896.5 2												16168		0.06891			22168		22368.0			
12566.5 16170 16773.0 16891.0 22170 22389.0 12567.0 12567.0 1617.3 16891.5 22170 22389.5 12568.0 1657.1 1677.3 16891.5 22173 22389.5 12568.0 1678.6 1677.6 16892.0 22173 22370.5 12568.0 1677.6 1683.0 22173 22370.5 12569.0 12569.0 1677.6 16894.5 22173 22370.5 12569.2 1677.0 1677.6 16894.5 22176 22371.0 12570.0 1677.0 1677.6 16894.5 22176 22372.5 12570.1 1677.0 1677.6 16894.5 22176 22372.5 12571.0 1677.0 1677.6 16896.5 22176 22372.5 1257.1 1677.0 16897.6 22179 22179 22373.5 1257.2 1677.0 16897.6 2218 22374.6 2218 1257.2 1618 1678.0 16	12566.5 16170 16773.0 16891.0 22170 22389.0 12567.0 12567.0 1677.4 16891.5 22170 22389.5 12667.2 12568.0 1617.4 1677.4 16892.5 22173 22370.5 12568.0 12568.0 1617.8 1677.6 16892.5 22173 22370.5 12569.0 12568.0 1617.8 1677.8 16894.5 22173 22370.5 12569.0 12569.0 1677.6 16894.5 22176 22370.5 12570.0 12570.0 1617.8 1677.6 16894.5 22178 22372.0 12570.1 12570.0 1617.9 1677.6 16896.0 22179 22179 22372.0 12570.1 12570.1 1617.9 16896.0 22170 22179 22372.0 12571.2 1257.1 1617.9 16896.0 22179 22179 22374.0 1257.1 1257.2 1618.1 1677.8 16896.0 22179 22179 22374.0 </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>16169</td> <td></td> <td>16890.5</td> <td></td> <td></td> <td>22169</td> <td></td> <td>22368.5</td> <td></td> <td></td> <td></td>												16169		16890.5			22169		22368.5			
12667.0 12567.0 16567.0 1677.1 1673.5 16891.5 22177 22366.5 12668.6 12668.0 1268.6 1617.4 16892.0 2217.4 22370.0 12568.6 1677.6 16893.5 2217.4 22370.0 12568.6 1617.6 16894.0 2217.4 22371.5 12569.0 1617.6 16894.0 2217.7 22371.5 12570.0 1677.6 16894.0 2217.7 22372.0 12570.1 1257.1 1617.8 1677.6 16896.0 22177 22372.5 1257.1. 1257.1 1618.0 1677.6 16896.0 22177 22372.5 1257.1. 1257.1 1618.0 1677.6 16896.0 22178 22373.0 1257.1. 1618.1 1677.6 16896.0 2218 22177 22374.6 1257.1. 1618.1 1677.9 16896.0 2218 22374.6 2218 1257.1. 1618.1 1677.9 16896.0 2218	12667.0 12567.0 1657.1 1677.3 16891.5 22171 22366.5 12667.0 12567.0 1617.2 1677.4 16892.0 22173 22370.0 12668.0 12568.0 1617.2 1677.6 16893.0 22174 22370.0 12568.0 12569.0 1617.6 1677.6 16893.0 22174 22371.0 12569.0 12570.1 1617.7 1676.2 16894.5 22176 22371.5 12570.1 12570.1 1617.7 1678.6 16894.5 22176 22371.5 12571.6 1627.0 1677.6 16895.0 22176 22373.0 1257.1.5 1617.7 1678.6 16896.5 2218 22178 1257.1.6 1677.8 16896.5 2218 22374.5 1257.1.5 1678.1 1678.6 16896.5 2218 22374.5 1257.1.6 1678.1 16896.5 2218 22374.5 2218 1257.2.1 1257.1 1618.4 16780.5												16170		16891 0			22170		_			
1266.5 1256.7 1677.4 1689.5 2217.7 2237.0 1266.8 167.8 1677.4 16892.5 2217.3 2237.0 1266.8. 167.8 1677.4 16892.5 2217.3 2237.0 1266.9. 12568.0 1617.4 1677.6 16893.0 2217.4 2237.0 1266.9. 12569.0 1677.6 16894.5 2217.6 2237.2 1267.0 1677.6 16894.5 2217.6 2237.2 1267.0 1677.7 1678.6 16894.5 2217.6 2237.2 1267.1 1677.6 16895.6 2217.6 2237.2 2217.7 2237.2 1267.2 1467.7 1677.6 16895.6 2218.2 2218.2 2237.5 1267.2 1467.7 1677.8 16896.5 2218.2 2218.2 2237.5 1267.2 1468.7 1677.8 16896.5 2218.2 2237.6 2218.2 1267.2 1468.7 1678.6 16897.6 16897.6 <td< td=""><td>1266.5 1257.5 1677.4 1689.5 2217.7 2237.0 1266.8 1256.5 1617.3 1677.4 16892.5 2217.3 22370.5 1266.8 1256.6 1617.3 1677.4 16892.5 2217.4 22370.5 1266.9 1256.0 1617.5 1677.6 16893.0 2217.4 2237.0 1266.9 1256.0 1617.6 1677.6 16894.5 2217.6 2237.2 1257.0 1257.0 1617.7 16894.5 2217.6 2237.2 1257.0 1257.1 1617.8 1677.0 16895.0 2217.8 2237.2 1257.1 1677.1 16895.0 2217.8 2237.5 2237.5 1257.2 1677.1 16895.0 2218 2237.5 1257.2 1618.1 1677.8 16896.0 2217.8 2237.5 1257.3 1677.8 16896.5 2218 2237.5 2218 1257.3 1618.3 1677.8 16896.5 2218 2237.5<td>Ī</td><td>-</td><td></td><td></td><td></td><td></td><td></td><td>1</td><td>1</td><td>:_</td><td>÷</td><td>7077</td><td>-</td><td>2000</td><td></td><td>-</td><td>1,000</td><td>1</td><td>÷</td><td></td><td></td><td></td></td></td<>	1266.5 1257.5 1677.4 1689.5 2217.7 2237.0 1266.8 1256.5 1617.3 1677.4 16892.5 2217.3 22370.5 1266.8 1256.6 1617.3 1677.4 16892.5 2217.4 22370.5 1266.9 1256.0 1617.5 1677.6 16893.0 2217.4 2237.0 1266.9 1256.0 1617.6 1677.6 16894.5 2217.6 2237.2 1257.0 1257.0 1617.7 16894.5 2217.6 2237.2 1257.0 1257.1 1617.8 1677.0 16895.0 2217.8 2237.2 1257.1 1677.1 16895.0 2217.8 2237.5 2237.5 1257.2 1677.1 16895.0 2218 2237.5 1257.2 1618.1 1677.8 16896.0 2217.8 2237.5 1257.3 1677.8 16896.5 2218 2237.5 2218 1257.3 1618.3 1677.8 16896.5 2218 2237.5 <td>Ī</td> <td>-</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>1</td> <td>1</td> <td>:_</td> <td>÷</td> <td>7077</td> <td>-</td> <td>2000</td> <td></td> <td>-</td> <td>1,000</td> <td>1</td> <td>÷</td> <td></td> <td></td> <td></td>	Ī	-						1	1	:_	÷	7077	-	2000		-	1,000	1	÷			
12667.5 1674.5 1674.4 16892.0 22172 22370.2 12668.5 12568.0 1677.4 16892.0 22173 22370.2 12668.0 12568.0 1617.4 1677.6 16893.5 22174 22371.5 12669.5 12569.5 1617.6 16893.6 22176 22372.5 12670.0 12570.0 1617.7 16894.0 22177 22372.5 12670.1 12570.1 1677.6 16894.0 22177 22372.5 12570.1 12571.5 1617.7 16896.0 22177 22372.5 12571.5 1627.1 1677.8 16896.0 22180 22374.0 1257.1.5 1678.1 1677.8 16896.0 22180 22374.0 1257.1.5 1678.1 1677.9 16896.0 22181 22374.5 1257.1.5 1618.2 1677.9 16896.0 22181 22374.5 1257.1.5 1618.2 1678.0 16898.0 22181 22374.5 1257.2.5<	12667.5 16726.7 16774.5 16882.0 22172 22370.2 12668.5 12568.0 1617.4 1673.6 16893.5 22174 22370.2 12568.0 1677.6 16833.5 22174 22371.5 12569.0 1677.6 16834.5 22174 22371.5 12570.0 12570.0 1617.7 16894.5 22176 22372.5 12570.1 12570.1 1617.8 1677.5 16894.5 22177 22372.5 12570.2 12570.5 1617.9 1677.6 16896.5 22178 22178 22373.0 12571.6 1618.0 1677.9 16896.5 2218 22374.5 12571.5 12571.5 1618.1 1677.9 16896.5 22180 22374.5 12572.1 12672.1 1618.8 1677.9 16896.5 22180 22374.5 12573.0 12672.1 1618.8 1677.0 16896.5 22180 22374.5 12573.1 1618.8 1677.0 16899.0<												1/191		0.1900			777		_			
1268.0 12588.0 1677.4 1677.45 16892.5 22173 22370.5 1268.0 1678.0 1617.3 1677.45 16892.5 22174 22371.5 1256.0 1256.0 1617.6 1677.6 16894.0 22176 22371.5 1256.0 1677.0 16894.5 22176 22372.0 2277.7 22372.0 1257.0 1257.0 1617.8 1677.0 16895.0 22177 22372.5 1257.0 1257.0 1617.9 1677.5 16895.0 22179 22779 1257.2 1257.0 1618.1 1677.8 16895.0 22180 22181 22373.5 1257.2 1461.0 1677.8 16896.0 22182 22779 22779 1257.2 1461.0 1677.8 16896.0 22183 22775 22775 1257.4 1618.8 1678.0 16890.0 22183 22375.5 22183 22375.5 1257.4 1618.8 1678.1 16890.0 221	12688.0 12588.0 1617.3 1677.6 16892.5 22173 22370.5 12688.0 1677.6 16876.0 1683.6 22176 22371.5 12689.0 12569.0 1617.6 16894.0 22176 22371.5 12570.0 12570.5 1617.6 16894.5 22176 22372.1 12570.5 1677.6 16896.5 22178 22373.0 12570.5 1677.6 16896.0 22178 22373.0 12571.0 1689.1 1677.6 16896.0 22178 22373.5 12572.1 1678.1 1678.6 16896.0 2218 22373.5 12572.2 1678.1 16896.0 2218 22373.5 12572.0 1678.1 16896.0 2218 22375.5 12572.1 1618.4 1678.0 16886.5 2218 22375.5 12572.2 1618.4 1678.0 16886.5 2218 22375.5 12573.5 1618.4 1678.1 16886.5 2218 <									12172			16172		16892.0			22172		22370.0			
1268.6 1268.6 1677.6 16893.0 2277.4 2277.4 2277.4 2277.5	12668.5 1617.4 1677.5 16893.0 22717 22371.5 12669.0 12569.0 1617.6 16893.5 22375 22375 12669.0 1617.6 1678.0 16894.0 22176 22372.5 12570.0 1617.7 1676.0 16894.0 22177 22372.5 12570.1 12571.5 1617.6 16896.0 22178 22373.0 12571.5 1618.0 1677.6 16896.0 22178 22373.0 12571.5 1618.0 1677.0 16896.0 22180 22374.0 12571.5 1618.0 1677.0 16896.0 22718 22374.0 12571.6 1618.0 1677.0 16896.0 22180 22374.0 12573.0 1677.1 16896.0 22180 22374.0 12574.5 1618.0 16780.0 16898.0 22183 22374.5 12574.5 1618.0 16780.0 16898.0 22183 22374.5 12574.5 1618.0 16780.1									12173			16173		16892.5			22173		22370.5			
125699.0 16775.6 16975.6 16894.0 22775 22371.5 12569.1 15769.5 16776.0 16894.0 22176 22372.0 12570.0 12570.5 16776.0 16894.5 22178 22372.0 12570.2 12570.5 16178 16777.0 16895.0 22178 22373.0 12571.0 12571.0 16179 16777.0 16895.0 22178 22373.0 12571.0 12571.0 16179 16776.0 16896.0 22189 22374.0 12571.2 12571.5 16781 16778.5 16896.5 22189 22374.0 12572.1 12572.5 16181 16779.0 16897.0 22183 22375.0 12573.1 12573.6 16181 16780.0 16898.0 22183 22375.0 12574.0 16188 16780.0 16898.0 22183 22375.5 12375.6 12575.1 1618 16781.5 16890.0 16900.0 16900.0 12376.0 16900.0	125689.0 16775.6 16973.5 16893.6 22775 222775 222775 222775 222775 222775 222775 222775 222776 222776 222777 222777 222772 222777 222777 222772 222777 222772 222773 222774 222773 222773 222773 222									12174			16174		16893.0			22174		22371.0			
12569.5 12569.5 1678.6 16894.0 22176 22372.5 12570.0 15770.0 1677.6 16894.5 22177 22372.5 12570.0 12570.0 16179 1677.5 16895.0 22179 22373.0 12571.0 12571.0 16179 1677.5 16895.0 22179 22373.0 12572.1 12571.0 16179 1678.0 16896.0 22180 22374.0 12572.1 12572.0 1618 16776.1 16897.0 22180 22374.0 12573.1 12573.0 16887.0 16897.0 22182 22375.5 12573.0 1618.1 16780.1 16890.0 22183 22375.5 12574.0 1618.6 16781.0 16899.0 22183 22375.5 12575.5 1618.6 16781.0 16890.0 22183 22375.5 12575.5 1618.6 16781.0 16900.0 16900.0 16900.0 12577.0 12576.0 16190.0 16783.0 16	12669.5 12570.0 16776.0 16894.0 22176 22372.5 12570.0 12570.0 16177 1676.5 16894.5 22177 22372.5 12570.0 12570.0 16179 16775.5 16896.0 22179 22373.0 12571.1 12571.5 16179 16776.6 16896.0 22180 22374.0 12571.5 12571.5 16180 16778.0 16896.0 22180 22374.0 12572.5 12572.5 16781.0 16780.0 16896.0 22181 22374.0 12573.1 12573.0 16183 16779.0 16896.0 22183 22374.0 12573.1 12574.5 16180 16779.0 16896.0 22183 22374.5 12574.5 16180 16780.0 16899.0 16899.0 22183 22374.5 12574.5 1618 1678.1 16899.0 16899.0 22183 22375.5 12574.5 1618 1678.1 16900.0 16900.0 16900.0 1									12175			16175		6893 5			22175		22371 5			
12570.5 12570.5 16770.5 16895.5 22178 22373.5 12570.6 12570.5 16178 16770.5 16895.5 22178 22373.5 12570.6 12570.5 16178 16778.6 16895.5 22178 22373.5 12571.2 12571.5 1681.6 16778.6 16895.6 22179 22373.5 12572.0 12572.6 16181 16778.6 16896.5 22180 22374.5 12572.0 12572.6 16181 16778.5 16896.5 22180 22374.5 12572.0 12572.6 16182 16779.5 16896.5 22183 22375.5 12573.5 12672.6 16184 16780.0 16898.5 22183 22375.5 12573.5 12674.5 16186 16780.0 16899.6 22183 22375.5 12574.5 16188 16780.0 16899.6 16900.5 16900.5 12576.6 16900.5 12576.0 16199 16783.6 16900.5 16900.5	12570.5 12570.5 1677.0 16895.0 22177 2237.5 12570.5 12570.5 1677.0 16895.0 22178 2237.5 12571.0 12571.5 1678.0 1677.6 16895.5 22178 2237.5 12571.5 12571.5 1678.0 16778.6 16896.5 22179 22373.5 12572.5 12572.5 1678.1 16896.5 22180 22374.5 12572.5 12572.5 1678.5 16896.5 22374.5 22183 22374.5 12573.0 12573.0 1678.5 16896.5 22183 22375.5 12574.0 1618.6 1679.5 16896.5 22183 22375.5 12574.0 1618.6 1679.5 16898.5 22183 22375.5 12574.0 1618.6 1679.5 16899.6 22183 22375.5 12575.5 1618.6 16780.5 16990.5 16900.5 16900.5 12576.5 1618.6 16782.5 16900.5 16784.6 169									10110	÷	÷	46476	÷	0.000			000	1	0000			
1257.0.5 1257.0.5 1617.6 1617.6.5 16894.5 22177 22373.5 1257.0.5 1257.0.5 1617.6 1617.6 16896.5 22178 22373.5 1257.1.0 1617.9 1677.5 16896.5 22178 22373.5 1257.2.0 1257.2.0 1618.0 16778.6 16896.5 22178 22374.5 1257.2.0 1257.2.0 1677.8 16896.5 22180 22376.5 1257.2.0 1257.2.0 1677.8 16897.6 22181 22375.5 1257.2.0 1257.4 1618.8 16780.0 16898.6 22182 22375.5 1257.4.0 1618.8 16780.0 16898.6 22183 22375.5 1257.4.0 1618.8 16780.1 16899.0 22183 22375.5 1257.5.5 1618.8 16781.5 16900.5 22183 22375.5 1257.5.5 1618.8 16782.0 16900.0 12577.0 16191 16785.0 1257.7.0 16291.0 16902.0	1257/10 167/15 16894.5 2217 2237.2 1257/10 167/10 1617 167/15 16895.0 22178 2237.3 1257/10 1257/10 16179 1677.5 16895.0 22179 22373.0 1257/10 1257/10 16180 16778.0 16896.0 22180 22374.0 1257/20 16180 16778.0 16896.0 22180 22374.0 22374.0 1257/20 16180 16778.0 16897.0 22180 22374.0 22374.0 1257/30 1678 16780.5 16898.0 22183 22375.5 1257/40 1678 16780.5 16899.0 22183 22375.5 1257/40 1678 16780.5 16899.0 22183 22375.5 1257/40 1678 16780.5 16899.0 22183 22375.5 1257/40 1678 16780.0 16900.0 16780.0 16900.0 1257/50 1618 16782.0 16900.0 1690.0												0/10/		0.450			22172		_			
12570.5 16770.5 16895.0 22178 22373.0 12571.6 16770.5 16895.0 22178 22373.0 12571.0 12571.5 16180 16775.1 16895.5 22178 22373.0 12572.1 12572.0 16181 16779.0 16895.5 22180 22374.5 12573.0 12573.0 16181 16779.0 16895.0 223181 22374.5 12573.0 12573.0 16183 16779.0 16895.0 22183 22375.5 12573.1 12574.5 16184 16780.5 16898.5 22183 22375.5 12574.5 1628.6 16781.0 16899.5 22183 22375.5 12574.5 16376.0 16890.0 6899.5 22183 22375.5 12575.5 16781.0 16890.0 6890.0 6890.0 6890.0 6890.0 12575.0 16189 16782.5 16900.6 16780.0 6800.0 6890.0 12577.0 16890.0 16780.0 1	1257.0.5 1677.0 16895.0 22178 22373.0 1257.1.0 1557.1 16178 16777.0 16895.5 22178 22373.0 1257.1.0 1257.1.0 1678.1 16896.5 22178 22373.5 1257.2.0 1257.2.0 1678.1 1678.6 16896.5 22181 22374.5 1257.2.0 1257.2.0 1618.1 16778.5 16896.5 22181 22374.5 1257.3.0 1257.2.0 1618.3 16779.5 16898.0 22182 22375.5 1257.4.0 1257.4.0 1618.4 16780.5 16898.0 22183 22375.5 1257.4.0 1257.4.0 1618.6 16781.0 16899.0 22183 22375.5 1257.5.0 1618.6 1678.1 16899.0 16990.0 16900.0 16900.0 1257.5.5 1418.8 1678.2 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5												1/191		16894.5			77.77					
1257.10 1677.5 16886.5 22179 22374 1257.10 1677.1 1681.6 1677.6 16886.0 22180 22374.0 1257.20 1557.20 16181 16778.6 16896.0 22180 22374.0 1257.20 1557.2 16181 16778.6 16897.0 22182 22374.0 1257.2 1678.0 16897.0 16897.0 22182 22375.5 22182 22375.5 1257.4 1678.1 16896.0 16896.0 22182 22375.5 22182 22375.5 1257.4 1618.6 16781.0 16899.0 22182 22375.5 22183 22375.5 22375.5 1257.5 1618.6 16781.0 16899.0 16890.0 22183 22375.5 22183 22375.5 1257.5 1618.6 16781.0 16900.0 16900.0 16900.0 16900.0 16900.0 16900.0 16900.0 16900.0 17577.0 16191.0 16900.0 16900.0 16900.0 16900.0	1257.10 1677.5 16886.5 227.9 227.9 227.3 1257.10 1677.6 16886.0 1688.0 227.80 227.80 227.80 1257.20 1257.20 1678.1 1678.6 16886.5 227.80												16178		16895.0			22178					
1257.15 1257.15 1678.0 1678.0 16886.0 2278.0 2278.0 2277.0 1257.20 1677.15 1677.8 16886.5 16886.5 2278.0 2278.0 2278.1 1257.20 1257.20 16881 1677.9 16886.5 2278.5 2278.1 22374.5 2278.1 22374.5 2278.1 22374.5 2278.1 22374.5 2278	12571.5 12571.5 16180 16778.0 16896.0 22180 22740 12572.0 15572.0 16181 16778.5 16896.5 22181 22374.5 12572.0 15572.0 16183 16779.5 16896.5 22183 22374.5 12573.0 12573.0 16183 16779.5 16897.0 22183 22375.5 12574.0 12574.0 16184 16780.5 16896.5 22183 22375.5 12574.0 12574.0 16184 16780.5 16899.5 22183 22375.5 12574.0 12574.0 16184 16780.5 16890.0 22183 22375.5 12575.0 16189 16782.0 16900.0 16900.0 16900.0 16900.0 12576.0 16189 16782.0 16900.0 16900.0 16900.0 16900.0 12577.0 16190 16783.0 16900.0 16900.0 16900.0 16900.0 12577.0 16191 16784.0 16900.0 16900.0									12179			16179		16895.5			22179		22373.5			
12572.0 12572.0 1678.1 16778.5 16896.5 22181 22374.5 12572.5 12572.6 1678.2 16897.0 16897.0 22182 22375.5 12573.4 12573.6 1678.0 16897.5 22183 22375.5 12574.0 1678.0 1688.0 22183 22375.5 12574.0 1678.0 1688.0 22375.5 12574.0 1678.1 1689.0 6781.0 12575.0 1257.5 1618 6781.5 1690.0 1257.5 1257.5 1618 6782.0 1690.0 1257.6 1257.6 1619 6783.0 16901.0 1257.7 1257.6 1619 16783.5 16901.5 1257.7 1257.6 1619 16783.5 16901.5 1257.8 1686.0 16785.6 16785.6 1257.8 1689.0 16785.6 16785.6 1257.8 1689.0 16785.6 16785.6	12572.0 1572.1 1572.0 16778.5 16896.5 22181 22374.5 12572.0 12572.5 1682.1 16779.0 16897.0 22182 22375.0 12573.0 12573.6 16897.0 16897.0 22183 22375.5 12573.6 12574.0 16894.0 16896.0 22183 22375.5 12574.0 16814 16780.0 16896.0 22883.5 22375.5 12574.0 1618 16780.0 16899.0 22875.6 1688 12575.1 1618 16782.5 16900.0 16900.0 16900.0 12576.1 1619 16782.5 16901.0 16900.0 16900.0 12576.5 1619 16782.5 16901.0 16900.0 16900.0 12577.0 1619 16784.0 16902.0 16900.0 16900.0 12578.6 1619 16784.0 16902.0 16900.0 16900.0 12578.0 1619 16784.5 16902.5 16902.0 16902.0									10100			16100		0 9009			20100		0.0000			
12572.0 16781.0 16779.0 16895.5 22181 22374.5 12572.5 12572.5 16781.0 16897.0 22182 22375.5 12573.0 12573.0 1678.1 16779.0 16897.0 22183 22375.5 12573.0 12573.0 16818. 16780.6 16898.0 22183 22375.5 12574.0 12574.0 16918.6 16780.6 16899.5 22183 22375.5 12574.5 12574.5 1618 16781.0 16899.0 22183 22375.6 12574.5 12576.6 1618 16782.0 16900.0 1690.0	12572.0 1678.1 16779.0 16895.5 22181 22374.5 12572.5 12572.6 1618.1 16779.0 16897.0 22182 22375.0 12573.0 12573.0 1618.3 16779.5 16897.5 22183 22375.5 12573.0 12573.6 1618.4 16780.6 16880.5 22183 22375.5 12574.0 12574.0 1618.4 16780.5 16890.5 22183 22375.5 12574.5 12574.0 1618.4 16780.5 16890.5 22183 22375.5 12574.5 12576.0 1618.4 16780.5 16990.0 22183 22375.5 12576.0 1618.9 16782.1 16900.0 16900.0 16900.0 22183 22375.5 12576.0 1619.9 16782.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5 16900.5	1	-							0017	+	÷	0	÷	0000			77	-	22374.0			
12572.5 1678.5 1679.0 16897.0 22182 22375.0 12573.0 12573.5 1678.0 16897.5 22183 22375.5 12573.1 12573.6 16184 16780.0 16898.0 22183 22375.5 12574.0 12574.0 1618 16780.0 16898.0 22183 22375.5 12574.0 12574.0 1618 16781.5 16899.0 2690.0 22183 22375.5 12575.5 12576.5 1618 16781.5 16899.0 2690.0	1257.25 1678.05 1679.05 16897.0 22375.0 1257.36 12573.5 1687.6 16897.5 22183 22375.5 1257.35 12573.5 16184 16790.0 16896.5 22183 22375.5 1257.40 16184 16790.0 16896.0 22183 22375.5 1257.40 16187 16896.0 16896.0 22183 22375.5 1257.50 16787.6 16890.0 16890.0 16890.0 16890.0 1257.60 1618 16782.5 16900.0 16900.0 16900.0 1257.65 1619 16782.5 16901.0 16900.0 16900.0 1257.65 1619 16782.5 16900.5 16900.0 16900.0 1257.65 1619 16782.5 16900.5 16900.0 16900.0 1257.60 1619 16784.0 16902.0 16900.0 16900.0 1257.80 1619 16784.5 16902.5 16900.0 16900.0 1257.80 161												16181		16896.5			22181					
12573.0 12573.0 1673.6 1679.5 16897.5 22183 22375.5 12573.5 12573.6 1688.6 1688.6 1688.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.6 1688.6 1678.3 1690.6 1678.6 1690.6 1678.6 1690.6 1678.6 1690.6 1678.6 1690.6 1678.6 1690.6 1678.6 1690.6 1678.6 1690.6 1678.6 1690.6 1678.6<	12573.0 1673.0 1618.3 1679.9.5 16897.5 22183 22375.5 12573.6 12673.6 1618.4 16790.5 16895.0 22183 22375.5 12574.0 12574.5 1618.6 16780.5 16899.5 16899.5 16899.5 16899.6											_	16182		0.76891			22182					
12573.5 12573.5 16184 16780.0 16898.0 16898.1 12574.5 16184 16780.0 16898.5 16899.5 16	12573.5 12573.5 16184 16780.0 16898.0 12574.0 1626.1 16780.0 16898.5 12574.0 16781.0 16899.0 12575.0 12575.0 16188 16781.0 12576.1 16781.0 16899.0 12576.2 16787.5 16890.0 12576.3 16189 16782.5 12576.4 16190 16782.5 12576.5 16190 16782.5 12576.6 16190 16782.5 12576.1 16190 16784.0 12578.0 16191 16784.0 12578.0 16192 16785.0 12578.0 16193 16785.5 12578.0 16193 16785.5 16785.5 16785.5 16785.5									12183	12573.0		16183		16897.5			22183					
12574.0 12574.0 16185 16780.5 12574.5 16186 16780.5 12574.5 16186 16781.0 12575.0 12575.0 16187 16781.0 12576.0 12576.0 16191 16782.5 12576.5 16190 16783.5 12577.0 16191 16783.5 12577.5 12577.5 16191 16783.5 12577.5 12577.5 12577.5 12577.5 12578.	12574.0 12574.0 16188 16780.5 12574.5 16188 16780.5 12574.5 16188 16781.5 12575.0 16187 16781.5 12575.0 16189 16782.5 12575.0 16189 16782.5 12575.5 16189 16782.5 12577.5 12657.0 16192 16783.5 12577.5 12657.0 16193 16783.5 12578.5 12687.0 16193 16784.5 12578.5 12687.0 16194 16785.5 12578.5 12687.0 16194 16785.5 12578.5 12687.0 16194 16785.5 12578.5 12687.0 16194 16785.5 12578.5 12687.0 16194 16785.5 12578.5 12687.0 16194 16785.5 12578.5 12578.5 12587.0 16194 16785.5 12578.5									10101			16101		0 0000								
12574.5 (1985) (1981) (1981) (1981) (1981) (1981) (1981) (1981) (1981) (1981) (1982)	12574.5 (16186 16781.) 12575.0 12574.5 (16188 16781.0 12575.0 12575.0 (16188 16782.0 12576.0 12576.0 (16189 16782.0 12576.5 12576.5 (16189 16782.0 12576.5 12576.5 (16190 16782.0 12577.0 12577.0 (16191 16782.0 12578.0 12657.0 (16192 16784.5 12578.0 12657.0 (16193 16784.5 12578.0 11658.0 (16194 16785.0									10101			10101		0.0000								
125745, 125745, 16186 16781,0 125750, 12575,0 16187 16781,5 12576,0 12576,0 16189 16782,5 12576,0 12576,0 16191 16783,5 12577,0 12577,0 16191 16783,5 12577,5 12657,0 16191 16783,5 12578,5 12657,0 16191 16783,5 12578,5 12658,0 16194 16784,5	125745, 125745, 16186 16781,0 12575,0 12575,0 16187 16781,5 12576,0 12576,0 16189 16782,5 12576,5 12576,5 16190 16783,0 12577,5 12657,0 16192 16783,0 12578,0 12657,0 16192 16783,0 12578,0 12657,0 16192 16783,5 12578,0 12657,0 16192 16783,5 12578,0 12657,0 16192 16783,5	-					-			C817	-:	-	6 6	- :	08880	-							
12575.0 12575.0 16187 16781.5 12576.0 12576.0 16189 16782.0 12576.0 12577.0 16199 16783.5 12577.0 12577.0 16191 16783.5 12577.0 12677.0 16191 16783.5 12577.5 12657.0 16192 16784.0 12578.0 12657.5 16193 16784.5	12575.0 12575.0 16187 16781.5 12576.5 12576.5 16188 16782.0 12576.5 12576.5 16189 16782.0 12577.0 12577.0 16191 16783.0 12577.0 12677.0 16191 16783.0 12578.0 12667.0 16192 16784.5 12578.0 12667.0 16193 16784.5 12578.5 12668.0 16194 16785.0									12186			16186		0.66891								
12575.5 12575.5 16188 16782.5 12576.0 16189 16782.5 12576.5 16189 16783.5 12577.5 12577.0 16191 16783.5 12577.5 12657.0 16191 16783.5 12578.5 12658.0 16194 16784.5 12578.5 12658.0 16194 16784.5	12575.5 12575.5 16188 16782.0 12576.6 12576.6 16190 16783.0 12577.0 12577.0 16191 16783.0 12577.5 12657.0 16192 16783.0 12578.5 12657.5 16193 16784.5 12578.0 12657.5 16193 16784.5									12187			16187		16899.5								
12576.0 12576.0 16189 16782.5 12576.5 16190 16783.0 12577.5 16191 16783.5 12577.5 16191 16783.5 12577.5 16192 16784.0 12578.6 12658.0 16194 16785.0 16258.5 12658.0 16194 16785.0	12576.0 12576.0 16189 16782.5 12576.5 16189 16782.5 12577.0 16191 16783.0 12577.0 16191 16783.5 12578.0 12578.5 112578.0 16194 16194 16784.5 112578.5 16195 16784.5									12188			16188		0 00081								
125/6.0 125/6.0 16189 16/82.5 125/7.2 125/6.5 16190 16/783.0 125/7.5 1267.0 16191 16/783.5 125/7.5 1265.0 16192 16/784.0 125/78.5 12658.0 16194 16/784.5	12576.0 12576.0 16189 16783.0 12576.5 16190 16783.0 12577.0 12577.0 16191 16783.0 12578.0 12657.0 16192 16784.0 12578.0 12657.0 16193 16784.0 16194 16785.0 16194 16785.0 16194 16785.0 16194 16785.0 16196 16785.0 16785.0									00171			00101		0.0000								
12576.5 12576.5 16190 16783.0 12577.0 16191 16783.5 12577.0 16191 16784.0 12577.6 16193 16784.5 12578.5 12658.0 16194 16785.0	125765, 12576,5, 16190 16783.0 12577,0 12677,0 16191 16783.5 12577,6 12667,0 16192 16784,0 12578.0 12667,5 16193 16784,5 12578.5 12658.0 16194 16786,5									12189			16189		c:00691								
12577.0 12577.0 16191 16783.5 12577.5 12657.0 16192 16784.0 12578.0 12657.5 16193 16784.5 12578.5 12658.0 16194 16785.0	12577.0 12577.0 16191 16783.5 12577.5 12657.0 16192 16784.0 12578.0 12657.5 16193 16784.5 12578.5 12668.0 16194 16785.0									12190			16190		16901.0								
12577.5 12657.0 16192 16784.0 12578.0 12657.5 16193 16784.5 12658.0 16194 16785.0	12577.5 12657.0 16192 16784.0 12578.0 12657.5 16193 16784.5 12578.5 12658.0 16194 16785.0 16195 16785.5	Г								12191	_	_	16191	_	16901.5	_							
12578.5 12658.0 16194 16784.5	12578.5 12658.0 16194 16785.5												16102		0 0000								
12578.0 12657.5 16193 16784.5 12578.5 12658.0 16194 16785.0	12578.0 12657.5 16193 16784.5 12578.5 12658.0 16194 16785.0 16195 16785.5												76101		0305.0								
12578.5 12658.0 16194 16785.0	12578.5 12658.0 16194 16785.0 16195 16785.5														16902.5								
10000	16195 16785.5														16785 0								
_	C.C8/01														1000								

ITU Telex frequency table (4/4)

		X																																							T	٦
	BAND																																								+	$\frac{1}{2}$
	25/26 MHz BAND	ΥL																																								
	2	No.																																								
	٥	КX																																								
	22 MHz BAND	X																																								
	22	No.																																								1
		RX																				_																				1
	z BAND																																								+	1
	18/19 MHz BAND	TX																																							+	
4/4)		No.						_		_		_	10	_	10	_		_		_		_		_	10	_		_		_		_		_		_		_			0.5	
3LE (Q	ВX	16786.0	16786.5	16787.5	16788.0	16788.5	16789.0	16789.5	16790.0	16790.5	16791.0	16791.5	16792.0	16792.5	16793.0	16793.5	16794.0	16794.5	16795.0	16795.5	16796.0	16796.5	16797.0	16797.5	16798.0	16798.5	16799.0	16799.5		- 1		16801.5	16802.0		16803.0		16804.0	16804.5	16903.0	16904.0	10001
TU TELEX FREQUENCY TABLE (4/4)	16 MHz BAND	ΤX	16786.0	16786.5	16787.5	16788.0	16788.5	16789.0	16789.5	16790.0	16790.5	16791.0	16791.5	16792.0	16792.5	16793.0	16793.5	16794.0	16794.5	16795.0	16795.5	16796.0	16796.5	16797.0	16797.5	16798.0	16798.5	16799.0	16799.5	16800.0	16800.5	16801.0	16801.5	16802.0	16802.5	16803.0	16803.5	16804.0	16804.5	16805.0	16806.0	20000
NCY	16	No.	16196	16197	16199	16200	16201	16202	16203	16204	16205	9079	16207	16208	16209	16210	6211	16212	16213	16214	16215	6216	16217	16218	16219	16220	6221	16222	16223	16224	16225	16226	16227	16228	16229	16230	6231	16232	16233	16234	16236	02.20
GOVE		ВX				_	_		_	_	•	_	_	_	_	_		_	_	_	_	_	_	_		_	_	_	_	_	`		_	_	_	_	_				Ť	1
FRE	12 MHz BAND																																								+	$\frac{1}{2}$
ELEX	12 MH	XT																																								4
77		No.																																							+	$\frac{1}{2}$
_	QN QN	RX																																								
	8 MHz BAND	ΥL																																								
	8	No.																																							T	1
		КХ																																							T	1
	6 MHz BAND	ΤX																																							+	1
	6 MH																																								+	$\frac{1}{2}$
9		No.																																							+	$\frac{1}{2}$
Z	ND	RX																																							+	4
	4 MHz BAND	XΤ									_																															
L		No.																																								\int

Telex Abbreviations

Abbreviation	Meaning
ADV	Advise
ACK	Acknowledge
AGN	Again
BI (GS)	Good bye
BK ´	I cut off.
CFM	Confirm
COL	Collation
CRV	How do you receive?
DER	Out of order
DWN	Down
EEE	Error
FM	From
GA	Go ahead.
MNS	Minutes
MOM	Wait (Waiting)
MUTI	Mutilated
NA	Correspondence to this subscriber is not admitted.
NC NC	No circuits
NCH	Subscriber's number has been changed.
NP NP	The called party is not or no longer is a subscriber.
NR	Indicate your call number.
OCC	Subscriber is engaged.
OK	Agreed.
P (or 0)	Stop your transmission.
PLS (PSE)	Please
PPR	Paper
R (RCD)	Received
RAP	I will call you again.
RD	Read
RE	Referring to
RPT	Repeat
SRY	Sorry
SVP	Please
TAX TEST MSC	What is the charge?
TEST MSG	Please send a test message?
THRU TKS (TNX)	You are in communication with telex position Thanks
TLX	Telex
I LA	I GIGA

Digital Interface (IEC 61162-1)

1. I/O Sentences


Input sentences (IEC 61162-1)

RMA, RMC, GLL, GGA, ZDA

Input sentence description

GGA - Global positioning system(GPS) fix data


\$--GGA,hhmmss.ss,llll.lll,a,yyyyy,yyy,a,x,xx,x.x,x.x,M,x.x,M,x.x,xxxx*hh<CR><LF>

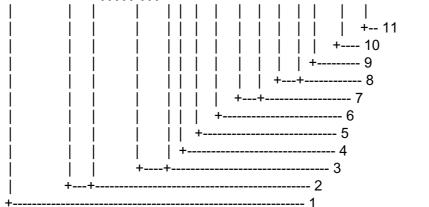

- 1. UTC of position
- 2. Latitude, N/S
- 3. Longitude, E/W
- 4. GPS quality indicator
- 5. Number of satllite in use,00-12, may be different from the number in view
- 6. Horizontal dilution of precision
- 7. Antenna altitude above/below mean sealevel, m
- 8. Geoidal separation, m
- 9. Age of differential GPS data
- 10. Differential reference station ID, 0000-1023
- 11. Checksum

GLL - Geographic position - latitude/longitude

\$--GLL,IIII.III,a,yyyyy,yyy,a,hhmmss.ss,A,a*hh<CR><LF>

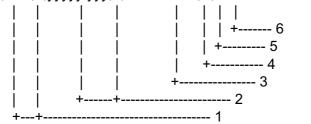

- 1. Latitude, N/S
- 2. Longitude, E/W
- 3. UTC of position
- 4. Status: A=data valid, V=data invalid
- 5. Mode indicator(see note)
- 6. Checksum

NOTE Positioning system Mode indicator:

A = Autonomous

D = Differential

E = Estimated (dead reckoning)

M = Manual input


S = Simulator

N = Data not valid

The Mode indicator field supplements the Status field. The Status field shall be set to V=invalid for all values of Operating Mode except for A=Autonomous and D=Differential. The positioning system Mode indicator and Status field shall not be null fields.

ZDA - Time and date


\$--ZDA,hhmmss.ss,xx,xx,xxxx,xxx*hh<CR><LF>

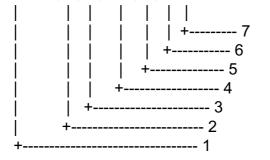

- 1. UTC
- 2. Day, 01 to 31(UTC)
- 3. Month, 01 to 12(UTC)
- 4. Year(UTC)
- 5. Local zone hours, 00h to +-13h
- 6. Local zone minutes, 00 to +59 as local hours
- 7. Checksum

RMA - Recommended minimum specific LORAN-C data

\$--RMA,A,IIII.III,a,yyyyy,yy,a,x.x,x.x,x.x,x.x,x.x,a,a*hh<CR><LF>

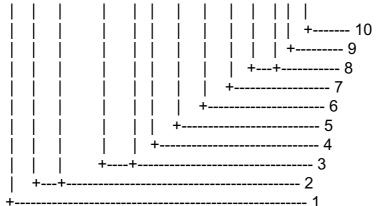

- 1. Status: A=data valid, V=blink, cycle or SNR warning
- 2. Latitude, degrees N/S
- 3. Longitude, degrees E/W
- 4. Time difference A, microseconds
- 5. Time difference B, microseconds
- 6. Speed over ground, knots
- 7. Course over ground, degrees true
- 8. Magnetic variation(see note 1),degree E/W
- 9. Mode indicator(see note 2)
- 10. Checksum

NOTE 1 - Easterly variation(E) subtracts from true course Westerly variation(W) adds to true course

NOTE 2 Positioning system Mode indicator:

A = Autonomous

D = Differential

E = Estimated (dead reckoning)

M = Manual input


S = Simulator

N = Data not valid

The Mode indicator field supplements the Status field. The Status field shall be set to V=invalid for all values of Operating Mode except for A=Autonomous and D=Differential. The positioning system Mode indicator and Status field shall not be null fields.

RMC - Recommended minimum specific GPS/TRANSIT data

\$--RMC, hhmmss.ss, A, IIII. III, a, yyyyy.yyy, a, x. x, x. x, xxxxxxx, x. x, a, a*hh < CR > < LF > 1.00 MeV = 1.00 MeV

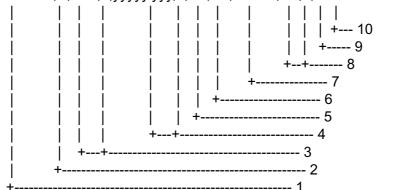

- 1. UTC of position fix
- 2. Status: A=data valid, V=navigation receiver warning
- 3. Latitude, N/S
- 4. Longitude, E/W
- 5. Speed over ground, knots
- 6. Course over ground, degrees true
- 7. Date: dd/mm/yy
- 8. Magnetic variation, degrees E/W
- 9. Mode indicator(see note)
- 10. Checksum

NOTE Positioning system Mode indicator:

A = Autonomous

D = Differential

E = Estimated (dead reckoning)


M = Manual input

S = Simulator

N = Data not valid

The Mode indicator field supplements the Status field. The Status field shall be set to V=invalid for all values of Operating Mode except for A=Autonomous and D=Differential. The positioning system Mode indicator and Status field shall not be null fields.

2. Schematic diagram

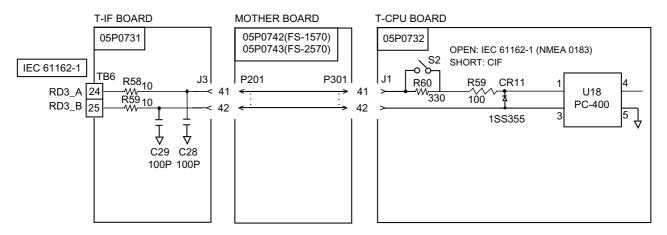

Load requirements as a listener

Isolation: Optocoupler

Input impedance: 450Ω Max. voltage: $\pm 15 \text{ V}$ Threshold: 4 mA

Parts List

This equipment contains complex modules in which fault diagnosis and repair down to component level are not practical (IMO A.694(17)/8.3.1). Only some discrete components are used. FURUNO Electric Co., Ltd. Believes identifying these components is of no value for shipboard maintenance; therefore, they are not listed in this manual. Major modules can be located on the parts location photos on pages AP-26 thru AP-28.

Control unit FS-1570/2570

FUR	UNO	Model	FS-1570/25	70	
		Unit			
			CONTROL	UNIT	
ELECTR	RICAL PARTS LIST				
		g-02 Blk.No.			
SYMBOL	TYPE		CODE No.	REMARKS	SHIPPABLE ASSEMBLY
	PRINTED CIRCUIT BOA	ARD			
B2	05P0728, PANEL		005-951-870		X
В3	05P0729, C-CPU		005-951-880		X
B4	05P0730, C-IF		005-951-890		X

Transceiver unit FS-1570T


FUR	UNO	Model	FS-1570T		
		Unit			
			TRANSCEI\	/ER UNIT	
ELECTR	ICAL PARTS LIST				
	Aug	-02 Blk.No.			
SYMBOL	TYPE	•	CODE No.	REMARKS	SHIPPABLE ASSEMBLY
	PRINTED CIRCUIT BOAI	RD			
B2	05P0731, T-IF		005-952-000		Х
B3	05P0732, T-CPU		005-952-010		X
B4	05P0733, TX-RX		005-952-030		X
B5	05P0734, W/R		005-952-060		X
B6	05P0735, PA		005-952-140		Χ
B7	05P0736, TX-FIL		005-952-100		X
B8	05P0737, SW-REG		005-952-110		X
B9	05P0742, M-B		005-951-980		X
B10	05P0746, PRESEL		005-952-040		X
B11	05P0747, REF OSC		005-952-050		X
B13, 14	05P0751, DSP		005-952-020		X
B17	05P0744, RELAY		005-952-070		X

Transceiver unit FS-2570T


FUR	UNO	Model	FS-2570T		
	-	Unit			
			TRANSCEIV	'ER UNIT	
ELECTR	RICAL PARTS LIST				
	Aug-02	Blk.No.			
SYMBOL	ТҮРЕ		CODE No.	REMARKS	SHIPPABLE ASSEMBLY
	PRINTED CIRCUIT BOARD				
B2	05P0731, T-IF		005-952-000		Х
B3	05P0732, T-CPU		005-952-010		X
B4	05P0733, TX-RX		005-952-030		X
B5, B18	05P0734, W/R		005-952-060		X
B6, B17	05P0739, PA		005-952-130		X
B7	05P0736, TX-FIL		005-952-100		X
B8	05P0737, SW-REG		005-952-110		X
B9	05P0743, M-B		005-951-990		X
B10	05P0746, PRESEL		005-952-040		X
B11	05P0747, REF OSC		005-952-050		X
B12	05P0744, RELAY		005-952-070		X
B13, 14	05P0751, DSP		005-952-020		X
B15	05P0738, DRV		005-952-212		X
B16	05P0740, COMB		005-952-150		X

Parts Location


Transceiver unit FS-2570T

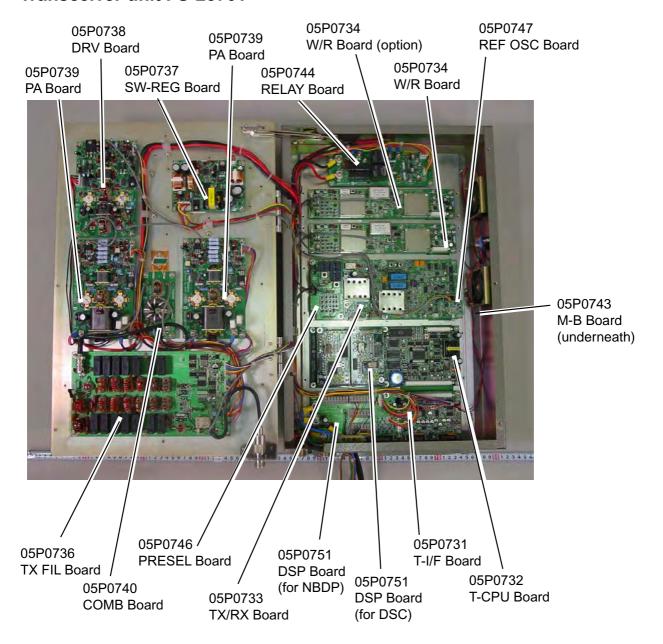


Transceiver unit FS-1570T

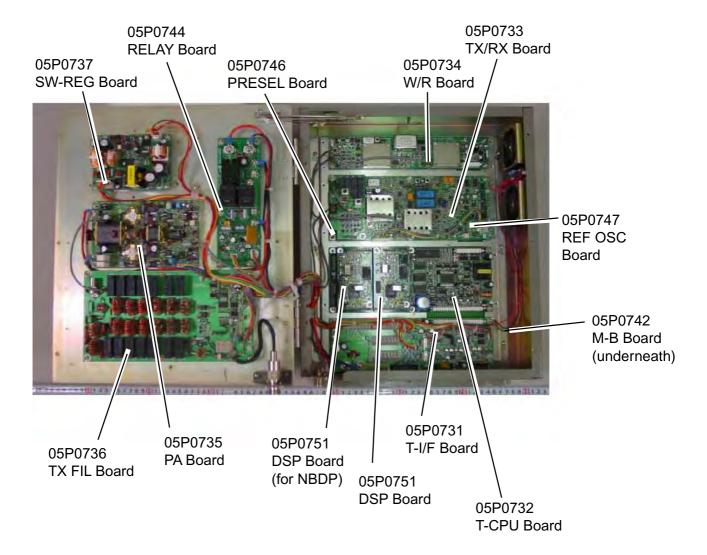


Control unit FS-2570C

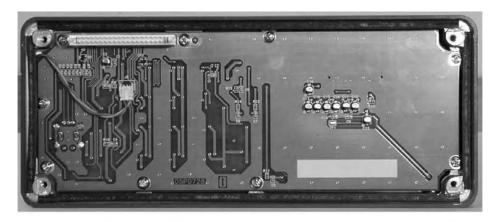

05P0728 PANEL Board

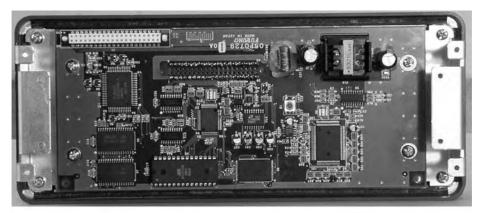

05P0729 CPU Board

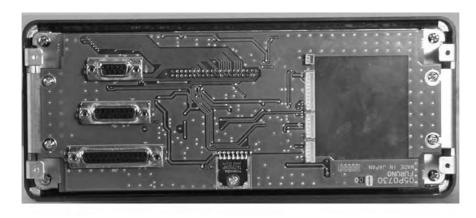

05P0730 C-I/F Board

INDEX

1	to coast station on HF band	4-9
1/ RT/2182 key1-3	DSC frequency table	AP-4
2	E	
2/DSC key1-1	Error messages	12-5
4	F	
4/Intcom key2-8	FILE/CURSOR key	6-9
•	Frequency selection	
5	G	
5/ ACK/SQ key1-5	Geographical area call	
6	receiving	5-22
6/SCAN key 1-3, 1-4	sending	
7	Group call	
7/ [□] key1-4	receiving	5-18
8	sending	5-15
8/PRINT key7-3	I	
9	IA	2-4, 2-5
9/ [®] key1-2	IC	-
	Individual call	
A	automatic acknowledge	5-10
All alsian and I	manual acknowledge	5-12
All ships call	sending	5-4
receiving5-3 sending5-1	Intercom	2-8
Antenna current2-4	L	
Auto ack menu7-2	Log file	
Auto freq change7-6	description	5-45
C	opening	5-45
Channel selection2-2	LOG/TUNE key	5-45
Contrast1-2	M	
Control description1-1	Medical transport call	
_	receiving	5-27
D Sollenters	sending	5-26
Daily test	Menu tree	AP-1
Dimmer1-2 Distress alert	N	
receiving on either VHF channel 70 or MF	NBDP Terminal Unit	
channel 2187.54-7	answerback code registration	9-1
receiving on HF band4-9	ARQ mode	11-3
sending4-1	communications buffer	11-10
Distress relay	edit menu [F2]	8-6
on behalf of other ship, to all ships4-16	FEC mode	
on behalf of other ship, to coast station 4-13	file creating	
receiving4-19	file deleting	
	file editing	10-5

INDEX

file menu [F1]8-6	Position entry (manual)1-5
file opening10-8	POWER switch1-2
file renaming10-9	Print out menu7-3
file saving10-3	PSTN call
file saving under new name10-9	charge information5-43
general test12-10	receiving5-42
ID code registration9-2	sending5-38
macrofiles11-10	R
manual calling11-1	RF2-5
menu overview8-4	
operate menu [F3]8-8	S
printing10-9	Scan freq menu7-4
receive mode11-5	Scan frequency setup7-5
scan channel group editing, deleting9-8	Scanning 1-4
scan channel group registration9-7	Send message files
scanning11-9	geographical area call6-6
station editing, deleting9-4	group call6-4
station menu [F5]8-10	individual call6-1
station registration9-3	printing6-10
system menu [F6]8-11	PSTN call6-7
terminal unit8-1	sending6-9
timer operation11-8	test call6-8
timer program editing, deleting9-6	Τ
timer program registration9-5	Test call12-7
tone test12-11	Time entry (manual)1-5
user channel editing, deleting9-7	Transmitter power2-5
user channel registration9-6	Troubleshooting12-5
window menu [F4]8-9	Tuning2-3
Neutral craft call	U
receiving5-25	USER CH menu2-10
sending5-23	User channels
P	deleting2-12
Polling call	registering2-10
receiving5-31	
sending5-28	V
Position call	VC
other ship requests your position5-36	Volume menu7-7
requesting other ship's position5-34	
. 54556119 51101 5111p 5 position	



FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-Cho, Nishinomiya City, 662-8580, Hyogo, Japan Tel: +81 798-65-2111 Fax: +81 798-65-4200

Pub NO. DOC-836

Declaration of conformity



We

FURUNO ELECTRIC CO., LTD.

(Manufacturer)

9-52 Ashihara-Cho, Nishinomiya City, 662-8580, Hyogo, Japan

(Address)

hereby declare under our sole responsibility that the product

MF/HF SSB Radiotelephone Type FS-1570 consisting of Control unit FS-2570C, Transceiver unit FS-1570T, Handset/Bracket HS-2001/HCS701K-B20, Antenna coupler AT-1560-15, Incoming call indicator IC-303-DSC, Telex distress alert button IC-302-DSC, NBDP-controller monochrome display IB-581, NBDP-controller color display IB-582/IB-583, Printer PP-510, Printer switch box IF-8500, Distress message controller DMC-5, 2.6 m active whip antenna for WKR FAX-5, External loudspeaker SEM-21Q and AC power supply PR-300/PR-850A

(Model names, type numbers)

to which this declaration relates conforms to the following standard(s) or normative document(s)

Standards

IMO Resolutions MSC,36(63), A.694(17) IMO Resolutions MSC.68(68), A.806(19)

IMO MSC Circular MSC/Circ.862

Test standards

ETS 300 338: 1995-11, ETS 300 373: 1995-08,

ETS 300 067 A1: 1998-11

EN 60945: 1997-01 (IEC 60945 Ed.03: 1996-11)

EN 61162-1: 2000-07

ITU-R Recommendations M.1173, M.493-10, M.541-8, M.476-5, M491-1. M.492-6, M625-3

(title and/or number and date of issue of the standard(s) or other normative document(s))

For assessment, see

- EC type-examination (Module B) certificate Nº: 02212010/AA/02, of 2 August 2005 issued by Telefication, The Netherlands
- Product Quality System (Module D) certificate No. P 112 of 20 May 2005 issued by Telefication, The Netherlands
- Test report 98752230, 98752232 and 98752234 of 17 June 2002 issued by Telefication, The Netherlands
- Test reports FLI 12-02-019 of 20 May 2002 and FLI 12-02-036 of 30 August 2002 issued by Furuno Labotech International Co., Ltd.

This declaration is issued according to the provisions of European Council Directive 96/98/EC on marine equipment as amended by Commission Directive 2002/75/EC.

On behalf of Furuno Electric Co., Ltd.

Hiroaki Komatsu Manager,

International Rules and Regulations

(Place and date of issue)

September 1, 2005

Nishinomiya City, Japan

(name and signature or equivalent marking of authorized person)



FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-Cho, Nishinomiya City, 662-8580, Hyogo, Japan Tel: +81 798-65-2111 Fax: +81 798-65-4200

Pub NO, DOC-837

Declaration of conformity

We

FURUNO ELECTRIC CO., LTD.

(Manufacturer)

9-52 Ashihara-Cho, Nishinomiya City, 662-8580, Hyogo, Japan

(Address)

hereby declare under our sole responsibility that the product

MF/HF SSB Radiotelephone Type FS-2570 consisting of Control unit FS-2570C, Transceiver unit FS-2570T, Handset/Bracket HS-2001/HCS701K-B20, Antenna coupler AT-1560-25, Incoming call indicator IC-303-DSC, Telex distress alert button IC-302-DSC, NBDP-controller monochrome display IB-581, NBDP-controller color display IB-582/583, Printer PP-510, Printer switch box IF-8500, Distress message controller DMC-5, 2.6 mactive whip antenna for WKR FAX-5, External loudspeaker SEM-21Q and AC power supply PR-PR-850A

(Model names, type numbers)

to which this declaration relates conforms to the following standard(s) or normative document(s)

Standards

IMO Resolutions MSC.36(63), A.694(17) IMO Resolutions MSC.68(68), A.806(19) IMO MSC Circular MSC/Circ.862

Test standards

ETS 300 338: 1995-11, ETS 300 373: 1995-08.

ETS 300 067 A1: 1998-11

EN 60945: 1997-01 (IEC 60945 Ed.03: 1996-11)

EN 61162-1: 2000-07

ITU-R Recommendations M.1173, M.493-10, M.541-8, M.476-5, M491-1. M.492-6, M625-3

(title and/or number and date of issue of the standard(s) or other normative document(s))

For assessment, see

- EC type-examination (Module B) certificate N°: 02212010/AA/02 of 2 August 2005 issued by Telefication, The Netherlands
- Product Quality System (Module D) certificate No. P 112 of 20 May 2005 issued by Telefication, The Netherlands
- Test report 98752231, 98752233 and 98752235 of 17 June 2002 issued by Telefication. The Netherlands
- Test reports FLi 12-02-019 of 20 May 2002 and FLI 12-02-036 of 30 August 2002 issued by Furuno Labotech International Co., Ltd.

This declaration is issued according to the provisions of European Council Directive 96/98/EC on marine equipment as amended by Commission Directive 2002/75/EC.

On behalf of Furuno Electric Co., Ltd.

Hiroaki Komatsu Manager,

International Rules and Regulations

(name and signature or equivalent marking of authorized person)

Nishinomiya City, Japan

September 1, 2005

(Place and date of issue)